



# show asp drop 명령 사용법

최종 업데이트: 2019년 3월 13일

가속화된 보안 경로에 의해 삭제된 패킷 또는 연결을 디버깅하려면 특권 실행 모드에서 **show asp drop** 명령을 사용합니다.

**show asp drop [flow [flow\_drop\_reason] | frame [frame\_drop\_reason]]**

## 구문 설명

<b>flow</b> [flow_drop_reason]	(선택 사항) 삭제된 플로우(연결)를 표시합니다. <i>flow_drop_reason</i> 인수를 사용하여 특정 이유를 지정할 수 있습니다. <b>?</b> 를 사용하여 가능한 플로우 삭제 이유의 목록을 확인합니다.
<b>frame</b> [frame_drop_reason]	(선택 사항) 삭제된 패킷을 표시합니다. <i>frame_drop_reason</i> 인수를 사용하여 특정 이유를 지정할 수 있습니다. <b>?</b> 를 사용하여 가능한 프레임 삭제 이유의 목록을 확인합니다.

## 기본값

기본 동작 또는 값은 없습니다.

## 명령 모드

다음 표에는 명령을 입력할 수 있는 모드가 나와 있습니다.

명령 모드	방화벽 모드		보안 상황		
	라우팅됨	투명	단일	다중	
				상황	시스템
특권 실행	■ 예	■ 예	■ 예	■ 예	■ 예

## 명령 기록

Release	수정 사항
7.0(1)	이 명령이 추가되었습니다.
7.0(8)/7.2(4)/8.0(4)	출력에는 카운터가 마지막으로 지워진 시간을 나타내는 타임스탬프가 포함됩니다( <b>clear asp drop</b> 명령 참조). 또한 설명 옆에 삭제 이유 키워드도 표시되므로 관련 키워드와 함께 <b>capture asp-drop</b> 명령을 쉽게 사용할 수 있습니다.

# 사용 지침

**show asp drop** 명령은 가속화된 보안 경로에 의해 삭제된 패킷 또는 연결을 표시하여 트러블슈팅을 도와줍니다. 가속화된 보안 경로에 대한 자세한 정보는 일반적인 작업 컨피그레이션 가이드의 내용을 참조하십시오. 이 정보는 디버깅용으로만 사용되며 정보 출력은 변경될 수 있습니다. 이 명령을 사용하여 시스템을 디버깅하는 과정에서 지원을 받으려면 Cisco TAC에 문의하십시오.

다음 섹션에는 각 삭제 이유 이름 및 설명과 권장 사항이 나와 있습니다.

- [프레임 삭제 이유, 2페이지](#)
- [플로우 삭제 이유, 105페이지](#)

## 프레임 삭제 이유

```

-----
Name: natt-keepalive
NAT-T keepalive message:
    This counter will increment when the appliance receives an IPsec NAT-T keepalive
message. NAT-T keepalive messages are sent from the IPsec peer to the appliance to keep
NAT/PAT flow information current in network devices between the NAT-T IPsec peer and the
appliance.

Recommendation:
    If you have configured IPsec NAT-T on your appliance, this indication is normal and
doesn't indicate a problem. If NAT-T is not configured on your appliance, analyze your
network traffic to determine the source of the NAT-T traffic.

Syslogs:
    None

-----
Name: ipsecudp-keepalive
IPSEC/UDP keepalive message:
    This counter will increment when the appliance receives an IPsec over UDP keepalive
message. IPsec over UDP keepalive messages are sent from the IPsec peer to the appliance to
keep NAT/PAT flow information current in network devices between the IPsec over UDP peer
and the appliance. Note - These are not industry standard NAT-T keepalive messages which
are also carried over UDP and addressed to UDP port 4500.

Recommendation:
    If you have configured IPsec over UDP on your appliance, this indication is normal and
doesn't indicate a problem. If IPsec over UDP is not configured on your appliance, analyze
your network traffic to determine the source of the IPsec over UDP traffic.

Syslogs:
    None

-----
Name: bad-ipsec-prot
IPsec not AH or ESP:
    This counter will increment when the appliance receives a packet on an IPsec connection
which is not an AH or ESP protocol. This is not a normal condition.

```

## Recommendation:

If you are receiving many IPsec not AH or ESP indications on your appliance, analyze your network traffic to determine the source of the traffic.

## Syslogs:

402115

-----  
Name: ipsec-ipv6

IPsec via IPV6:

This counter will increment when the appliance receives an IPsec ESP packet, IPsec NAT-T ESP packet or an IPsec over UDP ESP packet encapsulated in an IP version 6 header. The appliance does not currently support any IPsec sessions encapsulated in IP version 6.

## Recommendation:

None

## Syslogs:

None

-----  
Name: bad-ipsec-natt

BAD IPsec NATT packet:

This counter will increment when the appliance receives a packet on an IPsec connection which has negotiated NAT-T but the packet is not addressed to the NAT-T UDP destination port of 4500 or had an invalid payload length.

## Recommendation:

Analyze your network traffic to determine the source of the NAT-T traffic.

## Syslogs:

None

-----  
Name: bad-ipsec-udp

BAD IPsec UDP packet:

This counter will increment when the appliance receives a packet on an IPsec connection which has negotiated IPsec over UDP but the packet has an invalid payload length.

## Recommendation:

Analyze your network traffic to determine the source of the NAT-T traffic.

## Syslogs:

None

-----  
Name: ipsec-need-sa

IPsec SA not negotiated yet:

This counter will increment when the appliance receives a packet which requires encryption but has no established IPsec security association. This is generally a normal condition for LAN-to-LAN IPsec configurations. This indication will cause the appliance to begin ISAKMP negotiations with the destination peer.

## Recommendation:

If you have configured IPSec LAN-to-LAN on your appliance, this indication is normal and doesn't indicate a problem. However, if this counter increments rapidly it may indicate a crypto configuration error or network error preventing the ISAKMP negotiation from completing. Verify that you can communicate with the destination peer and verify your crypto configuration via the 'show running-config' command.

## Syslogs:

None

-----  
Name: ipsec-spoof

IPSec spoof detected:

This counter will increment when the appliance receives a packet which should have been encrypted but was not. The packet matched the inner header security policy check of a configured and established IPSec connection on the appliance but was received unencrypted. This is a security issue.

## Recommendation:

Analyze your network traffic to determine the source of the spoofed IPSec traffic.

## Syslogs:

402117

-----  
Name: ipsec-clearpkt-notun

IPSec Clear Pkt w/no tunnel:

This counter will increment when the appliance receives a packet which should have been encrypted but was not. The packet matched the inner header security policy check of a configured and established IPSec connection on the appliance but was received unencrypted. This is a security issue.

## Recommendation:

Analyze your network traffic to determine the source of the spoofed IPSec traffic.

## Syslogs:

402117

-----  
Name: ipsec-tun-down

IPSec tunnel is down:

This counter will increment when the appliance receives a packet associated with an IPSec connection which is in the process of being deleted.

## Recommendation:

This is a normal condition when the IPSec tunnel is torn down for any reason.

## Syslogs:

None

-----  
Name: invalid-encryption-packet

Invalid encryption packet received:

This counter will increment when the appliance receives a packet associated with an IPSec connection on a flow that does not have encrypt flags on.

Recommendation:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a traffic disruption, then this may be caused by a misconfiguration or a software defect.

Syslogs:

None

-----  
Name: mp-svc-delete-in-progress

SVC Module received data while connection was being deleted:

This counter will increment when the security appliance receives a packet associated with an SVC connection that is in the process of being deleted.

Recommendation:

This is a normal condition when the SVC connection is torn down for any reason. If this error occurs repeatedly or in large numbers, it could indicate that clients are having network connectivity issues.

Syslogs:

None.

-----  
Name: mp-svc-bad-framing

SVC Module received badly framed data:

This counter will increment when the security appliance receives a packet from an SVC or the control software that it is unable to decode.

Recommendation:

This indicates that a software error should be reported to the Cisco TAC. The SVC or security appliance could be at fault.

Syslogs:

722037 (Only for SVC received data).

-----  
Name: mp-svc-bad-length

SVC Module received bad data length:

This counter will increment when the security appliance receives a packet from an SVC or the control software where the calculated and specified lengths do not match.

Recommendation:

This indicates that a software error should be reported to the Cisco TAC. The SVC or security appliance could be at fault.

Syslogs:

722037 (Only for SVC received data).

-----  
Name: mp-svc-unknown-type

SVC Module received unknown data frame:

This counter will increment when the security appliance receives a packet from an SVC where the data type is unknown.

## Recommendation:

Validate that the SVC being used by the client is compatible with the version of security appliance software.

## Syslogs:

None.

-----  
Name: mp-svc-addr-renew-response

SVC Module received address renew response data frame:

This counter will increment when the security appliance receives an Address Renew Response message from an SVC. The SVC should not be sending this message.

## Recommendation:

This indicates that an SVC software error should be reported to the Cisco TAC.

## Syslogs:

None.

-----  
Name: mp-svc-no-prepend

SVC Module does not have enough space to insert header:

This counter will increment when there is not enough space before the packet data to prepend a MAC header in order to put the packet onto the network.

## Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

## Syslogs:

None.

-----  
Name: mp-svc-no-channel

SVC Module does not have a channel for reinjection:

This counter will increment when the interface that the encrypted data was received upon cannot be found in order to inject the decrypted data.

## Recommendation:

If an interface is shut down during a connection, this could happen; re-enable/check the interface. Otherwise, this indicates that a software error should be reported to the Cisco TAC.

## Syslogs:

None.

-----  
Name: mp-svc-no-session

SVC Module does not have a session:

This counter will increment when the security appliance cannot determine the SVC session that this data should be transmitted over.

## Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

Syslogs:  
None.

-----  
Name: mp-send-cp-fail  
SVC Module send CP error failed:  
This counter will increment when the security appliance cannot send the error information to CP.

Recommendation:  
This indicates that a software error should be reported to the Cisco TAC.

Syslogs:  
None.

-----  
Name: mp-svc-session-lock-failure  
SVC Module failed to acquire the session lock:  
This counter will increment when the security appliance cannot grab the lock for the SVC session that this data should be transmitted over.

Recommendation:  
This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

Syslogs:  
None.

-----  
Name: mp-svc-decompress-error  
SVC Module decompression error:  
This counter will increment when the security appliance encounters an error during decompression of data from an SVC.

Recommendation:  
This indicates that a software error should be reported to the Cisco TAC. The SVC or security appliance could be at fault.

Syslogs:  
722037.

-----  
Name: mp-svc-compress-error  
SVC Module compression error:  
This counter will increment when the security appliance encounters an error during compression of data to an SVC.

Recommendation:  
This indicates that a software error should be reported to the Cisco TAC. The SVC or security appliance could be at fault.

Syslogs:  
722037.

```
-----  
Name: mp-svc-no-mac  
SVC Module unable to find L2 data for frame:  
    This counter will increment when the security appliance is unable to find an L2 MAC  
header for data received from an SVC.
```

```
Recommendation:  
    This indicates that a software error should be reported to the Cisco TAC.
```

```
Syslogs:  
    None.
```

```
-----  
Name: mp-svc-invalid-mac  
SVC Module found invalid L2 data in the frame:  
    This counter will increment when the security appliance is finds an invalid L2 MAC  
header attached to data received from an SVC.
```

```
Recommendation:  
    This indicates that a software error should be reported to the Cisco TAC.
```

```
Syslogs:  
    None.
```

```
-----  
Name: mp-svc-invalid-mac-len  
SVC Module found invalid L2 data length in the frame:  
    This counter will increment when the security appliance is finds an invalid L2 MAC  
length attached to data received from an SVC.
```

```
Recommendation:  
    This indicates that a software error should be reported to the Cisco TAC.
```

```
Syslogs:  
    None.
```

```
-----  
Name: mp-svc-flow-control  
SVC Session is in flow control:  
    This counter will increment when the security appliance needs to drop data because an  
SVC is temporarily not accepting any more data.
```

```
Recommendation:  
    This indicates that the client is unable to accept more data. The client should reduce  
the amount of traffic it is attempting to receive.
```

```
Syslogs:  
    None.
```

```
-----  
Name: mp-svc-no-fragment  
SVC Module unable to fragment packet:  
    This counter is incremented when a packet to be sent to the SVC is not permitted to be  
fragmented or when there are not enough data buffers to fragment the packet.
```



## Recommendation:

Increase the MTU of the SVC to reduce fragmentation. Avoid using applications that do not permit fragmentation. Decrease the load on the device to increase available data buffers.

## Syslogs:

None.

-----  
Name: mp-svc-bad-compress

## SVC Module unable to compress a packet:

This counter is incremented when a packet to be sent to an AnyConnect client is not able to be compressed.

## Recommendation:

Disable all compression for the AnyConnect client.

## Syslogs:

None.

-----  
Name: mp-svc-bad-decompress

## SVC Module unable to decompress a packet:

This counter is incremented when a packet received from an AnyConnect client is not able to be decompressed.

## Recommendation:

Disable all compression for the AnyConnect client.

## Syslogs:

None.

-----  
Name: vpn-handle-error

## VPN Handle Error:

This counter is incremented when the appliances is unable to create a VPN handle because the VPN handle already exists.

## Recommendation:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of vpn-based applications, then this may be caused by a software defect. Contact the Cisco TAC to investigate the issue further.

## Syslogs:

None.

-----  
Name: ipsec-lock-error

## IPSec locking error:

This counter is incremented when an IPSec operation is attempted but fails due to an internal locking error.

## Recommendation:

This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

## Syslogs:

None.

-----  
Name: vpn-handle-mismatch

## VPN Handle Mismatch:

This counter is incremented when the appliance wants to forward a block and the flow referred to by the VPN Handle is different than the flow associated with the block.

## Recommendation:

This is not a normal occurrence. Please perform a "show console-output" and forward that output to CISCO TAC for further analysis

## Syslogs:

None.

-----  
Name: vpn-reclassify-failed

## VPN Reclassify Failed:

This counter is incremented when a packet for a VPN flow is dropped due to the flow failing to be reclassified after a VPN state change.

## Recommendation:

This counter is incremented when a packet for a VPN flow arrives that requires reclassification due to VPN CLI or Tunnel state changes. If the flow no longer matches the existing policies, then the flow is freed and the packet dropped.

## Syslogs:

No new syslogs accompany this event.

-----  
Name: vpn-lock-error

## IPSec locking error:

This counter is incremented when VPN flow cannot be created due to an internal locking error.

## Recommendation:

This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

## Syslogs:

None.

-----  
Name: vpn-context-expired

## Expired VPN context:

This counter will increment when the security appliance receives a packet that requires encryption or decryption, and the ASP VPN context required to perform the operation is no longer valid.

## Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

## Syslogs:

None

-----  
Name: vpn-overlap-conflict

VPN Network Overlap Conflict:

When a packet is decrypted the inner packet is examined against the crypto map configuration. If the packet matches a different crypto map entry than the one it was received on it will be dropped and this counter will increment. A common cause for this is two crypto map entries containing similar/overlapping address spaces.

## Recommendation:

Check your VPN configuration for overlapping networks. Verify the order of your crypto maps and use of 'deny' rules in ACLs.

## Syslogs:

None

-----  
Name: ipsec-selector-failure

IPSec VPN inner policy selector mismatch detected:

This counter is incremented when an IPSec packet is received with an inner IP header that does not match the configured policy for the tunnel.

## Recommendation:

Verify that the crypto ACLs for the tunnel are correct and that all acceptable packets are included in the tunnel identity. Verify that the box is not under attack if this message is repeatedly seen.

## Syslogs:

402116

-----  
Name: tunnel-pending

Tunnel being brought up or torn down:

This counter will increment when the appliance receives a packet matching an entry in the security policy database (i.e. crypto map) but the security association is in the process of being negotiated; its not complete yet.

This counter will also increment when the appliance receives a packet matching an entry in the security policy database but the security association has been or is in the process of being deleted. The difference between this indication and the 'Tunnel has been torn down' indication is that the 'Tunnel has been torn down' indication is for established flows.

## Recommendation:

This is a normal condition when the IPSec tunnel is in the process of being negotiated or deleted.

## Syslogs:

None

-----  
Name: punt-rate-limit  
Punt rate limit exceeded:  
    This counter will increment when the appliance attempts to forward a layer-2 packet to a rate-limited control point service routine and the rate limit (per/second) is now being exceeded. Currently, the only layer-2 packets destined for a control point service routine which are rate limited are ARP packets. The ARP packet rate limit is 500 ARPs per second per interface.  
  
Recommendation:  
    Analyze your network traffic to determine the reason behind the high rate of ARP packets.  
  
Syslogs:  
    322002, 322003

-----  
Name: punt-no-mem  
Punt no memory:  
    This counter is incremented and the packet is dropped when there is no memory to create data structure for punting a packet to Control Point.  
Recommendation:  
    No action needs to be taken if this condition is transient. If this condition persists due to low memory, then system upgrade might be necessary.  
  
Syslogs:  
    None

-----  
Name: punt-queue-limit  
Punt queue limit exceeded:  
    This counter is incremented and the packet is dropped when punt queue limit is exceeded, an indication that a bottle-neck is forming at Control Point.  
Recommendation:  
    No action needs to be taken. This is a design limitation.  
  
Syslogs:  
    None

-----  
Name: flow-being-freed  
Flow is being freed:  
    This counter is incremented when the flow is being freed and all packets queued for inspection are dropped.  
Recommendation:  
    No action needs to be taken.  
  
Syslogs:  
    None

-----  
Name: invalid-encap  
Invalid Encapsulation:

This counter is incremented when the security appliance receives a frame belonging to an unsupported link-level protocol or if the L3type specified in the frame is not supported by the appliance. The packet is dropped.

Recommendation:

Verify that directly connected hosts have proper link-level protocol settings.

Syslogs:

None.

-----  
Name: invalid-ip-header

Invalid IP header:

This counter is incremented and the packet is dropped when the appliance receives an IP packet whose computed checksum of the IP header does not match the recorded checksum in the header.

Recommendation:

The packet corruption may be caused by a bad cable or noise on the line. It may also be that a peer is sending corrupted packets and an attack is in progress. Please use the packet capture feature to learn more about the origin of the packet.

Syslogs:

None

-----  
Name: unsupported-ip-version

Unsupported IP version:

This counter is incremented when the security appliance receives an IP packet that has an unsupported version in version field of IP header. Specifically, if the packet does not belong to version 4 or version 6. The packet is dropped.

Recommendation:

Verify that other devices on connected network are configured to send IP packets belonging to versions 4 or 6 only.

Syslogs:

None.

-----  
Name: ttl-exceeded

ttl exceeded:

This counter is incremented when the security appliance receives an IP packet whose value of ttl(time to live) has exceeded the allowed limit. Specifically if the packet has ttl value of 1, when set connection decrement-ttl command is configured, or less than 1, the packet is dropped.

Syslogs:

None.

-----  
Name: hop-limit-exceeded

hop-limit exceeded:

This counter is incremented when the security appliance receives an IPv6 packet whose value of hop-limit has exceeded the allowed limit. Specifically if the packet has hop-limit less than 1, the packet is dropped.

Syslogs:  
None.

-----  
Name: invalid-ip-length  
Invalid IP Length:

This counter is incremented when the security appliance receives an IPv4 or IPv6 packet in which the header length or total length fields in IP header are not valid or do not conform to the received packet length.

Recommendation:  
None.

Syslogs:  
None.

-----  
Name: invalid-ethertype  
Invalid Ethertype:

This counter is incremented when the fragmentation module on the security appliance receives or tries to send a fragmented packet that does not belong IP version 4 or version 6. The packet is dropped.

Recommendation:  
Verify mtu of device and other devices on connected network to determine why the device is processing such fragments.

Syslogs:  
None.

-----  
Name: invalid-tcp-hdr-length  
Invalid TCP Length:

This counter is incremented when the security appliance receives a TCP packet whose size is smaller than minimum-allowed header length or does not conform to the received packet length.

Recommendation:  
The invalid packet could be a bogus packet being sent by an attacker. Investigate the traffic from source in the following syslog.

Syslogs:  
500003.

-----  
Name: invalid-udp-length  
Invalid UDP Length:

This counter is incremented when the security appliance receives a UDP packet whose size as calculated from the fields in header is different from the measured size of packet as received from the network.

## Recommendation:

The invalid packet could be a bogus packet being sent by an attacker.

## Syslogs:

None.

-----  
Name: invalid-sctp-length

## Invalid Sctp Length:

This counter is incremented when the security appliance receives a Sctp packet whose common header size is less than the required common header size (12 bytes).

## Recommendation:

The invalid packet could be a bogus packet being sent by an attacker.

## Syslog:

None.

-----  
Name: no-adjacency

## No valid adjacency:

This counter is incremented when the security appliance has tried to obtain an adjacency and could not obtain mac-address for next hop. The packet is dropped.

## Recommendation:

Configure a capture for this drop reason and check if a host with specified destination address exists on connected network or is routable from the device.

## Syslogs:

None.

-----  
Name: unexpected-packet

## Unexpected packet:

This counter is incremented when the appliance in transparent mode receives a non-IP packet, destined to its MAC address, but there is no corresponding service running on the appliance to process the packet.

## Recommendation:

Verify if the appliance is under attack. If there are no suspicious packets, or the device is not in transparent mode, this counter is most likely being incremented due to a software error. Attempt to capture the traffic that is causing the counter to increment and contact the Cisco TAC.

## Syslogs:

None

-----  
Name: no-route

## No route to host:

This counter is incremented when the security appliance tries to send a packet out of an interface and does not find a route for it in routing table.

## Recommendation:

Verify that a route exists for the destination address obtained from the generated syslog.

## Syslogs:

110001.

-----  
Name: invalid-vxlan-segment-id

Invalid VXLAN segment-id:

This counter is incremented when the security appliance decapsulates a VXLAN packet which has an invalid segment-id.

## Recommendation:

No.

## Syslogs:

778001.

-----  
Name: invalid-vxlan-segment-id-tvi

Invalid VXLAN segment-id on TVI:

This counter is incremented when the TVI interface processes a VXLAN packet which has an invalid segment-id.

## Recommendation:

No.

## Syslogs:

No.

-----  
Name: sts-lookup-failure

STS lookup failure:

This counter is incremented when the security appliance fails to lookup for the out tag for a given in tag when tag switching is enabled on the VNI interface.

## Recommendation:

Verify that an out tag exists for the in tag obtained from the generated syslog.

## Syslogs:

779001.

-----  
Name: no-valid-vni-ifc

No valid VNI interface:

This counter is incremented when the security appliance fails to identify the VNI interface by a given segment-id.

## Recommendation:

Verify that the segment-id in the syslog is configured on an interface.

## Syslogs:

778002.



```
-----  
Name: no-valid-nve-ifc  
No valid NVE interface:  
    This counter is incremented when the security appliance fails to identify the NVE  
interface for a VNI interface.  
  
Recommendation:  
    Verify that the nve is configured for all interfaces.  
  
Syslogs:  
    None.  
  
-----  
Name: invalid-peer-nve  
Invalid peer NVE:  
    This counter is incremented when the security appliance fails to get IP and MAC address  
of a peer NVE.  
  
Recommendation:  
    Verify that peer nve is configured or learned for the nve.  
  
Syslogs:  
    None.  
  
-----  
Name: vxlan-encap-error  
Fail to encap with VXLAN:  
    This counter is incremented when the security appliance fails to encapsulate a packet  
with VXLAN.  
  
Recommendation:  
    No.  
  
Syslogs:  
    None.  
  
-----  
Name: sts-nat-diff-egress  
STS locates different egress from NAT:  
    This counter is incremented when the security appliance locates different egress  
interface by STS and NAT.  
  
Recommendation:  
    Verify that the NAT configuration on interface shown in the syslog is correct.  
  
Syslogs:  
    779002.  
  
-----  
Name: invalid-vxlan-segment-id-fp  
Invalid VXLAN in-tag:  
    This counter is incremented when the security appliance decapsulates a VXLAN packet in  
FP which has an invalid segment-id.
```

Recommendation:  
No.

Syslogs:  
778003.

-----  
Name: vxlan-invalid-header  
Invalid VXLAN header format:  
This counter is incremented when the security appliance receives a UDP packet with correct VXLAN destination port number but failed to decode the VXLAN header.

Recommendation:  
No.

Syslogs:  
778004.

-----  
Name: vxlan-invalid-header-thru-traffic  
Invalid VXLAN header format for through-the-box traffic:  
This counter is incremented when the security appliance receives a through-the-box UDP packet with correct VXLAN destination port number but failed to decode the VXLAN header.

Recommendation:  
No.

Syslogs:  
778008.

-----  
Name: vxlan-invalid-udp-checksum  
Invalid VXLAN header format:  
This counter is incremented when the security appliance receives a VXLAN packet with incorrect checksum value in UDP header.

Recommendation:  
No.

Syslogs:  
778006.

-----  
Name: vxlan-invalid-nve-peer  
VXLAN packet from an invalid NVE peer:  
This counter is incremented when the security appliance receives a VXLAN packet from an NVE peer that is not configured.

Recommendation:  
No.

Syslogs:  
778007.

```
-----
Name: no-route-to-peer-nve
No route to peer NVE:
    This counter is incremented when the security appliance fails to locate next hop to peer
    NVE.

Recommendation:
    Verify peer NVE is reachable via source-interface.

Syslogs:
    None.

-----
Name: vxlan-invalid-vni-mcast-ip
Invalid Multicast IP on VNI interface:
    This counter is incremented when the security appliance fails to get the multicast group
    IP from the VNI interface.

Recommendation:
    Verify that in the absence of a configured peer NVE, the VNI interface has a valid
    multicast group IP configured on it.

Syslogs:
    None.

-----
Name: vxlan-missing-peer-vtep-ip
Peer VTEP IP not found:
    This counter is incremented when the security appliance fails to find the peer VTEP IP
    for an inner destination IP for VXLAN encapsulation.

Recommendation:
    Verify that in show arp vtep-mapping/show mac-address-table vtep-mapping/show ipv6
    neighbor vtep-mapping, the VTEP IP is present for the desired remote inner host.

Syslogs:
    None.

-----
Name: rpf-violated
Reverse-path verify failed:
    This counter is incremented when ip-verify is configured on an interface and the
    security appliance receives a packet for which the route lookup of source-ip did not yield
    the same interface as the one on which the packet was received.

Recommendation:
    Trace the source of traffic based on source-ip printed in syslog below and investigate
    why it is sending spoofed traffic.

Syslogs:
    106021.

-----
Name: acl-drop
Flow is denied by configured rule:
```

This counter is incremented when a drop rule is hit by the packet and gets dropped. This rule could be a default rule created when the box comes up, when various features are turned on or off, when an acl is applied to interface or any other feature etc. Apart from default rule drops, a packet could be dropped because of:

- 1) ACL configured on an interface
- 2) ACL configured for AAA and AAA denied the user
- 3) Thru-box traffic arriving at management-only ifc
- 4) Unencrypted traffic arriving on a ipsec-enabled interface

Recommendation:

Note if one of ACLs listed below are fired.

Syslogs:

106023, 106100, 106004

-----  
Name: no-same-security-traffic

No same-security-traffic configured:

This counter is incremented when the decrypt and encrypt tunnel is owned by the same interface and same-security-traffic is not configured.

Recommendation:

Configure "same-security-traffic permit intra-interface".

Syslogs:

None.

-----  
Name: unable-to-create-flow

Flow denied due to resource limitation:

This counter is incremented and the packet is dropped when flow creation fails due to a system resource limitation. The resource limit may be either:

- 1) system memory
- 2) packet block extension memory
- 3) system connection limit

Causes 1 and 2 will occur simultaneously with flow drop reason "No memory to complete flow".

Recommendation:

- Observe if free system memory is low.
- Observe if flow drop reason "No memory to complete flow" occurs.
- Observe if connection count reaches the system connection limit with the command "show resource usage".

Syslogs:

None

-----  
Name: unable-to-add-flow

Flow hash full:

This counter is incremented when a newly created flow is inserted into flow hash table and the insertion failed because the hash table was full. The flow and the packet are dropped. This is different from counter that gets incremented when maximum connection limit is reached.

## Recommendation:

This message signifies lack of resources on the device to support an operation that should have been successful. Please check if the connections in the 'show conn' output have exceeded their configured idle timeout values. If so, contact the Cisco Technical Assistance Center (TAC).

## Syslogs:

None.

-----  
Name: np-sp-invalid-spi

## Invalid SPI:

This counter will increment when the appliance receives an IPSec ESP packet addressed to the appliance which specifies a SPI (security parameter index) not currently known by the appliance.

## Recommendation:

Occasional invalid SPI indications are common, especially during rekey processing. Many invalid SPI indications may suggest a problem or DoS attack. If you are experiencing a high rate of invalid SPI indications, analyze your network traffic to determine the source of the ESP traffic.

## Syslogs:

402114

-----  
Name: unsupported-ipv6-hdr

## Unsupported IPv6 header:

This counter is incremented and the packet is dropped if an IPv6 packet is received with an unsupported IPv6 extension header. The supported IPv6 extension headers are: TCP, UDP, ICMPv6, ESP, AH, Hop Options, Destination Options, and Fragment. The IPv6 routing extension header is not supported, and any extension header not listed above is not supported. IPv6 ESP and AH headers are supported only if the packet is through-the-box. To-the-box IPv6 ESP and AH packets are not supported and will be dropped.

## Recommendation:

This error may be due to a misconfigured host. If this error occurs repeatedly or in large numbers, it could also indicate spurious or malicious activity such as an attempted DoS attack.

## Syslogs:

None.

-----  
Name: tcp-not-syn

## First TCP packet not SYN:

Received a non SYN packet as the first packet of a non intercepted and non nailed connection.

## Recommendation:

Under normal conditions, this may be seen when the appliance has already closed a connection, and the client or server still believe the connection is open, and continue to transmit data. Some examples where this may occur is just after a 'clear local-host' or 'clear xlate' is issued. Also, if connections have not been recently removed, and the counter is incrementing rapidly, the appliance may be under attack. Capture a sniffer trace to help isolate the cause.

Syslogs:  
6106015

-----  
Name: bad-tcp-cksum

Bad TCP checksum:

This counter is incremented and the packet is dropped when the appliance receives a TCP packet whose computed TCP checksum does not match the recorded checksum in TCP header.

Recommendation:

The packet corruption may be caused by a bad cable or noise on the line. It may also be that a TCP endpoint is sending corrupted packets and an attack is in progress. Please use the packet capture feature to learn more about the origin of the packet. To allow packets with incorrect TCP checksum disable checksum-verification feature under tcp-map.

Syslogs:  
None

-----  
Name: bad-tcp-flags

Bad TCP flags:

This counter is incremented and the packet is dropped when the appliance receives a TCP packet with invalid TCP flags in TCP header. Example a packet with SYN and FIN TCP flags set will be dropped.

Recommendations:

The packet corruption may be caused by a bad cable or noise on the line. It may also be that a TCP endpoint is sending corrupted packets and an attack is in progress. Please use the packet capture feature to learn more about the origin of the packet.

Syslogs:  
None

-----  
Name: tcp-reserved-set

TCP reserved flags set:

This counter is incremented and the packet is dropped when the appliance receives a TCP packet with reserved flags set in TCP header.

Recommendations:

The packet corruption may be caused by a bad cable or noise on the line. It may also be that a TCP endpoint is sending corrupted packets and an attack is in progress. Please use the packet capture feature to learn more about the origin of the packet. To allow such TCP packets or clear reserved flags and then pass the packet use reserved-bits configuration under tcp-map.

Syslogs:  
None

-----  
Name: tcp-bad-option-list

TCP option list invalid:

This counter is incremented and the packet is dropped when the appliance receives a TCP packet with a non-standard TCP header option.

## Recommendations:

To allow such TCP packets or clear non-standard TCP header options and then allow the packet, use tcp-options configuration under tcp-map.

## Syslogs:

None

-----  
Name: tcp-mss-exceeded

TCP data exceeded MSS:

This counter is incremented and the packet is dropped when the appliance receives a TCP packet with data length greater than the MSS advertized by peer TCP endpoint.

## Recommendations:

To allow such TCP packets use exceed-mss configuration under tcp-map

## Syslogs:

4419001

-----  
Name: tcp-synack-data

TCP SYNACK with data:

This counter is incremented and the packet is dropped when the appliance receives a TCP SYN-ACK packet with data.

## Recommendations:

The packet corruption may be caused by a bad cable or noise on the line. It may also be that a TCP endpoint is sending corrupted packets and an attack is in progress. Please use the packet capture feature to learn more about the origin of the packet.

## Syslogs:

None

-----  
Name: tcp-syn-data

TCP SYN with data:

This counter is incremented and the packet is dropped when the appliance receives a TCP SYN packet with data.

## Recommendations:

To allow such TCP packets use syn-data configuration under tcp-map.

## Syslogs:

None

-----  
Name: tcp-dual-open

TCP Dual open denied:

This counter is incremented and the packet is dropped when the appliance receives a TCP SYN packet from the server, when an embryonic TCP connection is already open.

## Recommendations:

None

Syslogs:  
None

-----  
Name: tcp-data-past-fin  
TCP data send after FIN:  
This counter is incremented and the packet is dropped when the appliance receives new TCP data packet from an endpoint which had sent a FIN to close the connection.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcp-3whs-failed  
TCP failed 3 way handshake:  
This counter is incremented and the packet is dropped when appliance receives an invalid TCP packet during three-way-handshake. Example SYN-ACK from client will be dropped for this reason.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcp-rstfin-ooo  
TCP RST/FIN out of order:  
This counter is incremented and the packet is dropped when appliance receives a RST or a FIN packet with incorrect TCP sequence number.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcp-seq-syn-diff  
TCP SEQ in SYN/SYNACK invalid:  
This counter is incremented and the packet is dropped when appliance receives a SYN or SYN-ACK packet during three-way-handshake with incorrect TCP sequence number.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcp-ack-syn-diff



TCP ACK in SYNACK invalid:

This counter is incremented and the packet is dropped when appliance receives a SYN-ACK packet during three-way-handshake with incorrect TCP acknowledgement number.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-syn-ooo

TCP SYN on established conn:

This counter is incremented and the packet is dropped when appliance receives a TCP SYN packet on an established TCP connection.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-synack-ooo

TCP SYNACK on established conn:

This counter is incremented and the packet is dropped when appliance receives a TCP SYN-ACK packet on an established TCP connection.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-seq-past-win

TCP packet SEQ past window:

This counter is incremented and the packet is dropped when appliance receives a TCP data packet with sequence number beyond the window allowed by the peer TCP endpoint.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-invalid-ack

TCP invalid ACK:

This counter is incremented and the packet is dropped when appliance receives a TCP packet with acknowledgement number greater than data sent by peer TCP endpoint.

Recommendations:

None

Syslogs:  
None

-----  
Name: tcp-fo-drop  
TCP replicated flow pak drop:  
This counter is incremented and the packet is dropped when appliance receives a TCP packet with control flag like SYN, FIN or RST on an established connection just after the appliance has taken over as active unit.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcp-discarded-ooo  
TCP ACK in 3 way handshake invalid:  
This counter is incremented and the packet is dropped when appliance receives a TCP ACK packet from client during three-way-handshake and the sequence number is not next expected sequence number.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcp-buffer-full  
TCP Out-of-Order packet buffer full:  
This counter is incremented and the packet is dropped when appliance receives an out-of-order TCP packet on a connection and there is no buffer space to store this packet. Typically TCP packets are put into order on connections that are inspected by the appliance or when packets are sent to SSM for inspection. There is a default queue size and when packets in excess of this default queue size are received they will be dropped.

Recommendations:  
On ASA platforms the queue size could be increased using queue-limit configuration under tcp-map.

Syslogs:  
None

-----  
Name: tcp-global-buffer-full  
TCP global Out-of-Order packet buffer full:  
This counter is incremented and the packet is dropped when the security appliance receives an out-of-order TCP packet on a connection and there are no more global buffers available. Typically TCP packets are put into order on connections that are inspected by the security appliance or when packets are sent to the SSM for inspection. When the global Out-of-Order buffer queue is full, the packet will be dropped and this counter will increment.

## Recommendations:

This is a temporary condition when all global buffers are used. If this counter is constantly incrementing, then please check your network for large amounts of Out-of-Order traffic, which could be caused by traffic of the same flow taking different routes through the network.

## Syslogs:

None

-----  
Name: tcp-buffer-timeout

## TCP Out-of-Order packet buffer timeout:

This counter is incremented and the packet is dropped when a queued out of order TCP packet has been held in the buffer for too long. Typically, TCP packets are put into order on connections that are inspected by the security appliance or when packets are sent to the SSM for inspection. When the next expected TCP packet does not arrive within a certain period, the queued out of order packet is dropped.

## Recommendations:

The next expected TCP packet may not arrive due to congestion in the network which is normal in a busy network. The TCP retransmission mechanism in the end host will retransmit the packet and the session will continue.

## Syslogs:

None

-----  
Name: tcp-rst-syn-in-win

## TCP RST/SYN in window:

This counter is incremented and the packet is dropped when appliance receives a TCP SYN or TCP RST packet on an established connection with sequence number within window but not next expected sequence number.

## Recommendations:

None

## Syslogs:

None

-----  
Name: tcp-acked

## TCP DUP and has been ACKed:

This counter is incremented and the packet is dropped when appliance receives a retransmitted data packet and the data has been acknowledged by the peer TCP endpoint.

## Recommendations:

None

## Syslogs:

None

-----  
Name: tcp-dup-in-queue

## TCP dup of packet in Out-of-Order queue:

This counter is incremented and the packet is dropped when appliance receives a retransmitted data packet that is already in our out of order packet queue.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-paws-fail

TCP packet failed PAWS test:

This counter is incremented and the packet is dropped when TCP packet with timestamp header option fails the PAWS (Protect Against Wrapped Sequences) test.

Recommendations:

To allow such connections to proceed, use tcp-options configuration under tcp-map to clear timestamp option.

Syslogs:

None

-----  
Name: tcp-conn-limit

TCP connection limit reached:

This reason is given for dropping a TCP packet during TCP connection establishment phase when the connection limit has been exceeded. The connection limit is configured via the 'set connection conn-max' action command.

Recommendation:

If this is incrementing rapidly, check the syslogs to determine which host's connection limit is reached. The connection limit may need to be increased if the traffic is normal, or the host may be under attack.

Syslogs:

201011

-----  
Name: conn-limit

Connection limit reached:

This reason is given for dropping a packet when the connection limit or host connection limit has been exceeded. If this is a TCP packet which is dropped during TCP connection establishment phase due to connection limit, the drop reason 'TCP connection limit reached' is also reported.

Recommendation:

If this is incrementing rapidly, check the syslogs to determine which host's connection limit is reached. The connection limit may need to be increased if the traffic is normal, or the host may be under attack.

Syslogs:

201011

-----  
Name: tcp\_xmit\_partial

## TCP retransmission partial:

This counter is incremented and the packet is dropped when check-retransmission feature is enabled and a partial TCP retransmission was received.

## Recommendations:

None

## Syslogs:

None

-----  
Name: sctp-no-association

## SCTP no association:

This counter is incremented and the packet is dropped when no matching association exist for this packet.

## Recommendations:

None

## Syslogs:

None

-----  
Name: sctp-pkt-too-small

## SCTP packet size less than minimum length of 16:

This counter is incremented and the packet is dropped when SCTP packet size is less than the combined size of common header and chunk header.

## Recommendations:

None

## Syslogs:

None

-----  
Name: sctp-pkt-partial\_chunk

## SCTP packet has partial chunk:

This counter is incremented and the packet is dropped when SCTP packet contains a partial chunk.

## Recommendations:

None

## Syslogs:

None

-----  
Name: sctp-chunk-too-small

## SCTP chunk length value is smaller than chunk header size:

This counter is incremented and the packet is dropped when the SCTP chunk length value is less than the size of chunk header.

## Recommendations:

None

Syslogs:  
None

-----  
Name: sctp-chunk-init-too-small  
SCTP chunk length value is smaller then the INIT chunk size:  
This counter is incremented and the packet is dropped when the SCTP chunk length value is less then the size of INIT chunk.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-init-param-too-small  
SCTP INIT chunk parameter length value is smaller then the parameter header size:  
This counter is incremented and the packet is dropped when the SCTP parameter length value is less then the size of parameter header.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-init-new-addr  
SCTP restart INIT chunk contains new address:  
This counter is incremented and the packet is dropped when SCTP restart INIT chunk contains new address.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-initack-too-small  
SCTP chunk length value is smaller then the INIT ACK chunk size:  
This counter is incremented and the packet is dropped when the SCTP chunk length value is less then the size of INIT ACK chunk.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-init-in-shutdown  
SCTP INIT is seen in shutdown state:

This counter is incremented and the packet is dropped when SCTP INIT chunk is received in SHUTDOWN state.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-initack-no-matching-init

SCTP INITACK chunk has no matching INIT:

This counter is incremented and the packet is dropped when SCTP INIT ACK chunk is received with no matching INIT.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-0-tag

SCTP INIT contains 0 value initiate tag:

This counter is incremented and the packet is dropped when SCTP INIT chunk contains 0 value initiate tag.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-initack-0-tag

SCTP INIT ACK contains 0 value initiate tag:

This counter is incremented and the packet is dropped when SCTP INIT ACK chunk contains 0 value initiate tag.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-rwnd-too-small

SCTP INIT receive-window value is too small:

This counter is incremented and the packet is dropped when SCTP INIT chunk receive-window value is too small (less than 1500).

Recommendations:

None

Syslogs:

None

```
-----
Name: sctp-chunk-initack-rwnd-too-small
SCTP INIT ACK receive-window value is too small:
    This counter is incremented and the packet is dropped when SCTP INIT ACK chunk
receive-window value is too small (less than 1500).
```

```
Recommendations:
    None
```

```
Syslogs:
    None
```

```
-----
Name: sctp-chunk-init-0-stream-cnt
SCTP INIT contains 0 value inbound/outbound stream count:
    This counter is incremented and the packet is dropped when SCTP INIT chunk contains 0
value inbound/outbound stream count.
```

```
Recommendations:
    None
```

```
Syslogs:
    None
```

```
-----
Name: sctp-chunk-init-ack-0-stream-cnt
SCTP INIT ACK contains 0 value inbound/outbound stream count:
    This counter is incremented and the packet is dropped when SCTP INIT ACK chunk contains
0 value inbound/outbound stream count.
```

```
Recommendations:
    None
```

```
Syslogs:
    None
```

```
-----
Name: sctp-chunk-init-inv-param-len
SCTP INIT ACK contains invalid parameter length value:
    This counter is incremented and the packet is dropped when SCTP INIT ACK chunk contains
invalid parameter length value.
```

```
Recommendations:
    None
```

```
Syslogs:
    None
```

```
-----
Name: sctp-chunk-init-inv-ipv4-param-len
SCTP INIT contains invalid ipv4 parameter length value:
```



This counter is incremented and the packet is dropped when SCTP INIT chunk contains invalid ipv4 parameter length value.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-ack-inv-ipv4-param-len

SCTP INIT ACK contains invalid ipv4 parameter length value:

This counter is incremented and the packet is dropped when SCTP INIT ACK chunk contains invalid ipv4 parameter length value.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-inv-ipv6-param-len

SCTP INIT contains invalid ipv6 parameter length value:

This counter is incremented and the packet is dropped when SCTP INIT chunk contains invalid ipv6 parameter length value.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-ack-inv-ipv6-param-len

SCTP INIT ACK contains invalid ipv6 parameter length value:

This counter is incremented and the packet is dropped when SCTP INIT ACK chunk contains invalid ipv6 parameter length value.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-cookie-echo-no-assoc

SCTP COOKIE ECHO is received with no association:

This counter is incremented and the packet is dropped when SCTP COOKIE ECHO chunk is received without an association.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-cookie-ack-no-assoc  
SCTP COOKIE ACK is received with no association:  
    This counter is incremented and the packet is dropped when SCTP COOKIE ACK chunk is received without an association.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-cookie-echo-cookie-len  
SCTP COOKIE ECHO contains cookie with different length:  
    This counter is incremented and the packet is dropped when SCTP COOKIE ECHO chunk contains an echoed cookie with a different length.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-cookie-echo-in-close  
SCTP COOKIE ECHO is received in CLOSED state:  
    This counter is incremented and the packet is dropped when SCTP COOKIE ECHO chunk is received in association CLOSED state.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-cookie-echo-in-shut  
SCTP COOKIE ECHO is received during shutdown:  
    This counter is incremented and the packet is dropped when SCTP COOKIE ECHO chunk is received during association shutdown.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-cookie-ack-in-invalid-state  
SCTP COOKIE ACK is not received in COOKIE ECHOED state:

This counter is incremented and the packet is dropped when SCTP COOKIE ACK chunk is not received in COOKIE ECHOED state.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-shutdown-too-small

SCTP SHUTDOWN length is too small:

This counter is incremented and the packet is dropped when SCTP SHUTDOWN chunk length is too small.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-shutdown-in-invalid-state

SCTP SHUTDOWN is not received in valid state:

This counter is incremented and the packet is dropped when SCTP SHUTDOWN chunk is not received in valid state.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-shutdown-ack-in-invalid-state

SCTP SHUTDOWN ACK is not received in valid state:

This counter is incremented and the packet is dropped when SCTP SHUTDOWN ACK chunk is not received in valid state.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-shutdown-complete-in-invalid-state

SCTP SHUTDOWN COMPLETE is not received in valid state:

This counter is incremented and the packet is dropped when SCTP SHUTDOWN COMPLETE chunk is not received in valid state.

Recommendations:

None

Syslogs:

None

```
-----  
Name: sctp-chunk-sack-in-invalid-state  
SCTP SACK is not received in valid state:  
    This counter is incremented and the packet is dropped when SCTP SACK chunk is not  
received in valid state.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: sctp-chunk-sack-too-small  
SCTP SACK length is too small:  
    This counter is incremented and the packet is dropped when SCTP SACK chunk length is  
too small.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: sctp-chunk-fwd-tsn-in-invalid-state  
SCTP FWD TSN is not received in valid state:  
    This counter is incremented and the packet is dropped when SCTP FORWARD CUMULATIVE TSN  
chunk is not received in valid state.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: sctp-chunk-fwd-tsn-too-small  
SCTP FWD TSN length is too small:  
    This counter is incremented and the packet is dropped when SCTP FORWARD CUMULATIVE TSN  
chunk length is too small.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: sctp-chunk-fwd-tsn-gap-out-of-range  
SCTP FWD TSN gap is out of range:
```

This counter is incremented and the packet is dropped when SCTP FORWARD CUMULATIVE TSN gap is out of range (100).

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-restart-bad-ip

SCTP INIT (restart) contains IP address not in previous INIT:

This counter is incremented and the packet is dropped when SCTP INIT (restart) chunk contains IP address that is not in previous INIT.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-asconf-auth-inconsistent

SCTP INIT contains contains ASCONF support without AUTH support:

This counter is incremented and the packet is dropped when SCTP INIT chunk contains contains ASCONF support without AUTH support.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-redundancy-auth-inconsistent

SCTP INIT contains contains REDUNDANCY support without AUTH support:

This counter is incremented and the packet is dropped when SCTP INIT chunk contains REDUNDANCY support without AUTH support.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-invalid-bundle

SCTP chunk bundle included INIT, INIT\_ACK, or SHUTDOWN\_COMPLETE:

This counter is incremented and the packet is dropped when SCTP chunk bundle included INIT, INIT\_ACK, or SHUTDOWN\_COMPLETE.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-invalid-bundle  
SCTP packet bundle has control chunks after data chunks:  
    This counter is incremented and the packet is dropped when SCTP packet has control  
chunks present after data chunks and is dropped.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-unrec-param  
SCTP chunk contains unrecognizable parameter:  
    This counter is incremented and the packet is dropped when SCTP chunk contains  
unrecognizable parameter.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-param-supaddrlen-inv  
SCTP chunk parameter SUPPORTED ADDRESS contains invalid length:n      This counter is  
incremented and the packet is dropped when SCTP INIT/INIT ACK chunk parameter SUPPORTED  
ADDRESS contains invalid length (< 4).

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-pkt-auth-chunk-extra  
SCTP packets contains more than one AUTH chunk:  
    This counter is incremented and the packet is dropped when SCTP packet contains more  
than one AUTH chunk.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-pkt-auth-chunk-no-data  
SCTP packets contains only AUTH chunks:

This counter is incremented and the packet is dropped when SCTP packet contains only AUTH chunks.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-initack-chunk-inv-state

Received SCTP INIT ACK chunk in non-COOKIE-WAIT state:

This counter is incremented and the packet is dropped when SCTP packet containing INIT ACK chunk is received in non-cookie-wait state.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-zero-ver-tag

Received SCTP non-INIT/ABORT chunk with zero verification tag:

This counter is incremented and the packet is dropped when packet containing INIT/ABORT chunk has zero verification tag.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-inva-ver-tag

Received SCTP chunk with invalid verification tag:

This counter is incremented and the packet is dropped when packet contains verification tag that does not match association tag.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-abort-chunk-unexpected

Received SCTP ABORT chunk unexpectedly:

This counter is incremented and the packet is dropped when SCTP chunk is received unexpectedly.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-shutack-chunk-unexpected  
Received Sctp SHUTDOWN ACK chunk unexpectedly:  
    This counter is incremented and the packet is dropped when SHUTDOWN ACK is received unexpectedly.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-shutcomplete-chunk-unexpected  
Received Sctp SHUTDOWN COMPLETE chunk unexpectedly:  
    This counter is incremented and the packet is dropped when SHUTDOWN COMPLETE is received unexpectedly.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-unexpected  
Received Sctp chunk unexpectedly:  
    This counter is incremented and the packet is dropped when chunk is received unexpectedly.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-data-chunk-in-invalid-state  
Sctp DATA chunk in invalid state:  
    This counter is incremented and the packet is dropped when Sctp DATA chunk is received in invalid state.

Recommendations:  
    None

Syslogs:  
    None

-----  
Name: sctp-chunk-descriptor-unavailable  
Sctp DATA chunk descriptor unavailable:



This counter is incremented and the packet is dropped when SCTP chunk descriptor is unavailable.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-dgram-header-unavailable

SCTP Datagram header unavailable:

This counter is incremented and the packet is dropped when SCTP datagram header is unavailable.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-stream-id-invalid

SCTP DATA chunk contains invalid stream id:

This counter is incremented and the packet is dropped when SCTP DATA chunk contains invalid stream id.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-data-chunk-len-invalid

SCTP DATA chunk length is invalid:

This counter is incremented and the chunk is dropped when SCTP DATA chunk has invalid chunk length.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-data-chunk-len-too-small

SCTP DATA chunk length is too small:

This counter is incremented and the packet is dropped when SCTP DATA chunk length is too small.

Recommendations:  
None

Syslogs:

None

-----  
Name: sctp-data-chunk-len-exceeds-rwnd

SCTP DATA chunk length greater than receive window:

This counter is incremented and the packet is dropped when SCTP DATA chunk length is greater than receive window.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-duplicate-data-stream

Received duplicate SCTP DATA stream:

This counter is incremented and the packet is dropped when a duplicate SCTP DATA stream is received.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp queue-limit

SCTP Out-of-order queue full:

This counter is incremented and the packet is dropped when the SCTP out of order packet queue exceeds the default limit 20.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-reorder-queue-timeout

SCTP Reorder queue timeout:

This counter is incremented and the data chunk is dropped when an out of order SCTP data chunk has been held in the buffer for 30 seconds.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-drop-fixme

SCTP drop fixme:

This counter is incremented when the security appliance receives a SCTP packet with a fixme drop reason

Recommendation:  
None.

Syslog:  
None.

-----  
Name: sctp-reorder-queue-limit  
SCTP Reorder queue limit exceeded:  
This counter is incremented and the chunk is dropped when number of out of order chunks exceeds the limit(50/stream) for the stream.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-reassembly-queue-timeout  
SCTP Reassembly queue timeout:  
This counter is incremented and the fragmented chunks are deleted from the reassembly queue when those fragmented chunks has been held in the reassembly queue for 30 seconds.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-reassembly-queue-limit  
SCTP Reassembly queue limit exceeded:  
This counter is incremented and the fragmented chunks are deleted from the reassembly queue after the number of fragments in reassembly queue reaches its maximum(6).

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-reassembly-buffer-size-limit  
SCTP Reassembly Datagram queue bytesize limit exceeded:  
This counter is incremented and the reassembly datagram is deleted from the stream reassembly queue(all fragments) after the total bytesize of chunks in the dgram reassembly queue reaches its maximum(8192bytes).

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-reorder-stream-limit  
SCTP Number of streams in reorder exceeded limit:  
This counter is incremented and the chunk is dropped when first out of order chunk is received after the number ofStreams in Reorder reaches its maximum(64\*number of cpu cores).

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-reassembly-system-limit  
SCTP Reassembly Datagram queue limit exceeded:  
This counter is incremented and the reassembly datagram will not be created for the new incoming fragments after the number of datagrams in reassembly queues in ASA reaches its maximum(125/core) We do repacking if the fragment is bundled else we drop the whole packet.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-invalid-fragments  
SCTP invalid fragments received:  
This counter is incremented and all fragments in reassembly queue will be deleted including the fragment which is not yet been queued.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-shutdown-no-assoc  
SCTP SHUTDOWN is received with no association:  
This counter is incremented and the packet is dropped when SCTP SHUTDOWN chunk is received without an association.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-shutdown-ack-no-assoc

SCTP SHUTDOWN ACK is received with no association:

This counter is incremented and the packet is dropped when SCTP SHUTDOWN ACK chunk is received without an association.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-shutdown-comp-no-assoc

SCTP SHUTDOWN COMPLETE is received with no association:

This counter is incremented and the packet is dropped when SCTP SHUTDOWN COMPLETE chunk is received without an association.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-sack-no-assoc

SCTP SACK is received with no association:

This counter is incremented and the packet is dropped when SCTP SACK chunk is received without an association.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-heartbeat-no-assoc

SCTP HEARTBEAT is received with no association:

This counter is incremented and the packet is dropped when SCTP HEARTBEAT chunk is received without an association.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-heartbeat-ack-no-assoc

SCTP HEARTBEAT ACK is received with no association:

This counter is incremented and the packet is dropped when SCTP HEARTBEAT ACK chunk is received without an association.

Recommendations:

None

Syslogs:  
None

-----  
Name: tcpnorm-rexmit-bad  
TCP bad retransmission:  
This counter is incremented and the packet is dropped when check-retranmission feature is enabled and a TCP retranmission with different data from the original packet was received.

Recommendations:  
None

Syslogs:  
None

-----  
Name: tcpnorm-win-variation  
TCP unexpected window size variation:  
This counter is incremented and the packet is dropped when window size advertized by TCP endpoint is drastically changed without accepting that much data.

Recommendations:  
In order to allow such packet, use the window-variation configuration under tcp-map.

Syslogs:  
None

-----  
Name: tcp-bad-option-length  
TCP option length invalid:  
This counter is incremented and the packet is dropped when the appliance receives a TCP packet with TCP option length 0, which is invalid for non-NOP option.

Recommendation:  
None.

Syslogs:  
None

-----  
Name: rate-exceeded  
QoS rate exceeded:  
This counter is incremented when rate-limiting (policing) is configured on an egress/ingress interface and the egress/ingress traffic rate exceeds the burst rate configured. The counter is incremented for each packet dropped.

Recommendation:  
Investigate and determine why the rate of traffic leaving/entering the interface is higher than the configured rate. This may be normal, or could be an indication of virus or attempted attack.

Syslogs:  
None.

-----  
Name: queue-removed

Rate-limiter queued packet dropped:

When QoS config is changed or removed, the existing packets in the output queues awaiting transmission are dropped and this counter is incremented.

Recommendation:

Under normal conditions, this may be seen when the QoS configuration has been changed by the user. If this occurs when no changes to QoS config were performed, please contact Cisco Technical Assistance Center (TAC).

Syslogs:

None.

-----  
Name: bad-crypto

Bad crypto return in packet:

This counter will increment when the appliance attempts to perform a crypto operation on a packet and the crypto operation fails. This is not a normal condition and could indicate possible software or hardware problems with the appliance

Recommendation:

If you are receiving many bad crypto indications your appliance may need servicing. You should enable syslog 402123 to determine whether the crypto errors are hardware or software errors. You can also check the error counter in the global IPsec statistics with the 'show ipsec stats' CLI command. If the IPsec SA which is triggering these errors is known, the SA statistics from the 'show ipsec sa detail' command will also be useful in diagnosing the problem.

Syslogs:

402123

-----  
Name: ssl-first-record-invalid

SSL first record invalid:

The minimal length of SSL first handshake record should be 11 bytes. If the first record is less than 11 bytes, the packet will be dropped.

Recommendation:

This counter is incremented for invalid SSL record type that has first SSL record less than 11 bytes. This invalid type received from the remote peer is treated as a fatal error and the SSL packets that encounter this error must be dropped.

Syslogs:

None

-----  
Name: ssl-record-length-invalid

SSL record length invalid:

The minimal length of SSL handshake record should be 4 bytes. If the handshake record is less than 4 bytes, the packet will be dropped.

Recommendation:

This counter is incremented for invalid SSL record type that has SSL record less than 4 bytes. This invalid type received from the remote peer is treated as a fatal error and the SSL packets that encounter this error must be dropped.

Syslogs:

None

-----  
Name: ssl-alert-length-invalid

SSL alert length invalid:

The minimal length of SSL handshake alert should be 2 bytes. If the handshake record is less than 2 bytes, the packet will be dropped.

Recommendation:

This counter is incremented for invalid SSL record type that has SSL alert less than 2 bytes. This invalid type received from the remote peer is treated as a fatal error and the SSL packets that encounter this error must be dropped.

Syslogs:

None

-----  
Name: ctm-error

CTM returned error:

This counter will increment when the appliance attempts to perform a crypto operation on a packet and the crypto operation fails. This is not a normal condition and could indicate possible software or hardware problems with the appliance.

Recommendation:

If you are receiving many bad crypto indications your appliance may need servicing. You should enable syslog 402123 to determine whether the crypto errors are hardware or software errors. You can also check the error counter in the global IPsec statistics with the 'show ipsec stats' CLI command. If the IPsec SA which is triggering these errors is known, the SA statistics from the 'show ipsec sa detail' command will also be useful in diagnosing the problem.

Syslogs:

402123

-----  
Name: send-ctm-error

Send to CTM returned error:

This counter is obsolete in the appliance and should never increment.

Recommendation:

None

Syslogs:

None

-----  
Name: security-failed

Early security checks failed:

This counter is incremented and packet is dropped when the security appliance :

- receives an IPv4 multicast packet when the packets multicast MAC address doesn't match the packets multicast destination IP address
- receives an IPv6 or IPv4 teardrop fragment containing either small offset or fragment overlapping
- receives an IPv4 packet that matches an IP audit (IPS) signature

Recommendation:



Contact the remote peer administrator or escalate this issue according to your security policy

For detailed description and syslogs for IP audit attack checks please refer the ip audit signature section of command reference guide

Syslogs:

```
106020
400xx in case of ip audit checks
```

-----  
Name: policy-params-failed

Unable to create policy params:

This counter is incremented and every packet is dropped when data-plane does not have a valid policy installed in the security context

Recommendation:

If this is incrementing check the data plane logs to see why there was a policy install failure.

Syslogs:

```
None
```

-----  
Name: sp-security-failed

Slowpath security checks failed:

This counter is incremented and packet is dropped when the security appliance is:

1) In routed mode receives a through-the-box:

- L2 broadcast packet
- IPv4 packet with destination IP address equal to 0.0.0.0
- IPv4 packet with source IP address equal to 0.0.0.0

2) In routed or transparent mode and receives a through-the-box IPv4 packet with:

- first octet of the source IP address equal to zero
- source IP address equal to the loopback IP address
- network part of source IP address equal to all 0's
- network part of the source IP address equal to all 1's
- source IP address host part equal to all 0's or all 1's
- Destination IP address host part equal to all 0's

3) In routed or transparent mode and receives an IPv4 or IPv6 packet with same source and destination IP addresses

Recommendation:

1 and 2) Determine if an external user is trying to compromise the protected network. Check for misconfigured clients.

3) If this message counter is incrementing rapidly, an attack may be in progress. Use the packet capture feature to capture type asp packets, and check the source MAC address in the packet to see where they are coming from.

Syslogs:

```
1 and 2) 106016
3) 106017
```

-----  
Name: invalid-ip-option

IP option drop:

This counter is incremented when any unicast packet with ip options or a multicast packet with ip-options that have not been configured to be accepted, is received by the security appliance. The packet is dropped.

## Recommendation:

Investigate why a packet with ip options is being sent by the sender.

## Syslogs:

None.

-----  
Name: lu-invalid-pkt

Invalid LU packet:

Standby unit received a corrupted Logical Update packet.

## Recommendation:

The packet corruption could be caused by a bad cable, interface card, line noise, or software defect. If the interface appears to be functioning properly, then report the problem to Cisco TAC.

## Syslogs:

None

-----  
Name: fo-standby

Dropped by standby unit:

If a through-the-box packet arrives at an appliance or context in a Standby state and a flow is created, the packet is dropped and the flow removed. This counter will increment each time a packet is dropped in this manner.

## Recommendation:

This counter should never be incrementing on the Active appliance or context. However, it is normal to see it increment on the Standby appliance or context.

## Syslogs:

302014, 302016, 302018

-----  
Name: dst-l2\_lookup-fail

Dst MAC L2 Lookup Failed:

This counter will increment when the appliance is configured for Layer 2 switching and the appliance does a Layer 2 destination MAC address lookup which fails. Upon the lookup failure, the appliance will begin the destination MAC discovery process and attempt to find the location of the host via ARP and/or ICMP messages.

## Recommendation:

This is a normal condition when the appliance is configured for Layer 2 switching. You can also execute (show mac-address-table) to list the L2 MAC address locations currently discovered by the appliance.

## Syslogs:

None

-----  
Name: bvi-missing-nameif

Bridge interface missing nameif:

This counter will be incremented when the ingress interface belongs to a bridge-group and leaving via an interface which belongs to a different bridge-group or a L3 interface without nameif configured on the ingress BVI interface.

Recommendation:

For traffic to leave the BVI interface, nameif has to be configured on the ingress BVI interface.

Syslogs:

None

-----  
Name: bvi-unsupported-packet

Unsupported packet on Bridge interface:

This counter will be incremented when the unsupported packets are punted on BVI interface.

Recommendation:

Analyze the packets to determine source of unsupported packets that are tried to punt on BVI interface.

Syslogs:

None

-----  
Name: l2\_same-lan-port

L2 Src/Dst same LAN port:

This counter will increment when the appliance/context is configured for transparent mode and the appliance determines that the destination interface's L2 MAC address is the same as its ingress interface.

Recommendation:

This is a normal condition when the appliance/context is configured for transparent mode. Since the appliance interface is operating in promiscuous mode, the appliance/context receives all packets on the local LAN segment.

Syslogs:

None

-----  
Name: flow-expired

Expired flow:

This counter is incremented when the security appliance tries to inject a new or cached packet belonging to a flow that has already expired. It is also incremented when the appliance attempts to send an rst on a tcp flow that has already expired or when a packet returns from IDS blade but the flow had already expired. The packet is dropped

Recommendation:

If valid applications are getting pre-empted, investigate if a longer timeout is needed.

Syslogs:

None.

-----  
Name: inspect-icmp-out-of-app-id

## ICMP Inspect out of App ID:

This counter will increment when the ICMP inspection engine fails to allocate an 'App ID' data structure. The structure is used to store the sequence number of the ICMP packet.

## Recommendation:

Check the system memory usage. This event normally happens when the system runs short of memory.

## Syslogs:

None.

-----  
Name: inspect-icmp-bad-code

## ICMP Inspect bad icmp code:

This counter will increment when the ICMP code in the ICMP echo request or reply message is non-zero.

## Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

313009.

-----  
Name: inspect-icmp-seq-num-not-matched

## ICMP Inspect seq num not matched:

This counter will increment when the sequence number in the ICMP echo reply message does not match any ICMP echo message that passed across the appliance earlier on the same connection.

## Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

313004

-----  
Name: inspect-icmp-error-no-existing-conn

## ICMP Error Inspect no existing conn:

This counter will increment when the appliance is not able to find any established connection related to the frame embedded in the ICMP error message.

## Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

313005

-----  
Name: inspect-icmp-error-different-embedded-conn

## ICMP Error Inspect different embedded conn:

This counter will increment when the frame embedded in the ICMP error message does not match the established connection that has been identified when the ICMP connection is created.

Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

Syslogs:

313005

-----  
Name: inspect-icmp-invalid-pak

ICMP Inspect invalid packet:

This counter will increment when the appliance detects an invalid ICMPv4 or ICMPv6 packet. Examples: Incomplete ICMP header; malformed ICMP Next Header; invalid hop-limit for ICMPv6 NS (neighbor solicitation); etc.

Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

Syslogs:

None.

-----  
Name: inspect-icmpv6-error-invalid-pak

ICMPv6 Error Inspect invalid packet:

This counter will increment when the appliance detects an invalid frame embedded in the ICMPv6 packet. This check is the same as that on IPv6 packets. Examples: Incomplete IPv6 header; malformed IPv6 Next Header; etc.

Recommendation:

No action required.

Syslogs:

None.

-----  
Name: inspect-icmpv6-error-no-existing-conn

ICMPv6 Error Inspect no existing conn:

This counter will increment when the appliance is not able to find any established connection related to the frame embedded in the ICMPv6 error message.

Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

Syslogs:

313005

-----  
Name: inspect-icmp-error-nat64-error

ICMP NAT64 Error Inspect XLATE Error:

This counter will increment when the appliance is unable to translate ICMP error messages between IPv6 and IPv4.

Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

Syslogs:

313005

-----  
Name: inspect-icmp-nat64-frag  
ICMP NAT64 Inspect Fragmentation Error:

This counter will increment when the appliance is unable to translate ICMP messages between IPv6 and IPv4 due to fragmentation. Per RFC-6145, ICMP packet fragments will not be translated.

Recommendation:

No action required.

Syslogs:

313005

-----  
Name: inspect-stun-out-of-trans-id  
STUN Inspect out of Trans ID:

This counter will increment when the STUN inspection engine fails to allocate an 'Trans ID' data structure. The structure is used to store the transaction id of the STUN packet.

Recommendation:

Check the system memory usage. This event normally happens when the system runs short of memory.

Syslogs:

None.

-----  
Name: inspect-stun-out-of-memory  
STUN Inspect out of Memory:

This counter will increment when the STUN inspection engine fails to allocate memory.

Recommendation:

Check the system memory usage. This event normally happens when the system runs short of memory.

Syslogs:

None.

-----  
Name: inspect-stun-trans-id-no-match  
STUN Inspect trans id not matched:

This counter will increment when the transaction id in the STUN successful/error response message does not match any STUN request message that passed across the appliance earlier on the same connection.

## Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

313004

-----  
Name: inspect-stun-invalid-pak

STUN Inspect invalid packet:

This counter will increment when the appliance detects an invalid STUN packet.

Examples: Incomplete STUN header; malformed STUN Header; etc.

## Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

None.

-----  
Name: inspect-stun-pinhole-fail

STUN Inspect failed to open pinhole:

This counter will increment when the appliance fails to open a pinhole after a STUN request and successful response message exchange.

## Recommendation:

Check the system memory usage. This event normally happens when the system runs short of memory.

## Syslog:

None.

-----  
Name: inspect-dns-invalid-pak

DNS Inspect invalid packet:

This counter will increment when the appliance detects an invalid DNS packet. Examples: A DNS packet with no DNS header; the number of DNS resource records not matching the counter in the header; etc.

## Recommendation:

No action required.

## Syslogs:

None.

-----  
Name: inspect-dns-opt-format-error

DNS Inspect Multiple OPT Record:

This counter will increment when multiple OPT records were found In a single DNS packet

## Recommendation:

No action required.

## Syslogs:

None.

-----  
Name: inspect-dns-invalid-domain-label

DNS Inspect invalid domain label:

This counter will increment when the appliance detects an invalid DNS domain name or label. DNS domain name and label is checked per RFC 1035.

Recommendation:

No action required. If the domain name and label check is not desired, disable the protocol-enforcement parameter in the DNS inspection policy-map (in supported releases).

Syslogs:

None.

-----  
Name: inspect-dns-pak-too-long

DNS Inspect packet too long:

This counter is incremented when the length of the DNS message exceeds the configured maximum allowed value.

Recommendation:

No action required. If DNS message length checking is not desired, enable DNS inspection without the 'maximum-length' option, or disable the 'message-length maximum' parameter in the DNS inspection policy-map (in supported releases).

Syslogs:

410001

-----  
Name: inspect-dns-out-of-app-id

DNS Inspect out of App ID:

This counter will increment when the DNS inspection engine fails to allocate a data structure to store the identification of the DNS message.

Recommendation:

Check the system memory usage. This event normally happens when the system runs short of memory.

Syslogs:

None.

-----  
Name: inspect-dns-id-not-matched

DNS Inspect ID not matched:

This counter will increment when the identification of the DNS response message does not match any DNS queries that passed across the appliance earlier on the same connection.

Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

Syslogs:

None.



```
-----
Name: inspect-dns-umbrella-no-memory
DNS Inspect Umbrella memory allocation failure:
    This counter will increment when Umbrella was unable to allocate new memory The current
    packet being processed was dropped.

Recommendation:
    Check system load. CHeck memory usage.

Syslogs:
    None.

-----
Name: inspect-dns-umbrella-flow-exp
Umbrella DNS packet delay. Flow expired:
    This counter will increment when a dns response from Umbrella was unable to find pairing
    client flow to redirect the packet.Packet will be dropped

Recommendation:
    Check reachabiliy to Umbrella resolvers or network delays.

Syslogs:
    None.

-----
Name: inspect-dns-umbrella-appid-fail
Umbrella DNS Transaction Id entry creation or lookup fail:
    Non Matching Response to Request transaction id. app-id table was not updated.

Recommendation:
    Check dns flows, system load, memory usage.

Syslogs:
    None.

-----
Name: dns-guard-out-of-app-id
DNS Guard out of App ID:
    This counter will increment when the DNS Guard function fails to allocate a data
    structure to store the identification of the DNS message.

Recommendation:
    Check the system memory usage. This event normally happens when the system runs short
    of memory.

Syslogs:
    None.

-----
Name: dns-guard-id-not-matched
DNS Guard ID not matched:
    This counter will increment when the identification of the DNS response message does not
    match any DNS queries that passed across the appliance earlier on the same connection. This
    counter will increment by the DNS Guard function.
```

## Recommendation:

No action required if it is an intermittent event. If the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

None.

-----  
Name: inspect-rtp-invalid-length

Invalid RTP Packet length:

This counter will increment when the UDP packet length is less than the size of the RTP header.

## Recommendation:

No action required. A capture can be used to figure out which RTP source is sending the incorrect packets and you can deny the host using the ACLs.

## Syslogs:

None.

-----  
Name: inspect-rtp-invalid-version

Invalid RTP Version field:

This counter will increment when the RTP version field contains a version other than 2.

## Recommendation:

The RTP source in your network does not seem to be sending RTP packets conformant with the RFC 1889. The reason for this has to be identified and you can deny the host using ACLs if required.

## Syslogs:

431001.

-----  
Name: inspect-rtp-invalid-payload-type

Invalid RTP Payload type field:

This counter will increment when the RTP payload type field does not contain an audio payload type when the signalling channel negotiated an audio media type for this RTP secondary connection. The counter increments similarly for the video payload type.

## Recommendation:

The RTP source in your network is using the audio RTP secondary connection to send video or vice versa. If you wish to prevent this you can deny the host using ACLs.

## Syslogs:

431001.

-----  
Name: inspect-rtp-ssrc-mismatch

Invalid RTP Synchronization Source field:

This counter will increment when the RTP SSRC field in the packet does not match the SSRC which the inspect has been seeing from this RTP source in all the RTP packets.

## Recommendation:

This could be because the RTP source in your network is rebooting and hence changing the SSRC or it could be because of another host on your network trying to use the opened secondary RTP connections on the firewall to send RTP packets. This should be investigated further to confirm if there is a problem.

Syslogs:  
431001.

-----  
Name: inspect-rtp-sequence-num-outofrange  
RTP Sequence number out of range:

This counter will increment when the RTP sequence number in the packet is not in the range expected by the inspect.

Recommendation:

No action is required because the inspect tries to recover and start tracking from a new sequence number after a lapse in the sequence numbers from the RTP source.

Syslogs:  
431001.

-----  
Name: inspect-rtp-max-outofseq-paks-probation  
RTP out of sequence packets in probation period:

This counter will increment when the out of sequence packets when the RTP source is being validated exceeds 20. During the probation period, the inspect looks for 5 in-sequence packets to consider the source validated.

Recommendation:

Check the RTP source to see why the first few packets do not come in sequence and correct it.

Syslogs:  
431001.

-----  
Name: inspect-rtcp-invalid-length  
Invalid RTCP Packet length:

This counter will increment when the UDP packet length is less than the size of the RTCP header.

Recommendation:

No action required. A capture can be used to figure out which RTP source is sending the incorrect packets and you can deny the host using the ACLs.

Syslogs:  
None.

-----  
Name: inspect-rtcp-invalid-version  
Invalid RTCP Version field:

This counter will increment when the RTCP version field contains a version other than 2.

Recommendation:

The RTP source in your network does not seem to be sending RTCP packets conformant with the RFC 1889. The reason for this has to be identified and you can deny the host using ACLs if required.

Syslogs:  
431002.

-----  
Name: inspect-rtcp-invalid-payload-type  
Invalid RTCP Payload type field:

This counter will increment when the RTCP payload type field does not contain the values 200 to 204.

Recommendation:

The RTP source should be validated to see why it is sending payload types outside of the range recommended by the RFC 1889.

Syslogs:  
431002.

-----  
Name: ips-request

IPS Module requested drop:

This counter is incremented and the packet is dropped as requested by IPS module when the packet matches a signature on the IPS engine.

Recommendations:

Check syslogs and alerts on IPS module.

Syslogs:  
420002

-----  
Name: cxsc-request

CXSC Module requested drop:

This counter is incremented and the packet is dropped as requested by CXSC module when the packet matches a signature on the CXSC engine.

Recommendations:

Check syslogs and alerts on CXSC module.

Syslogs:  
429002

-----  
Name: cxsc-bad-tlv-received

CXSC Module requested drop:

This counter is incremented and the packet is dropped as requested by CXSC module when the packet has bad TLV's.

Recommendations:

Check syslogs and alerts on CXSC module.

Syslogs:  
None

```
-----  
Name: cxsc-malformed-packet  
CXSC Module requested drop:  
    This counter is incremented and the packet is dropped as requested by CXSC module when  
the packet is malformed.
```

```
Recommendations:  
    Check syslogs and alerts on CXSC module.
```

```
Syslogs:  
    None
```

```
-----  
Name: cxsc-fail  
CXSC config removed for connection:  
    This counter is incremented and the packet is dropped when CXSC configuration is not  
found for a particular connection.
```

```
Recommendations:  
    check if any configuration changes have been done for CXSC.
```

```
Syslogs:  
    None
```

```
-----  
Name: cxsc-fail-close  
CXSC card is down:  
    This counter is incremented and the packet is dropped when CXSC card is down and  
fail-close option was used in CXSC action.
```

```
Recommendations:  
    Check and bring up the CXSC card.
```

```
Syslogs:  
    429001
```

```
-----  
Name: cxsc-ha-request  
CXSC HA replication drop:  
    This counter is incremented when the security appliance receives a CXSC HA request  
packet, but could not process it and the packet is dropped.
```

```
Recommendation:  
    This could happen occasionally when CXSC does not have the latest ASA HA state, like  
right after ASA HA state change. If the counter is constantly increasing however, then it  
can be because CXSC and ASA are out of sync. If that happens, contact Cisco TAC for  
assistance.
```

```
Syslogs:  
    None.
```

```
-----  
Name: cxsc-invalid-encap
```

CXSC invalid header drop:

This counter is incremented when the security appliance receives a CXSC packet with invalid message header, and the packet is dropped.

Recommendation:

This should not happen. Contact Cisco TAC for assistance.

Syslogs:

None.

-----  
Name: cxsc-bad-handle-received

Received Bad flow handle in a packet from CXSC Module, thus dropping flow.

This counter is incremented, flow and packet are dropped on ASA as the handle for CX flow has changed in flow duration.

Recommendations:

Check syslogs and alerts on CXSC module.

Syslogs:

None

-----  
Name: cxsc-rx-monitor-only

CXSC invalid monitor-only receive drop:

This counter is incremented when the security appliance receives a CXSC packet when in monitor-only mode, and the packet is dropped.

Recommendation:

This should not happen. Contact Cisco TAC for assistance.

Syslogs:

None.

-----  
Name: sfr-request

SFR Module requested drop:

This counter is incremented and the packet is dropped as requested by SFR module when the packet matches a signature on the SFR engine.

Recommendations:

Check syslogs and alerts on SFR module.

Syslogs:

434002

-----  
Name: sfr-bad-tlv-received

SFR Module requested drop:

This counter is incremented and the packet is dropped as requested by SFR module when the packet has bad TLV's.

Recommendations:

Check syslogs and alerts on SFR module.

Syslogs:  
None

-----  
Name: sfr-malformed-packet  
SFR Module requested drop:  
This counter is incremented and the packet is dropped as requested by SFR module when the packet is malformed.

Recommendations:  
Check syslogs and alerts on SFR module.

Syslogs:  
None

-----  
Name: sfr-fail-close  
SFR card is down:  
This counter is incremented and the packet is dropped when SFR card is down and fail-close option was configured in SFR action.

Recommendations:  
Check and bring up the SFR card.

Syslogs:  
434001

-----  
Name: sfr-no-flow  
SFR config removed for connection:  
This counter is incremented and the packet is dropped when SFR configuration is not found for a particular connection.

Recommendations:  
check if any configuration changes have been done for SFR.

Syslogs:  
None

-----  
Name: sfr-ha-request  
SFR HA replication drop:  
This counter is incremented when the security appliance receives a SFR HA request packet, but could not process it and the packet is dropped.

Recommendation:  
This could happen occasionally when SFR does not have the latest ASA HA state, like right after ASA HA state change. If the counter is constantly increasing however, then it can be because SFR and ASA are out of sync. If that happens, contact Cisco TAC for assistance.

Syslogs:  
None.

```
-----
Name: sfr-invalid-encap
SFR invalid header drop:
    This counter is incremented when the security appliance receives a SFR packet with
    invalid message header, and the packet is dropped.

Recommendation:
    This should not happen. Contact Cisco TAC for assistance.

Syslogs:
    None.

-----
Name: sfr-bad-handle-received
Received Bad flow handle in a packet from SFR Module, thus dropping flow.
    This counter is incremented, flow and packet are dropped on ASA as the handle for SFR
    flow has changed in flow duration.

Recommendations:
    Check syslogs and alerts on SFR module.

Syslogs:
    None

-----
Name: sfr-rx-monitor-only
SFR invalid monitor-only receive drop:
    This counter is incremented when the security appliance receives a SFR packet when in
    monitor-only mode, and the packet is dropped.

Recommendation:
    This should not happen. Contact Cisco TAC for assistance.

Syslogs:
    None.

-----
Name: inspect-dp-out-of-memory
Inspect Datapath out of memory:
    This counter is incremented when the inspect datapath fails to allocate memory.

Recommendations:
    Check the system memory usage. This event normally happens when the system runs short
    of memory.

Syslogs:
    None.

-----
Name: app-recv-queue-not-ready
Inspect Datapath peer index not ready:
    This counter is incremented when the application receiving queue is not ready.

Recommendations:
```



This event only happens when the system is in the transient state, such as the system is booting, or Snort is in the middle of becoming up or down.

Syslogs:  
None.

-----  
Name: snort-drop  
Snort requested to drop the frame:  
This counter is incremented and the packet is dropped as requested by Snort module.

Recommendations:  
Review Snort policies for any such rule denying the flow.

Syslogs:  
None.

-----  
Name: snort-down  
Drop the frame as the SNORT instance is down:  
This counter is incremented and the packet is dropped as the Snort module is down.

Recommendations:  
Review Snort statistics for the reason behind SNORT instance down.

Syslogs:  
None.

-----  
Name: snort-busy  
Drop the frame as SNORT instance is busy and can not handle:  
This counter is incremented and the packet is dropped as the Snort module is busy and unable to handle the frame.

Recommendations:  
Review Snort statistics for the reason behind high load on SNORT instance.

Syslogs:  
None.

-----  
Name: ips-license-disabled-fail-close  
IPS module license disabled:  
This counter is incremented and the packet is dropped when the IPS module license is disabled and the fail-close option was used in IPS inspection.

Recommendations:  
Please apply an activation key that has the IPS Module License enabled.

Syslogs:  
420008

-----  
Name: ips-fail

IPS config removed for connection:

This counter is incremented and the packet is dropped when IPS configuration is not found for a particular connection.

Recommendations:

check if any configuration changes have been done for IPS.

Syslogs:

None

-----  
Name: ips-fail-close

IPS card is down:

This counter is incremented and the packet is dropped when IPS card is down and fail-close option was used in IPS inspection.

Recommendations:

Check and bring up the IPS card.

Syslogs:

420001

-----  
Name: ips-no-ipv6

Executing IPS software does not support IPv6:

This counter is incremented when an IPv6 packet, configured to be directed toward IPS SSM, is discarded since the software executing on IPS SSM card does not support IPv6.

Recommendations:

Upgrade the IPS software to version 6.2 or later.

Syslogs:

None

-----  
Name: l2\_acl

FP L2 rule drop:

This counter will increment when the appliance denies a packet due to a layer-2 ACL. By default, in routed mode the appliance will PERMIT:

- 1) IPv4 packets
- 2) IPv6 packets
- 3) ARP packets
- 4) L2 Destination MAC of FFFF:FFFF:FFFF (broadcast)
- 5) IPv4 MCAST packet with destination L2 of 0100:5E00:0000-0100:5EFE:FFFF
- 6) IPv6 MCAST packet with destination L2 of 3333:0000:0000-3333:FFFF:FFFF

By default, in Transparent mode permits the routed mode ACL and PERMITS:

- 1) BPDU packets with destination L2 of 0100:0CCC:CCCD
- 2) Appletalk packets with destination L2 of 0900:0700:0000-0900:07FF:FFFF

The user can also configure ethertype ACL(s) and apply them to an interface to permit other types of L2 traffic.

Note - Packets permitted by L2 ACLs may still be dropped by L3-L4 ACLs.

## Recommendation:

If your running the appliance/context in transparent mode and your NON-IP packets are dropped by the appliance, you can configure an ethertype ACL and apply the ACL to an access group. Note - the appliance ethertype CLI only supports protocol types and not L2 destination MAC addresses.

## Syslogs:

106026, 106027

-----  
Name: l2\_acl\_vxlan

FP L2 rule VXLAN drop:

This counter will increment when the appliance denies a packet because it fails to locate VXLAN out\_tag when applying layer-2 ACL checks.

## Recommendation:

This only happens under VXLAN based tag-switching use case. Please make sure VXLAN segment-id configuration and tag switching table are correct.

## Syslogs:

None

-----  
Name: intercept-unexpected

Intercept unexpected packet:

Either received data from client while waiting for SYNACK from server or received a packet which cannot be handled in a particular state of TCP intercept.

## Recommendation:

If this drop is causing the connection to fail, please have a sniffer trace of the client and server side of the connection while reporting the issue. The box could be under attack and the sniffer traces or capture would help narrowing down the culprit.

## Syslogs:

None.

-----  
Name: no-mcast-entry

FP no mcast entry:

A packet has arrived that matches a multicast flow, but the multicast service is no longer enabled, or was re-enabled after the flow was built.

- OR -

A multicast entry change has been detected after a packet was punted to the CP, and the NP can no longer forward the packet since no entry is present.

## Recommendation:

Reenable multicast if it is disabled.

- OR -

No action required.

## Syslogs:

None

-----  
Name: no-mcast-intrf

FP no mcast output intrf:

All output interfaces have been removed from the multicast entry.  
 - OR -  
 The multicast packet could not be forwarded.

Recommendation:

Verify that there are no longer any receivers for this group.  
 - OR -  
 Verify that a flow exists for this packet.

Syslogs:

None

-----

Name: fragment-reassembly-failed

Fragment reassembly failed:

This counter is incremented when the appliance fails to reassemble a chain of fragmented packets into a single packet. All the fragment packets in the chain are dropped. This is most probably because of failure while allocating memory for the reassembled packet.

Recommendation:

Use the show blocks command to monitor the current block memory.

Syslogs:

None

-----

Name: ifc-classify

Virtual firewall classification failed:

A packet arrived on a shared interface, but failed to classify to any specific context interface.

Recommendation:

For software versions without customizable mac-address support, use the "global" or "static" command to specify the IPv4 addresses that belong to each context interface. For software versions with customizable mac-address support, enable "mac-address auto" in system context. Alternatively, configure unique MAC addresses for each context interfaces residing over a shared interface with "mac-address" command under each context interface submode.

Syslogs:

None.

-----

Name: connection-lock

Connection locking failed:

While the packet was waiting for processing, the flow that would be used was destroyed.

Recommendation:

The message could occur from user interface command to remove connection in an device that is actively processing packet. Otherwise, investigate flow drop counter. This message may occur if the flow are forced dropped from error.

Syslogs:

None.

```
-----
Name: interface-down
Interface is down:
    This counter will increment for each packet received on an interface that is shutdown
    via the 'shutdown' interface sub-mode command. For ingress traffic, the packet is dropped
    after security context classification and if the interface associated with the context is
    shut down. For egress traffic, the packet is dropped when the egress interface is shut
    down.

Recommendation:
    No action required.

Syslogs:
    None.

-----
Name: service-interface-down
Service interface is down:
    ASA 1000V will drop any vPath tagged traffic if the service-interface has not been
    configured.

Recommendation:
    Ensure that all security profile interfaces are associated with the inside interface
    using
    service-interface security-profile all <inside_interface_name>
    (only needed in ASDM mode)

Syslogs:
    None.

-----
Name: invalid-app-length
Invalid App length:
    This counter will increment when the appliance detects an invalid length of the Layer 7
    payload in the packet. Currently, it counts the drops by the DNS Guard function only.
    Example: Incomplete DNS header.

Recommendation:
    No action required.

Syslogs:
    None.

-----
Name: loopback-buffer-full
Loopback buffer full:
    This counter is incremented and the packet is dropped when packets are sent from one
    context of the appliance to another context through a shared interface and there is no
    buffer space in loopback queue.

Recommendations:
    Check system CPU to make sure it is not overloaded.

Syslogs:
    None
```

```
-----  
Name: non-ip-pkt-in-routed-mode  
Non-IP packet received in routed mode:  
    This counter will increment when the appliance receives a packet which is NOT IPv4,  
    IPv6 or ARP and the appliance/context is configured for ROUTED mode. In normal operation  
    such packets should be dropped by the default L2 ACL configuration.
```

Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

Syslogs:

106026, 106027

```
-----  
Name: host-move-pkt  
FP host move packet:  
    This counter will increment when the appliance/context is configured for transparent  
    and source interface of a known L2 MAC address is detected on a different interface.
```

Recommendation:

This indicates that a host has been moved from one interface (i.e. LAN segment) to another. This condition is normal while in transparent mode if the host has in fact been moved. However, if the host move toggles back and forth between interfaces, a network loop may be present.

Syslogs:

412001, 412002, 322001

```
-----  
Name: tfw-no-mgmt-ip-config  
No management IP address configured for TFW:  
    This counter is incremented when the security appliance receives an IP packet in  
    transparent mode and has no management IP address defined. The packet is dropped.
```

Recommendation:

Configure the device with management IP address and mask values.

Syslogs:

322004

```
-----  
Name: passenger-flow-failed  
Passenger flow processing error:  
    This counter is incremented when the security appliance receives a tunnel IP packet and  
    an error is encountered during the passenger IP packet processing. The packet is dropped.
```

Recommendation:

No action required.

Syslogs:

None

```
-----
```

Name: shunned

Packet shunned:

This counter will increment when a packet is received which has a source IP address that matches a host in the shun database.

Recommendation:

No action required.

Syslogs:

401004

-----  
Name: rm-conn-limit

RM connection limit reached:

This counter is incremented when the maximum number of connections for a context or the system has been reached and a new connection is attempted.

Recommendation:

The device administrator can use the commands 'show resource usage' and 'show resource usage system' to view context and system resource limits and 'Denied' counts and adjust resource limits if desired.

Syslogs:

321001

-----  
Name: rm-conn-rate-limit

RM connection rate limit reached:

This counter is incremented when the maximum connection rate for a context or the system has been reached and a new connection is attempted.

Recommendation:

The device administrator can use the commands 'show resource usage' and 'show resource usage system' to view context and system resource limits and 'Denied' counts and adjust resource limits if desired.

Syslogs:

321002

-----  
Name: np-socket-closed

Dropped pending packets in a closed socket:

If a socket is abruptly closed, by the user or software, then any pending packets in the pipeline for that socket are also dropped. This counter is incremented for each packet in the pipeline that is dropped.

Recommendation:

It is common to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of socket-based applications, then this may be caused by a software defect. Contact the Cisco TAC to investigate the issue further.

Syslogs:

None.

```
-----  
Name: mp-pf-queue-full  
Port Forwarding Queue Is Full:  
    This counter is incremented when the Port Forwarding application's internal queue  
is full and it receives another packet for transmission.
```

Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

Syslogs:

None.

```
-----  
Name: ssm-dpp-invalid  
Invalid packet received from SSM card:  
    This counter only applies to the ASA 5500 series adaptive security appliance. It is  
incremented when the security appliance receives a packet from the internal data plane  
interface but could not find the proper driver to parse it.
```

Recommendation:

The data plane driver is dynamically registered depending on the type of SSM installed in the system. So this could happen if data plane packets arrive before the security appliance is fully initialized. This counter is usually 0. You should not be concerned if there are a few drops. However, if this counter keeps rising when system is up and running, it may indicate a problem. Please contact Cisco Technical Assistance Center (TAC) if you suspect it affects the normal operation of your the security appliance.

Syslogs:

None.

```
-----  
Name: ssm-asdp-invalid  
Invalid ASDP packet received from SSM card:  
    This counter only applies to the ASA 5500 series adaptive security appliance. It is  
incremented when the security appliance receives an ASA SSM Dataplane Protocol (ASDP)  
packet from the internal data plane interface, but the driver encountered a problem when  
parsing the packet. ASDP is a protocol used by the security appliance to communicate with  
certain types of SSMs, like the CSC-SSM. This could happen for various reasons, for example  
ASDP protocol version is not compatible between the security appliance and SSM, in which  
case the card manager process in the control plane issues system messages and CLI warnings  
to inform you of the proper version of images that need to be installed; the ASDP packet  
belongs to a connection that has already been terminated on the security appliance; the  
security appliance has switched to the standby state (if failover is enable) in which case  
it can no longer pass traffic; or any unexpected value when parsing the ASDP header and  
payload.
```

Recommendation:

The counter is usually 0 or a very small number. But user should not be concerned if the counter slowly increases over the time, especially when there has been a failover, or you have manually cleared connections on the security appliance via CLI. If the counter increases drastically during normal operation, please contact Cisco Technical Assistance Center (TAC).

Syslogs:

421003  
421004



```
-----  
Name: ssm-app-request  
Service module requested drop:  
    This counter only applies to the ASA 5500 series adaptive security appliance. It is  
    incremented when the application running on the SSM requests the security appliance to drop  
    a packet.
```

Recommendation:

More information could be obtained by querying the incident report or system messages generated by the SSM itself. Please consult the documentation that comes with your SSM for instructions.

Syslogs:

None.

```
-----  
Name: ssm-app-fail  
Service module is down:  
    This counter only applies to the ASA 5500 series adaptive security appliance. It is  
    incremented when a packet to be inspected by the SSM is dropped because the SSM has become  
    unavailable. Some examples of this are: software or hardware failure, software or signature  
    upgrade, or the module being shut down.
```

Recommendation:

The card manager process running in the security appliance control plane would have issued system messages and CLI warning to inform you of the failure. Please consult the documentation that comes with the SSM to trouble shoot the SSM failure. Contact Cisco Technical Assistance Center (TAC) if needed.

Syslog:

None.

```
-----  
Name: wccp-return-no-route  
No route to host for WCCP returned packet:  
    This counter is incremented when a packet is returned from the Cache Engine and the  
    security appliance does not find a route for the original source of the packet.
```

Recommendation:

Verify that a route exists for the source ip address of the packet returned from Cache Engine.

Syslogs:

None.

```
-----  
Name: wccp-redirect-no-route  
No route to Cache Engine:  
    This counter is incremented when the security appliance tries to redirect a packet and  
    does not find a route to the Cache Engine.
```

Recommendation:

Verify that a route exists for Cache Engine.

Syslogs:

None.

```
-----
Name: telnet-not-permitted
Telnet not permitted on least secure interface:
    This counter is incremented and packet is dropped when the appliance receives a TCP SYN
    packet attempting to establish a TELNET session to the appliance and that packet was
    received on the least secure interface.

Recommendation:
    To establish a TELNET session to the appliance via the least secure interface, first
    establish an IPSec tunnel to that interface and then connect the TELNET session over that
    tunnel.

Syslogs:
    402117
-----
```

```
-----
Name: ipv6-sp-security-failed
IPv6 slowpath security checks failed:
    This counter is incremented and the packet is dropped for one of the following reasons:
1) IPv6 through-the-box packet with identical source and destination address.
2) IPv6 through-the-box packet with linklocal source or destination address.
3) IPv6 through-the-box packet with multicast destination address.

Recommendation:
    These packets could indicate malicious activity, or could be the result of a
    misconfigured IPv6 host. Use the packet capture feature to capture type asp packets, and
    use the source MAC address to identify the source.

Syslogs:
    For identical source and destination address, syslog 106016, else none.
-----
```

```
-----
Name: ipv6-eh-inspect-failed
IPv6 extension header is detected and denied:
    This counter is incremented and packet is dropped when the appliance receives a IPv6
    packet but extension header could not be inspected due to memory allocation failed.

Recommendation:
    Also check 'show memory' output to make sure appliance has enough memory to operate.

Syslogs:
    None
-----
```

```
-----
Name: ipv6-bad-eh
Bad IPv6 extension header is detected and denied:
    This counter is incremented and packet is dropped when the appliance receives a IPv6
    packet with bad extension header.

Recommendation:
    Check 'verify-header type' of 'parameters' in 'policy-map type ipv6'. Remove 'verify-header
    type' if the header conformance can be skipped.

Syslogs:
-----
```

325005

```
-----  
Name: ipv6-bad-eh-order  
IPv6 extension headers not in proper order is detected and denied:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with extension headers not in proper order.  
  
Recommendation:  
Check 'verify-header order' of 'parameters' in 'policy-map type ipv6'. Remove 'verify-header  
order' if the header order can be arbitrary.  
  
Syslogs:  
    325005
```

```
-----  
Name: ipv6-mobility-denied  
IPv6 mobility extension header is denied by user configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with mobility extension header which is denied by the user configuration rule.  
  
Recommendation:  
    Check action of 'match header mobility' in 'policy-map type ipv6'. Remove action 'drop'  
if mobility should be allowed.  
  
Syslogs:  
    325004
```

```
-----  
Name: ipv6-mobility-type-denied  
IPv6 mobility type extension header is denied by user configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with mobility type extension header which is denied by the user configuration rule.  
  
Recommendation:  
    Check action of 'match header mobility type' in 'policy-map type ipv6'. Remove action  
'drop' if mobility should be allowed.  
  
Syslogs:  
    325004
```

```
-----  
Name: ipv6-fragment-denied  
IPv6 fragmentation extension header is denied by user configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with fragmentation extension header which is denied by the user configuration rule.  
  
Recommendation:  
    Check action of 'match header fragmentation' in 'policy-map type ipv6'. Remove action  
'drop' if fragmentation should be allowed.  
  
Syslogs:  
    325004
```

```
-----  
Name: ipv6-routing-type-denied  
routing type is denied by IPv6 extension header configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with routing type extension header which is denied by the user configuration rule.  
  
Recommendation:  
    Check action of 'match header routing-type' in 'policy-map type ipv6'. Remove action  
'drop' if routing-type should be allowed.  
  
Syslogs:  
    325004
```

```
-----  
Name: ipv6-eh-count-denied  
IPv6 extension headers exceeding configured maximum extension headers is denied:  
extension header count is denied by IPv6 extension header configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with fragmentation extension header which is denied by the user configuration rule.  
  
Recommendation:  
    Check action of 'match header fragmentation' in 'policy-map type ipv6'. Remove action  
'drop' if fragmentation should be allowed.  
  
Syslogs:  
    325004
```

```
-----  
Name: ipv6-dest-option-denied  
destination-option is denied by IPv6 extension header configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with destination-option extension header which is denied by the user configuration  
rule.  
  
Recommendation:  
    Check action of 'match header destination-option' in 'policy-map type ipv6'. Remove  
action 'drop' if destination-option should be allowed.  
  
Syslogs:  
    325004
```

```
-----  
Name: ipv6-hop-by-hop-denied  
IPv6 hop-by-hp extension header is denied by user configuration:  
    This counter is incremented and packet is dropped when the appliance receives a IPv6  
packet with hop-by-hop extension header which is denied by the user configuration rule.  
  
Recommendation:  
    Check action of 'match header hop-by-hop' in 'policy-map type ipv6'. Remove action  
'drop' if hop-by-hop should be allowed.  
  
Syslogs:  
    325004  
-----
```

Name: ipv6-esp-denied

ESP is denied by IPv6 extension header configuration:

This counter is incremented and packet is dropped when the appliance receives a IPv6 packet with ESP extension header which is denied by the user configuration rule.

Recommendation:

Check action of 'match header esp' in 'policy-map type ipv6'. Remove action 'drop' if ESP should be allowed.

Syslogs:

325004

-----  
Name: ipv6-ah-denied

AH is denied by IPv6 extension header configuration:

This counter is incremented and packet is dropped when the appliance receives a IPv6 packet with AH extension header which is denied by the user configuration rule.

Recommendation:

Check action of 'match header ah' in 'policy-map type ipv6'. Remove action 'drop' if AH should be allowed.

Syslogs:

325004

-----  
Name: channel-closed

Data path channel closed:

This counter is incremented when the data path channel has been closed before the packet attempts to be sent out through this channel. Recommendation:

It is normal in multi-processor system when one processor closes the channel (e.g., via CLI), and another processor tries to send a packet through the channel.

Syslogs:

None

-----  
Name: dispatch-decode-err

Dispatch decode error:

This counter is incremented when the packet dispatch module finds an error when decoding the frame. An example is an unsupported packet frame. Recommendation:

Verify the packet format with a capture tool.

Syslogs:

None

-----  
Name: cp-event-queue-error

CP event queue error:

This counter is incremented when a CP event queue enqueue attempt has failed due to queue length exceeded. This queue is used by the data-path to punt packets to the control-point for additional processing. This condition is only possible in a multi-processor environment. The module that attempted to enqueue the packet may issue it's own packet specific drop in response to this error. Recommendation:

While this error does indicate a failure to completely process a packet, it may not adversely affect the connection. If the condition persists or connections are adversely affected contact the Cisco Technical Assistance Center (TAC). Syslogs:

None

```
-----  
Name: host-limit  
Host limit exceeded:  
    This counter is incremented when the licensed host limit is exceeded.
```

```
Recommendation:  
    None.
```

```
Syslogs:  
    450001
```

```
-----  
Name: cp-syslog-event-queue-error  
CP syslog event queue error:  
    This counter is incremented when a CP syslog event queue enqueue attempt has failed  
due to queue length exceeded. This queue is used by the data-path to punt logging  
events to the control-point when logging destinations other than to a UDP server are  
configured. This condition is only possible in a multi-processor environment.
```

```
Recommendation:  
    While this error does indicate a failure to completely process a logging event,  
logging to UDP servers should not be affected. If the condition persists consider  
lowering the logging level and/or removing logging destinations or contact the Cisco  
Technical Assistance Center (TAC).  
Syslogs:  
    None
```

```
-----  
Name: dispatch-block-alloc  
Dispatch block unavailable:  
    This counter is incremented and the packet is dropped when the appliance could not  
allocate a core local block to process the packet that was received by the interface  
driver.
```

```
Recommendation:  
    This may be due to packets being queued for later processing or a block leak. Core  
local blocks may also not be available if they are not replenished on time by the free  
resource rebalancing logic. Please use "show blocks core" to further diagnose the  
problem.
```

```
Syslogs:  
    None
```

```
-----  
Name: dispatch-queue-limit  
Dispatch queue limit reached:  
    There are 32K load balancer queues that a packet could be hashed to. Each queue has  
a limit of 1000 packets. When more packets are attempted, tail drop occurs and this  
counter is incremented.
```

```
Recommendation:  
    If this happens excessively, find out which queues are affected and the connections  
hashing to that queue. Send this information to development
```

```
Syslogs:  
    None
```

Name: async-lock-queue-limit  
Async lock queue limit exceeded:  
Each async lock working queue has a limit of 1000. When more SIP packets are attempted to be dispatch to the work queue, packet will be dropped.  
Recommendation:  
Only SIP traffic may be dropped. When SIP packets have the same parent lock and they can be queued into the same async lock queue, thus may result into blocks depletion, because only single core is handling all the media. If a SIP packet attempts to be queued when the size of the async lock queue exceeds the limit, the packet will be dropped.  
Syslogs:  
None.

-----  
Name: security-profile-not-used  
Security-profile not used:  
This traffic does not use a security-profile. Traffic through ASA 1000V is expected to use a security-profile configured on Nexus 1000V.  
Recommendation:  
Check the port-profile configuration on the Nexus 1000V with "show port-profile" and verify that a security-profile is configured for each port-profile redirecting traffic to ASA 1000V, and that security-profile names match between Nexus 1000V and ASA 1000V. Verify that security-profiles are associated with the inside interface using "service-interface security-profile all <inside\_interface\_name>" on ASA 1000V. Use "show vsn port" on Nexus 1000V and "show vsn security-profile" on ASA 1000V to verify that security-profiles have matching ID values on both devices.  
Syslogs:  
None.

-----  
Name: security-profile-not-matched  
Security-profile not matched:  
This traffic contains a security-profile ID that does not match a security-profile on ASA 1000V.  
Recommendation:  
Check the port-profile configuration on the Nexus 1000V with "show port-profile" and verify that a security-profile is configured for each port-profile redirecting traffic to ASA 1000V, and that security-profile names match between Nexus 1000V and ASA 1000V. Verify that security-profiles are associated with the inside interface using "service-interface security-profile all <inside\_interface\_name>" on ASA 1000V. Use "show vsn port" on Nexus 1000V and "show vsn security-profile" on ASA 1000V to verify that security-profiles have matching ID values on both devices.  
Syslogs:  
None.

-----  
Name: loopback-lock-failed  
Loopback lock failed:  
This counter is incremented and the packet is dropped when packets are sent from one context of the appliance to another context through a shared interface and the loopback queue has failed to acquire a lock.  
Recommendations:  
This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

Syslogs:  
None

-----  
Name: loopback-ifc-not-found

Loopback output interface not found:

This counter is incremented and the packet is dropped when packets are sent from one context of the appliance to another context through a shared interface, and the output interface is not found by the loopback queue.

Recommendations:

This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

Syslogs:  
None

-----  
Name: loopback-count-exceeded

Loopback count exceeded:

This counter is incremented and the packet is dropped when a packet is sent from one context of the appliance to another context through a shared interface, but this packet has exceeded the number of times it is allowed to queue to the loopback queue.

Recommendations:

Check the context configuration for each context. The packet is entering a loop in the context configurations so that it is stuck between contexts, and is repeatedly put into the loopback queue.

Syslogs:  
None

-----  
Name: ike-sa-rate-limit

IKE need SA indication per SA rule rate limit exceeded:

This counter will increment when the appliance attempts to send a message indicating that a new SA is needed to a rate-limited control point service routine and the rate limit (per/second) is now being exceeded. The current rate is one message every two seconds.

Recommendation:

This counter is informational and the behavior expected. The packet will be dropped.

Syslogs:  
None

-----  
Name: ike-sa-global-rate-limit

IKE need SA indication global rate limit exceeded:

This counter will increment when the appliance attempts to send a message indicating that a new SA is needed to a rate-limited control point service routine and the global rate limit (per/second) is now being exceeded. The current rate is ten message per second.



Recommendation:  
This counter is informational and the behavior expected. The packet will be dropped.

Syslogs:  
None

-----  
Name: backplane-channel-null  
Backplane channel null:  
The card backplane channel was NULL. This may happen because the channel was not initialized correctly and had to be closed. ASA will drop the packet.

Recommendation:  
This should not happen. Contact Cisco TAC for assistance.

Syslogs:  
None.

-----  
Name: unable-to-replicate-packets  
Packet dropped and not replicated due to resource limitation:  
In case of shared interface, we need to loopback multicast and broadcast traffic. When system resource 'packet block extension memory' limitation is reached, this counter will be incremented, the packet will be dropped and the packet will not be replicated to other contexts.

Recommendation:  
- Observe if free system memory is low.

Syslogs:  
None

-----  
Name: inspect-scansafe-server-not-reachable  
Scansafe server not reachable:  
This counter is incremented when the security appliance finds scansafe cloud down. The packet is dropped and the connection is closed.

Recommendation:  
Verify if the configured scansafe servers are reachable from the security appliance.

Syslogs:  
775002.

-----  
Name: inspect-scansafe-public\_key\_not\_configured  
Scansafe public key not configured:  
This counter is incremented when the scansafe public key is not configured. The packet is dropped and the connection is closed.

Recommendation:  
Verify if the configured scansafe public key is configured on the security appliance.

Syslogs:  
775002.

```
-----
Name: inspect-scansafe-license-key-not-configured
Scansafe license key not configured:
    This counter is incremented when the scansafe license key is not configured. The packet
    is dropped and the connection is closed.

Recommendation:
    Verify if the configured scansafe license key is configured on the security appliance.

Syslogs:
    775002.

-----
Name: inspect-scansafe-encoding-failed
Inspect scansafe header encoding failed :
    This counter is incremented when the base64 encoding of user and group name is failed.
    The packet is dropped and connection is closed.

Syslogs:
    775002.

-----
Name: inspect-scansafe-hdr-encryption-failed
Inspect scansafe header encryption failed:
    This counter is incremented when the encryption of scansafe header is failed. The
    packet is dropped and connection is closed.

Syslogs:
    775002.

-----
Name: inspect-scansafe-max-conn-reached
Inspect scansafe max allowed connections reached:
    This counter is incremented when we get a new connection and the maximum allowed
    concurrent scansafe connection for the platform is already reached. The packet is dropped
    and connection is closed.

Syslogs:
    775002.

-----
Name: inspect-scansafe-duplicate-conn
Inspect scansafe duplicate connection:
    This counter is incremented when duplicate connection with the same source ip address
    and port. This packet will be dropped and connection will be closed.

Syslogs:
    775002.

-----
Name: np-socket-lock-failure
Dropped pending packets due to a failed attempt to get an internal socket lock:
    This error occurs if an attempt to grab an internal socket lock fails.
```

## Recommendation:

This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

## Syslogs:

None.

## Name: mp-service-inject-failed

SERVICE Module failed to inject a packet:

This error occurs if an attempt to inject a packet via the SERVICE Module fails.

## Recommendation:

None.

## Syslogs:

None.

## Name: same-physical-interface

Same input and output physical interface:

A flow cannot use the same physical interface for input and output on ASA 1000V.

## Recommendation:

Check the NAT and routing policies configured on ASA 1000V. Use ASA 1000V "packet-tracer" command to determine which security-profiles are used based on the NAT and routing policies configured. Use "show running-config service-interface" to display the association between the physical interfaces and the configured security-profiles.

## Syslogs:

None.

## Name: vPath-license-failure

Packet dropped due to vPath license failure:

Traffic is dropped due to licensing failure for ASA 1000V.

## Recommendation:

Check Nexus 1000V and verify that there are sufficient ASA 1000V licenses installed to support all ASA 1000V virtual machines in use. Use "show license" to check the available licenses for ASA 1000V and use "show license usage" to check the status of them.

## Syslogs:

4450002.

## Name: nat-64-or-46-conversion-fail

IPv6 to IPv4 or vice-versa conversion failure:

This condition occurs when there is a failure in conversion of IPv6 traffic to IPv4 or vice-versa.

## Recommendation:

Verify if the NAT64 or NAT46 policies are configured properly.

## Syslogs:

None.

```
-----  
Name: cmd-invalid-encap  
Invalid Encapsulation:  
    This counter is incremented when the security appliance receives a invalid CMD packet.  
The packet is dropped.
```

```
Recommendation:  
    Verify that directly connected CMD supported devices have proper CMD settings.
```

```
Syslogs:  
    None.
```

```
-----  
Name: ifc-not-cmd-enabled  
Interface not CMD configured  
    This counter is incremented when the security appliance receives a CMD packet on an  
interface not configured to receive one. The packet is dropped.
```

```
Recommendation:  
    Verify that interface under consideration has proper CMD settings.
```

```
Syslogs:  
    None.
```

```
-----  
Name: cluster-not-owner  
Cluster not owner:  
    A Cluster data packet was received without a flow.
```

```
Recommendation:  
    None.
```

```
Syslogs:  
    None.
```

```
-----  
Name: cluster-invalid-owner  
Cluster invalid owner:  
    A Cluster data packet was received when the owner is not in the cluster.
```

```
Recommendation:  
    None.
```

```
Syslogs:  
    None.
```

```
-----  
Name: cluster-stub-uninterested  
Cluster stub uninterested:  
    A Cluster data packet was received when there is no owner or director.
```

```
Recommendation:  
    None.
```

```
Syslogs:  
    None.
```

```
Name: cluster-ccl-cfull-sent
CLU FULL sent:
  A Cluster data packet was received over CCL and full flow is built on a new owner. This
  packet is no longer needed.
Recommendation:
  None.
Syslogs:
  None.
```

```
-----
Name: cluster-ccl-backup
Cluster CCL backup:
  A Cluster data packet was received over CCL on a backup unit, when it should have been
  received on the owner+director unit.
Recommendation:
  None.
Syslogs:
  None.
```

```
-----
Name: cluster-stub-to-full
Cluster stub to full flow:
  A Cluster packet was received on director, stub flow was converted to full flow. Drop
  this packet and wait for retransmission.
Recommendation:
  None.
Syslogs:
  None.
```

```
-----
Name: cluster-ccl-unknown
Cluster CCL unknown role:
  A Cluster data packet was received over CCL and no matching flow is found, and unit has
  unknown role.
Recommendation:
  None.
Syslogs:
  None.
```

```
-----
Name: cluster-ccl-unknown-stub
Cluster CCL unknown stub:
  A Cluster data packet was received over CCL and a matching stub flow found, but unit has
  unknown role.
Recommendation:
  None.
Syslogs:
  None.
```

```
-----
Name: cluster-owner-update
Cluster owner update:
  A Cluster data packet was received updating the flow owner.
Recommendation:
```

None.  
Syslogs:  
None.

-----  
Name: cluster-invalid-pkt  
Cluster rcvd invalid packet:  
An invalid cluster packet was received.  
Recommendation:  
None.  
Syslogs:  
None.

-----  
Name: cluster-no-msgp  
Cluster unit is out of message descriptor:  
Cluster may be oversubscribed because cluster is under high pressure to send out  
cluster logic update (CLU) message.  
Recommendation:  
This behavior is expected as cluster is oversubscribed and is under high pressure  
to send out cluster logic update (CLU) message. Please avoid oversubscribing the  
cluster.  
Syslogs:  
None.

-----  
Name: cluster-slave-ignored  
Flow matched a cluster drop-on-slave classify rule:  
A multicast routing packet was received on a L3 cluster interface when the unit was  
a slave. Only a master unit is permitted to process these packets.  
Recommendation:  
This counter is informational and the behavior expected. The packet is processed by  
master.  
Syslogs:  
None.

-----  
Name: cluster-non-owner-ignored  
Flow matched a cluster drop-on-non-owner classify rule:  
A multicast data packet was received on a L3 cluster interface when the unit was  
not an elected owner unit. Only an elected owner unit is permitted to process these  
packets.  
Recommendation:  
This counter is informational and the behavior expected. The packet is processed by  
one elected owner unit.  
Syslogs:  
None.

-----  
Name: nat-xlate-failed  
NAT failed:  
Failed to create an xlate to translate an IP or transport header.  
Recommendation:

If NAT is not desired, disable "nat-control". Otherwise, use the "static", "nat" or "global" command to configure NAT policy for the dropped flow. For dynamic NAT, ensure that each "nat" command is paired with at least one "global" command. Use "show nat" and "debug pix process" to verify NAT rules.

Syslogs:

305005, 305006, 305009, 305010, 305011, 305012

-----  
Name: nat-rpf-failed

NAT reverse path failed:

Rejected attempt to connect to a translated host using the translated host's real address.

Recommendation:

When not on the same interface as the host undergoing NAT, use the mapped address instead of the real address to connect to the host. Also, enable the appropriate inspect command if the application embeds IP address.

Syslogs:

305005

-----  
Name: nat-cluster-input

NAT invalid input:

An input value for clustering communication contains an unexpected or invalid value.

Recommendation:

This could be an internal software error. Contact Cisco Systems.

Syslogs:

None.

-----  
Name: nat-no-xlate-to-pat-pool

NAT no xlate to pat pool:

No pre-existing xlate found for a connection with a destination matching a mapped address in a PAT pool.

Recommendation:

Configure static PAT if access is desired.

Syslogs:

None.

-----  
Name: cluster-peer-mcast-ignored

Flow matched a cluster peer mcast data traffic classify rule:

A multicast data packet was received on a L3 cluster interface when it is from a cluster peer unit corresponding interface. This is a packet flooded back from L3 subnet.

Recommendation:

This counter is informational and the behavior expected. The packet has been forwarded out of the cluster and should be ignored by cluster.

Syslogs:

None.

-----  
Name: cluster-dispatch-queue-fail

Cluster failed to enqueue into global dispatch work queue:  
 A forwarded data packet failed to enqueue into global dispatch work queue.  
 Recommendation:  
 This could be an internal software error. Contact Cisco Systems.  
 Syslogs:  
 None.

-----  
 Name: cluster-dir-flow-create-fail  
 Cluster director failed to create director flow:  
 Director is trying to create a stub flow but failed due to resource limitation. The resource limit may be either:  
 1) system memory  
 2) packet block extension memory  
 3) system connection limit  
 Causes 1 and 2 will occur simultaneously with flow drop reason "No memory to complete flow".  
 Recommendation:  
 - Observe if free system memory is low.  
 - Observe if flow drop reason "No memory to complete flow" occurs.  
 - Observe if connection count reaches the system connection limit with the command "show resource usage".  
 Syslogs:  
 None

-----  
 Name: cluster-early-sec-chk-fail  
 Cluster early security check has failed:  
 Director applied early security check has failed due to ACL, WCCP redirect, TCP-intercept or IP option.  
 Recommendation:  
 This counter is informational and the behavior expected. The packet will be dropped.  
 Syslogs:  
 None.

-----  
 Name: cluster-queued-ccl-unknown  
 Cluster CCL unknown stub:  
 A queued cluster data packet received over ccl was processed but unit has unknown role.  
 Recommendation:  
 None.  
 Syslogs:  
 None.

-----  
 Name: cluster-dir-nat-changed  
 Cluster director NAT action changed:  
 Cluster director NAT action has changed due to NAT policy change, update or expiration before queued ccl data packet can be processed.  
 Recommendation:  
 This counter is informational and the behavior expected. The packet will be dropped.  
 Syslogs:  
 None.



```

-----
Name: cluster-dir-invalid-ifc
Cluster director has packet with invalid ingress/egress interface:
    Cluster director has processed a previously queued packet with invalid    ingress
and/or egress interface. This is a result of interface removal    (through CLI) before the
packet can be processed.
Recommendation:
    This counter is informational and the behavior expected. The packet will    be dropped.
Syslogs:
    None.

```

```

-----
Name: cluster-slave-data-ifc-not-ready
Cluster data interface on slave unit is not ready (some data interfaces are    in different
state from the master). For a L3 interface that is not    management-only, before the data
interface is ready the slave cannot own    any connection on this L3 interface. Packets
must be owned by the slave    are dropped. From the box packets are also dropped before
slave's data    interface becomes ready. This drop will not occur after slave's data
interface is ready and the slave fully joins the cluster.
Recommendation:
    This counter is informational and the behavior expected. The packet will    be dropped.
Syslogs:
    None.

```

```

-----
Name: nat-cluster-pool-update-fail
Cluster master failed to send NAT pool update to slave:
    Cluster master has failed to send NAT pool update to slave unit. This    drop will
increase if system resources is low.
Recommendation:
    - Observe if free system memory is low.
    - Observe if "SEC_NAT_SEND_NO_BUFFER" counter is increasing.
Syslogs:
    None.

```

```

-----
Name: nat-cluster-invalid-unxlate-redirect
Cluster member dropped an invalid NAT untranslate redirect packet from peer:
    Cluster member received a NAT untranslate packet from peer. However this    member does
not own the NAT address pool the packet belongs to.
Recommendation:
    This counter is a temporal condition after a cluster member failure.    However, if
this counter is incremented continuously, it could be an    internal software error.
Contact Cisco Systems in such case.Syslogs:
    None.

```

```

-----
Name: platform-unlicensed
ASAv platform is unlicensed:
    The ASAv is not licensed. All data traffic traversing the appliance will be    dropped
until the ASAv is licensed.
Recommendation:

```

Check the platform license state with "show activation-key" and install the appropriate ASAv platform license.

Syslogs:  
None.

-----  
Name: cluster-forward-error  
Cluster member failed to send data packet over CCL:  
Cluster member failed to transmit control packet over the CCL link.  
Recommendation:  
None.  
Syslogs:  
None.

-----  
Name: cluster-tp-version-incompatible  
The packet contains an incompatible transport protocol:  
The transport protocol of the packet contains a transport protocol that is not compatible.  
Recommendation:  
None.  
Syslogs:  
None.

-----  
Name: cluster-ip-version-error  
IP version mismatch between layer-2 and layer-3 headers:  
The IP protocol versions in layer-2 and layer-3 headers mismatch  
Recommendation:  
None.  
Syslogs:  
None.

-----  
Name: cluster-tp-sender-myself  
DP message over CCL from a unit with same ID as myself:  
The sender information in the transport header indicates that the sender is myself, which could happen if two clusters (with overlapping IDs) exist on the same network segment.  
Recommendation:  
None.  
Syslogs:  
None.

-----  
Name: cluster-ttl-expired  
TTL of the packet has expired:  
Maximum TTL value has exceeded for this packet.  
Recommendation:  
None.  
Syslogs:  
None.

```
-----
Name: cluster-ttl-invalid
TTL of the packet is invalid:
    The TTL value of the packet is not a valid value.
Recommendation:
    None.
Syslogs:
    None.

-----
Name: cluster-non-ip-pkt
Layer 3 protocol of the packet is not IP:
    The packet is not IPv4, IPv6 or an ARP packet.
Recommendation:
    None.
Syslogs:
    None.

-----
Name: cluster-bad-tp-pkt
Failed to fetch the transport layer header of the packet:
    Fetching the transport layer header of the packet failed.
Recommendation:
    None.
Syslogs:
    None.

-----
Name: cluster-bad-trailer
Failed to fetch the trailer of the packet:
    Fetching the trailer of the packet failed.
Recommendation:
    None.
Syslogs:
    None.

-----
Name: cluster-frag-owner-query-error
Cluster fragment failed to query flow director for flow owner:
    A failure either when forwarding first fragment to flow director or      fragment chain
reinsert failure.
Recommendation:
    None.
Syslogs:
    None.

-----
Name: cluster-frag-error
The fragment is not formatted correctly:
    The fragment is not formatted correctly and cannot be processed or      forwarding to the
Fragment Owner failed.
Recommendation:
    None.
Syslogs:
```

None.

```
-----
Name: cluster-bad-ifc-goid-in-trailer
Failed to find ifc from goid in the trailer:
    The goid extracted from the trailer does not yield a    valid real ifc.
Recommendation:
    None.
Syslogs:
    None.
```

```
-----
Name: cluster-bad-trailer-tlv
Cluster CCL packet trailer has incorrect tlv:
    Packet received on the Cluster CCL interface has incorrect    trailer tlv option.
Recommendation:
    None.
Syslogs:
    None.
```

```
-----
Name: rule-transaction-in-progress
Initial rule transaction compiling in progress:
    This reason is given for dropping a packet when the transactional    commit mode is
used and the initial rule transaction compiling is still    in progress. All
through-the-box traffic is dropped when the ASA is    in this state.
Recommendation:
    This is a temporal condition that happens once during the system    initialization or
the security context initialization. The duration of    this condition depends on the
number of rules, such as ACLs or NAT    rules, in the configuration.
Syslogs:
    None.
```

```
-----
Name: mcast-in-nonactive-device
The device in HA mode received a multicast packet when it is not in active state:
    This reason is given for dropping a packet when the device is in HA mode    and is
currently not in active state and a multicast packet is received.    As the HA device can
only process the multicast in the active state, the received packet    will be dropped.
Recommendation:
    None.
Syslogs:
    None.
```

```
-----
Name: cluster-semi-scale-not-ready
Semi scalable owner flow is not ready yet:
    Bulk sync has not elected a valid new owner    for this semi-scalable flow yet.
Recommendation:
    None.
Syslogs:
    None.
```

```
-----
Name: cluster-app-no-forward
Application packet not allowed to be forwarded:
    Some applications might have problems if their packets are forwarded.
Recommendation:
    None.
Syslogs:
    None.

-----
Name: block-no-prepend
Module does not have enough space to insert header:
    This counter will increment when there is not enough space before the packet data to
    prepend a header in order to put the packet onto the network.
Recommendation:
    This indicates that a software error should be reported to the Cisco TAC.

Syslogs:
    None.

-----
Name: tcp-proxy-no-inspection
TCP proxy no inspection:
    This counter is incremented and the packet is dropped when tcp proxy couldn't pass the
    packets for inspection.

Recommendations:
    None

Syslogs:
    None

-----
Name: tcp-proxy-3whs-failed
TCP proxy three way handshake failed:
    This counter is incremented and the packet is dropped when the TCP proxy encounters a
    error during three way handshake.
Recommendations:
    None

Syslogs:
    None

-----
Name: tcp-proxy-mixed-mode-failed
TCP proxy mixed mode failed:
    This counter is incremented and the packet is dropped when the TCP proxy encounters a
    error during mixed mode operation, transitioning from light weight TCP proxy to full mode
    TCP proxy.

Recommendations:
    None

Syslogs:
    None
```

```
-----  
Name: tcp-proxy-mixed-mode-drop  
TCP proxy mixed mode drop:  
    This counter is incremented and the light weight proxy tx queue is cleared when the TCP proxy is transitioning from light weight TCP proxy to full TCP proxy. We enqueue a FIN segment when inspection is in progress. When we trigger full proxy, this queue should be cleared.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: tcp-proxy-ooo-drop  
TCP proxy OOO:  
    This counter is incremented and the packet is dropped when the TCP proxy receives out of order packets for processing in lightweight mode.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: tcp-proxy-retransmit-drop  
TCP proxy retransmit:  
    This counter is incremented and the packet is dropped when tcp proxy received a retransmit packet that is still being inspected.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: tcp-proxy-fp2lw-enqueue-limit-drop  
TCP proxy FP2LW enqueue limit:  
    This counter is incremented and the packet is dropped when tcp proxy receives a packet while trying to bypass Full Proxy and proxy layer has reached its enqueue limit.
```

```
Recommendations:  
    None
```

```
Syslogs:  
    None
```

```
-----  
Name: tcp-proxy-null-flow-drop  
TCP proxy NULL flow:
```

This counter is incremented and the packet is dropped when tcp proxy received a packet for a non-existent flow.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-proxy-copy-failed-drop

TCP proxy packet copy failed:

This counter is incremented and the packet is dropped when the tcp proxy was unable to copy a packet since it was unable to allocate a new one.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-proxy-l2-copy-failed-drop

TCP proxy L2 copy failed:

This counter is incremented and the packet is dropped when the tcp proxy was unable to copy L2 header to a packet in Full Proxy mode.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-proxy-invalid-tcp-state-drop

TCP proxy invalid TCP state:

This counter is incremented and the packet is dropped when the TCB is in an invalid state.

Recommendations:

None

Syslogs:

None

-----  
Name: tcp-proxy-invalid-tcp-checksum-drop

TCP proxy invalid TCP checksum:

This counter is incremented and the packet is dropped when the RST/FIN with data packet received with invalid checksum.

Recommendations:

None

Syslogs:

None

-----  
Name: pdts-punt-limit-exceeded

PDTS Punt limit exceeded:

This counter is incremented and the packet dropped when datapath punts packets to inspectors and the no. of packets queued exceeded the maximum limit.

Recommendations:

None

Syslogs:

None

-----  
Name: monitor-only-mode-hdr-mismatch

Monitor-only mode packets:

This counter is incremented and the packet dropped if there is a mismatch in monitor-only mode config and the AFBP header flag.

Recommendations:

None

Syslogs:

None

-----  
Name: ids-pkts-processed

Packets processed in IDS modes:

This counter is incremented after packet processing is complete in inline-tap and passive modes, the packet is dropped after this.

Recommendations:

Expected behavior in these modes, no action required.

Syslogs:

None.

-----  
Name: snort-blist-full

Snort flow block list limit reached:

This counter is incremented and the packet dropped when datapath buffers packets to avoid out-of-order on fast-forwarded flows and the no. of packets queued exceeded the maximum limit.

Recommendations:

None

Syslogs:

None

-----  
Name: pbr-next-hop-same

Drop the packet if next hop of pbr is self:

This counter is incremented and the packet is dropped as the next hop configured on pbr is of connected IP.



## Recommendations:

Do Not add connected ip as next hop in PBR .

## Syslogs:

None.

-----  
Name: object-group-search-threshold-exceeded

object group search threshold exceeded:

This counter is incremented when a packet is checked against an access-list and the number of access-list object-groups that matched the packet exceeds 10000. If this occurs, the packet is dropped. Access-list checks can negatively impact the performance of the device when a packet matches an excessive number of object-groups when object-group-search access-control feature is enabled.

## Recommendations:

Reconfigure the access-list and object-group configuration to ensure that traffic will not match an excess number of object-groups. Usually this problem is triggered by a large number of overlapping or duplicated objects. Examine the traffic being dropped with 'capture asp type asp-drop ogs-match-limit-exceeded', then 'show capture asp'.

## Syslogs:

None.

-----  
Name: reason-info

Preprocessor sending packet info to tracer:

This counter is used internally by snort.

## Recommendations:

None.

## Syslogs:

None.

-----  
Name: session-string

Session debug info:

This counter is used internally by snort.

## Recommendations:

None.

## Syslogs:

None.

-----  
Name: none

Not a Blocking Packet:

This counter is incremented when the packet is not blocked.

## Recommendations:

None.

## Syslogs:

None.

-----  
Name: a-module

Packet is unknown or traced:

This counter is incremented when the packet blocked by an unknown preprocessor.

Recommendations:

None.

Syslogs:

None.

-----  
Name: daq-retry

Wait for re-transmitted packet from DAQ:

This counter is incremented when a packet re-transmission is needed from DAQ.

Recommendations:

None.

Syslogs:

None.

-----  
Name: snort-module

Blocked or blacklisted by snort:

This counter is incremented and the packet is dropped as requested by snort.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:

None.

-----  
Name: appid

Blocked or blacklisted by the AppID preprocessor:

This counter is incremented and the packet is dropped as requested by the AppID preprocessor.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:

None.

-----  
Name: ssl-preproc

Blocked or blacklisted by the SSL preprocessor:

This counter is incremented and the packet is dropped as requested by the SSL preprocessor.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: firewall  
Blocked or blacklisted by the firewall preprocessor:  
This counter is incremented and the packet is dropped as requested by the firewall preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: captive-portal  
Blocked or blacklisted by the captive portal preprocessor:  
This counter is incremented and the packet is dropped as requested by the captive portal preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: safe-search  
Blocked or blacklisted by the safe search preprocessor:  
This counter is incremented and the packet is dropped as requested by the safe search preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: si  
Blocked or blacklisted by the SI preprocessor:  
This counter is incremented and the packet is dropped as requested by the SI preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

```
Name: prefilter
Blocked or blacklisted by the prefilter preprocessor:
    This counter is incremented and the packet is dropped as requested by the prefilter
    preprocessor.
```

```
Recommendations:
    Review the snort output in packet tracer or capture with trace enabled.
```

```
Syslogs:
    None.
```

```
-----
Name: ftp
Blocked or blacklisted by the FTP preprocessor:
    This counter is incremented and the packet is dropped as requested by the FTP
    preprocessor.
```

```
Recommendations:
    Review the snort output in packet tracer or capture with trace enabled.
```

```
Syslogs:
    None.
```

```
-----
Name: stream
Blocked or blacklisted by the stream preprocessor:
    This counter is incremented and the packet is dropped as requested by the stream
    preprocessor.
```

```
Recommendations:
    Review the snort output in packet tracer or capture with trace enabled.
```

```
Syslogs:
    None.
```

```
-----
Name: session-preproc
Blocked or blacklisted by the session preprocessor:
    This counter is incremented and the packet is dropped as requested by the session
    preprocessor.
```

```
Recommendations:
    Review the snort output in packet tracer or capture with trace enabled.
```

```
Syslogs:
    None.
```

```
-----
Name: defragmentation
Blocked or blacklisted by the defragmentation preprocessor:
    This counter is incremented and the packet is dropped as requested by the
    defragmentation preprocessor.
```

```
Recommendations:
    Review the snort output in packet tracer or capture with trace enabled.
```

Syslogs:  
None.

-----  
Name: snort-react  
Blocked or blacklisted by the snort react preprocessor:  
This counter is incremented and the packet is dropped as requested by the snort react preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: snort-response  
Blocked or blacklisted by the snort response preprocessor:  
This counter is incremented and the packet is dropped as requested by the snort response preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: reputation  
Blocked or blacklisted by the reputation preprocessor:  
This counter is incremented and the packet is dropped as requested by the reputation preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: x-link2state  
Blocked or blacklisted by the x-link2state preprocessor:  
This counter is incremented and the packet is dropped as requested by the x-link2state preprocessor.

Recommendations:  
Review the snort output in packet tracer or capture with trace enabled.

Syslogs:  
None.

-----  
Name: back-orifice

Blocked or blacklisted by the back orifice preprocessor:

This counter is incremented and the packet is dropped as requested by the back orifice preprocessor.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:

None.

-----  
Name: smb

Blocked or blacklisted by the SMB preprocessor:

This counter is incremented and the packet is dropped as requested by the SMB preprocessor.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:

None.

-----  
Name: file-process

Blocked or blacklisted by the file process preprocessor:

This counter is incremented and the packet is dropped as requested by the file process preprocessor.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:

None.

-----  
Name: ips-preproc

Blocked or blacklisted by the IPS preprocessor:

This counter is incremented and the packet is dropped as requested by the IPS preprocessor.

Recommendations:

Review the snort output in packet tracer or capture with trace enabled.

Syslogs:

None.

-----  
Name: cluster-ccl-bad-unxlate-redirect

Cluster member dropped an unexpected NAT untranslate redirect packet from peer:

Dynamic PAT pool owner received a NAT untranslate packet from peer. However it matches a director stub flow.

Recommendation:

This counter is a temporal condition after a cluster member failure. However, if this counter is incremented continuously, there could be a timing issue that caused the error. Contact Cisco Systems in such case.

Syslogs:

None.

-----  
Name: cluster-ccl-bad-unxlate-redirect

Cluster member dropped an unexpected NAT untranslate redirect packet from peer:

Dynamic PAT pool owner received a NAT untranslate packet from peer. However it matches a backup stub flow.

Recommendation:

This counter is a temporal condition after a cluster member failure. However, if this counter is incremented continuously, there could be a timing issue that caused the error. Contact Cisco Systems in such case.Syslogs:

None.

-----  
Name: vpn-cflow-fail-due-to-full-flow

Packet dropped due to a conflicting full flow:

This counter is incremented when we fail to create a cluster stub flow in the peer receiving a forwarded VPN decoded packet, because there is already a full flow.

Recommendations:

None.

Syslogs:

None.

-----  
Name: unable-to-create-vpn-fwd-cflow

Packet dropped due to resource limitation:

This counter is incremented when we fail to create a cluster stub flow in the peer receiving a forwarded VPN decoded packet.

Recommendations:

None.

Syslogs:

None.

-----  
Name: unable-to-find-vpn-context

Packet dropped due to failure to find the VPN context:

This counter is incremented when a cluster peer tries to encrypt a packet but fails to get the VPN context.

Recommendations:

None.

Syslogs:

None.

-----  
Name: unable-to-find-owner

Packet dropped due to failure to find the owner:

This counter is incremented when a cluster node fails to find the owner for the connection from VPN director

Recommendations:  
 Check whether the Director node is ready to process queries.

Syslogs:  
 None.

-----  
 Name: invalid-onwer-id-received  
 Packet dropped as invalid owner id received :  
 This counter is incremented when a cluster node gets a invalid owner id from the VPN director.

Recommendations:  
 None.

Syslogs:  
 None.

-----  
 Name: unable-to-add-to-owner-table  
 Packet dropped due to failure to add an entry to the owner table:  
 This counter is incremented when a cluster node fails to add the onwer entry for the connection

Recommendations:  
 None.

Syslogs:  
 None.

-----  
 Name: ike-spi-corrupted-value  
 IKE packet containing corrupted SPI:  
 This counter is incremented and the packet is dropped when SPI consistency checks fail indicating the packet might have been altered in transit.

Recommendations:  
 Check the syslog to get more information about the origin of packet. This situation can be normal and transient. If the drops persist, call TAC to investigate further.

Syslogs:  
 753001

-----  
 Name: ike-spi-cookie-expired  
 IKE packet with expired SPI cookie:  
 This counter is incremented and the packet is dropped when the SPI received in the incoming packet is considered expired.

Recommendations:  
 Check the syslog to get more information about the origin of packet. If this is a valid peer connection, this may be the result of a very long network delay that should be eliminated. If the drops persist, call TAC to investigate further.



```
Syslogs:
    753001
```

```
-----
Name: ha-nlp-invalid-fragments
NLP sending invalid fragments in failover link:
    This counter is incremented and the packet is dropped when NLP tries to send a
    fragmented packet with invalid size through failover link.
```

```
Recommendations:
    None
```

```
Syslogs:
    None
```

```
-----
Name: ha-nlp-lu-link-not-ready
Failover link is not ready for processing NLP packets:
    This counter is incremented and the packet is dropped when NLP tries to send or receive
    a packet however failover link lu status is down.
```

```
Recommendations:
    None
```

```
Syslogs:
    None
```

```
-----
Name: ha-nlp-send-ha-msg-err
Send NLP packet over HA failover link failed:
    This counter is incremented and the packet is dropped when NLP failed to send packet
    through failover link.
```

```
Recommendations:
    Check the show counter result to get more information about the failure.
```

```
Syslogs:
    None
```

## 플로우 삭제 이유

```
-----
Name: tunnel-torn-down
Tunnel has been torn down:
    This counter will increment when the appliance receives a packet associated with an
    established flow whose IPSec security association is in the process of being deleted.
```

```
Recommendation:
    This is a normal condition when the IPSec tunnel is torn down for any reason.
```

Syslogs:  
None

-----  
Name: no-ipv6-ipsec

IPSec over IPv6 unsupported:

This counter will increment when the appliance receives an IPSec ESP packet, IPSec NAT-T ESP packet or an IPSec over UDP ESP packet encapsulated in an IP version 6 header. The appliance does not currently support any IPSec sessions encapsulated in IP version 6.

Recommendation:

None

Syslogs:  
None

-----  
Name: tunnel-pending

Tunnel being brought up or torn down:

This counter will increment when the appliance receives a packet matching an entry in the security policy database (i.e. crypto map) but the security association is in the process of being negotiated; its not complete yet.

This counter will also increment when the appliance receives a packet matching an entry in the security policy database but the security association has been or is in the process of being deleted. The difference between this indication and the 'Tunnel has been torn down' indication is that the 'Tunnel has been torn down' indication is for established flows.

Recommendation:

This is a normal condition when the IPSec tunnel is in the process of being negotiated or deleted.

Syslogs:  
None

-----  
Name: need-ike

Need to start IKE negotiation:

This counter will increment when the appliance receives a packet which requires encryption but has no established IPSec security association. This is generally a normal condition for LAN-to-LAN IPSec configurations. This indication will cause the appliance to begin ISAKMP negotiations with the destination peer.

Recommendation:

If you have configured IPSec LAN-to-LAN on your appliance, this indication is normal and does not indicate a problem. However, if this counter increments rapidly it may indicate a crypto configuration error or network error preventing the ISAKMP negotiation from completing.

Verify that you can communicate with the destination peer and verify your crypto configuration via the 'show running-config' command.

Syslogs:  
None

```
-----  
Name: vpn-handle-error  
VPN handle error:  
    This counter is incremented when the appliance is unable to create a VPN handle because  
    the VPN handle already exists.
```

Recommendation:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of vpn-based applications, then this may be caused by a software defect. Use the following commands to gather more information about this counter and contact the Cisco TAC to investigate the issue further.

```
capture <name> type asp-drop vpn-handle-error  
show asp table classify crypto  
show asp table vpn-context detail
```

Syslogs:

None

```
-----  
Name: vpn-handle-not-found  
VPN handle not found:  
    This counter is incremented when a datagram hits an encrypt, or decrypt operation, and  
    no VPN handle is found for the flow the datagram is on.
```

Recommendation:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of vpn-based applications, then this may be caused by a software defect. Use the following commands to gather more information about this counter and contact the Cisco TAC to investigate the issue further.

```
capture <name> type asp-drop vpn-handle-not-found  
show asp table classify crypto  
show asp table vpn-context detail
```

Syslogs:

None

```
-----  
Name: ipsec-spoof-detect  
IPSec spoof packet detected:  
    This counter will increment when the appliance receives a packet which should have been  
    encrypted but was not. The packet matched the inner header security policy check of a  
    configured and established IPSec connection on the appliance but was received unencrypted.  
    This is a security issue.
```

Recommendation:

Analyze your network traffic to determine the source of the spoofed IPSec traffic.

Syslogs:

402117

```
-----
```

Name: ipsec-detunnel-fail  
IPsec detunnel processing failed:  
This counter will increment when a clear text flow fails IPSec tunnel flow processing.

Recommendation:

Use the following command to look at more specific packet drops.

```
show asp drop
```

Syslogs:

None

-----  
Name: svc-spoof-detect  
SVC spoof packet detected:  
This counter will increment when the security appliance receives a packet which should have been encrypted but was not. The packet matched the inner header security policy check of a configured and established SVC connection on the security appliance but was received unencrypted. This is a security issue.

Recommendation:

Analyze your network traffic to determine the source of the spoofed SVC traffic.

Syslogs:

None

-----  
Name: svc-failover  
An SVC socket connection is being disconnected on the standby unit:  
This counter is incremented for each new SVC socket connection that is disconnected when the active unit is transitioning into standby state as part of a failover transition.

Recommendation:

None. This is part of a normal cleanup of a SVC connection when the current device is transitioning from active to standby. Existing SVC connections on the device are no longer valid and need to be removed.

Syslogs:

None.

-----  
Name: svc-replacement-conn  
SVC replacement connection established:  
This counter is incremented when an SVC connection is replaced by a new connection.

Recommendation:

None. This may indicate that users are having difficulty maintaining connections to the ASA. Users should evaluate the quality of their home network and Internet connection.

Syslog:

722032

-----  
Name: ipsec-selector-failure  
IPSec VPN inner policy selector mismatch detected:

This counter is incremented when an IPSec packet is received with an inner IP header that does not match the configured policy for the tunnel.

Recommendation:

Verify that the crypto ACLs for the tunnel are correct and that all acceptable packets are included in the tunnel identity. Verify that the box is not under attack if this message is repeatedly seen.

Syslogs:

402116

-----  
Name: vpn-context-expired

Expired VPN context:

This counter will increment when the security appliance receives a packet that requires encryption or decryption, and the ASP VPN context required to perform the operation is no longer valid.

Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

Syslogs:

None

-----  
Name: vpn-overlap-conflict

VPN Network Overlap Conflict:

When a packet is decrypted the inner packet is examined against the crypto map configuration. If the packet matches a different crypto map entry than the one it was received on it will be dropped and this counter will increment. A common cause for this is two crypto map entries containing similar/overlapping address spaces.

Recommendation:

Check your VPN configuration for overlapping networks. Verify the order of your crypto maps and use of 'deny' rules in ACLs.

Syslogs:

None

-----  
Name: vpn-lock-error

IPSec locking error:

This counter is incremented when VPN flow cannot be created due to an internal locking error.

Recommendation:

This condition should never be encountered during normal operation and may indicate a software problem with the appliance. Contact the Cisco Technical Assistance Center (TAC) if this error occurs.

Syslogs:

None.

-----  
Name: vpn-reclassify\_failed

The flow could not be reclassified according to existing VPN policies:

When VPN policies change, flows that no longer match those policies are freed as packets arrive for those flows.

Recommendations:

This counter is informational and the behavior expected.

Syslogs:

No new syslogs accompany this event.

-----  
Name: vpn-missing-decrypt

The flow could not be created because its decryption policy was not available:

A VPN flow creation was attempted before its decryption policy was fully initialized. This is a transient condition and will be resolved once the decryption policy completes its installation.

Recommendations:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a traffic disruption, then this may be caused by a misconfiguration or a software defect. Use the following commands to gather more information about this counter and contact the Cisco TAC to investigate the issue further.

```
capture <name> type asp-drop vpn-missing-decrypt
show asp table classify
show asp drop
show tech-support
```

Syslogs:

No new syslogs accompany this event.

-----  
Name: vpn-bad-decrypt-rule

The flow could not be created because a wrong decryption policy was hit:

This is a transient condition when clustering is enabled and vpn-mode is set to distributed.

Recommendations:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a traffic disruption, then this may be caused by a misconfiguration or a software defect. Use the following commands to gather more information about this counter and contact the Cisco TAC to investigate the issue further.

```
show asp drop
show tech-support
```

Syslogs:

No new syslogs accompany this event.

-----  
Name: vpn-invalid-encryption

The flow is dropped because encryption flag was not set:

Recommendations:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a traffic disruption, then this may be caused by a misconfiguration or a software defect. Use the following commands to gather more information about this counter and contact the Cisco TAC to investigate the issue further.

```
show asp drop
show tech-support
```

Syslogs:

No new syslogs accompany this event.

-----  
Name: out-of-memory

No memory to complete flow:

This counter is incremented when the appliance is unable to create a flow because of insufficient memory.

Recommendation:

Verify that the box is not under attack by checking the current connections. Also verify if the configured timeout values are too large resulting in idle flows residing in memory longer. Check the free memory available by issuing 'show memory'. If free memory is low, issue the command 'show processes memory' to determine which processes are utilizing most of the memory.

Syslogs:

None

-----  
Name: parent-closed

Parent flow is closed:

When the parent flow of a subordinating flow is closed, the subordinating flow is also closed. For example, an FTP data flow (subordinating flow) will be closed with this specific reason when its control flow (parent flow) is terminated. This reason is also given when a secondary flow (pin-hole) is closed by its controlling application. For example, when the BYE message is received, the SIP inspection engine (controlling application) will close the corresponding SIP RTP flows (secondary flow).

Recommendation:

None.

Syslogs:

None.

-----  
Name: closed-by-inspection

Flow closed by inspection:

This reason is given for closing a flow due to an error detected during application inspection. For example, if an error is detected during inspecting an H323 message, the corresponding H323 flow is closed with this reason.

Recommendation:

None.

Syslogs:

None.

```
-----
Name: fo-primary-closed
Failover primary closed:
    Standby unit received a flow delete message from the active unit and terminated the
    flow.

Recommendation:
    If the appliance is running stateful failover, then this counter should increment for
    every replicated connection that is torn down on the standby appliance.

Syslogs:
    302014, 302016, 302018

-----
Name: fo-standby
Flow closed by failover standby:
    If a through-the-box packet arrives at an appliance or context is in a Standby state,
    and a flow is created, the packet is dropped and the flow removed. This counter will
    increment each time a flow is removed in this manner.

Recommendation:
    This counter should never be incrementing on the Active appliance or context. However,
    it is normal to see it increment on the Standby appliance or context.

Syslogs:
    302014, 302016, 302018

-----
Name: fo_rep_err
Standby flow replication error:
    Standby unit failed to replicate a flow.

Recommendation:
    If appliance is processing VPN traffic, then this counter could be constantly
    increasing on the standby unit because of the flow could be replicated before the IKE SA
    info. No action is required in this case. If the appliance is not processing VPN traffic,
    then this indicate a software detect, turn on the debug: "debug fover fail" on the standby
    unit, collect the debug output, and report the problem to Cisco TAC.

Syslogs:
    302014, 302016, 302018

-----
Name: loopback
Flow is a loopback:
    This reason is given for closing a flow due to the following conditions: 1) when U-turn
    traffic is present on the flow, and, 2) 'same-security-traffic permit intra-interface' is
    not configured.

Recommendation:
    To allow U-turn traffic on an interface, configure the interface with
    'same-security-traffic permit intra-interface'.

Syslogs:
    None.
```



-----  
Name: acl-drop

Flow is denied by access rule:

This counter is incremented when a drop rule is hit by the packet and flow creation is denied. This rule could be a default rule created when the box comes up, when various features are turned on or off, when an acl is applied to interface or any other feature etc. Apart from default rule drops, a flow could be denied because of:

- 1) ACL configured on an interface
- 2) ACL configured for AAA and AAA denied the user
- 3) Thru-box traffic arriving at management-only ifc
- 4) Unencrypted traffic arriving on a ipsec-enabled interface
- 5) Implicity deny 'ip any any' at the end of an ACL

Recommendation:

Observe if one of syslogs related to packet drop are fired. Flow drop results in the corresponding packet-drop that would fire requisite syslog.

Syslogs:

None.

-----  
Name: acl-drop-reclassify

Flow is denied by access rule after reclassification:

This counter is incremented when a drop rule is hit by the packet during reclassification of ACL rules.

Recommendation:

Observe if one of syslogs related to packet drop are fired. Flow drop results in the corresponding packet-drop that would fire requisite syslog.

Syslogs:

None.

-----  
Name: pinhole-timeout

Pinhole timeout:

This counter is incremented to report that the appliance opened a secondary flow, but no packets passed through this flow within the timeout interval, and hence it was removed. An example of a secondary flow is the FTP data channel that is created after successful negotiation on the FTP control channel.

Recommendation:

No action required.

Syslogs:

302014, 302016

-----  
Name: host-removed

Host is removed:

Flow removed in response to "clear local-host" command.

Recommendation:

This is an information counter.

Syslogs:

302014, 302016, 302018, 302021, 305010, 305012, 609002

-----  
Name: xlate-removed

Xlate Clear:

Flow removed in response to "clear xlate" or "clear local-host" command.

Recommendation:

This is an information counter.

Syslogs:

302014, 302016, 302018, 302021, 305010, 305012, 609002

-----  
Name: connection-timeout

Connection timeout:

This counter is incremented when a flow is closed because of the expiration of it's inactivity timer.

Recommendation:

No action required.

Syslogs:

302014, 302016, 302018, 302021

-----  
Name: conn-limit-exceeded

Connection limit exceeded:

This reason is given for closing a flow when the connection limit has been exceeded. The connection limit is configured via the 'set connection conn-max' action command.

Recommendation:

None.

Syslogs:

201011

-----  
Name: tcp-fins

TCP FINs:

This reason is given for closing a TCP flow when TCP FIN packets are received.

Recommendations:

This counter will increment for each TCP connection that is terminated normally with FINs.

Syslogs:

302014

-----  
Name: syn-timeout

SYN Timeout:

This reason is given for closing a TCP flow due to expiry of embryonic timer.

Recommendations:

If these are valid session which take longer to establish a connection increase the embryonic timeout.

Syslogs:

302014

-----  
Name: fin-timeout

FIN Timeout:

This reason is given for closing a TCP flow due to expiry of half-closed timer.

Recommendations:

If these are valid session which take longer to close a TCP flow, increase the half-closed timeout.

Syslogs:

302014

-----  
Name: reset-in

TCP Reset-I:

This reason is given for closing an outbound flow (from a low-security interface to a same- or high-security interface) when a TCP reset is received on the flow.

Recommendation:

None.

Syslogs:

302014

-----  
Name: reset-out

TCP Reset-O:

This reason is given for closing an inbound flow (from a high-security interface to low-security interface) when a TCP reset is received on the flow.

Recommendation:

None.

Syslogs:

302014

-----  
Name: reset-appliance

TCP Reset-APPLIANCE:

This reason is given for closing a flow when a TCP reset is generated by appliance.

Recommendation:

None.

Syslogs:

302014

```
-----  
Name: recurse  
Close recursive flow:  
    A flow was recursively freed. This reason applies to pair flows, multicast slave  
flows, and syslog flows to prevent syslogs being issued for each of these subordinate  
flows.
```

```
Recommendation:  
    No action required.
```

```
Syslogs:  
    None
```

```
-----  
Name: tcp-intecept-no-response  
TCP intercept, no response from server:  
    SYN retransmission timeout after trying three times, once every second. Server  
unreachable, tearing down connection.
```

```
Recommendation:  
    Check if the server is reachable from the ASA.
```

```
Syslogs:  
    None
```

```
-----  
Name: tcp-intercept-unexpected  
TCP intercept unexpected state:  
    Logic error in TCP intercept module, this should never happen.
```

```
Recommendation:  
    Indicates memory corruption or some other logic error in the TCP intercept module.
```

```
Syslogs:  
    None
```

```
-----  
Name: tcpnorm-rexmit-bad  
TCP bad retransmission:  
    This reason is given for closing a TCP flow when check-retranmission feature is enabled  
and the TCP endpoint sent a retransmission with different data from the original packet.
```

```
Recommendations:  
    The TCP endpoint maybe attacking by sending different data in TCP retransmits. Please  
use the packet capture feature to learn more about the origin of the packet.
```

```
Syslogs:  
    302014
```

```
-----  
Name: tcpnorm-win-variation  
TCP unexpected window size variation:
```

This reason is given for closing a TCP flow when window size advertized by TCP endpoint is drastically changed without accepting that much data.

Recommendations:

In order to allow this connection, use the window-variation configuration under tcp-map.

Syslogs:

302014

-----  
Name: tcpcnorm-invalid-syn

TCP invalid SYN:

This reason is given for closing a TCP flow when the SYN packet is invalid.

Recommendations:

SYN packet could be invalid for number of reasons, like invalid checksum, invalid TCP header. Please use the packet capture feature to understand why the SYN packet is invalid. If you would like to allow these connection use tcp-map configurations to bypass checks.

Syslogs:

302014

-----  
Name: sctp-init-0-tag

SCTP INIT contains 0 value initiate tag:

This counter is incremented and the flow is dropped when sctp INIT chunk contains 0 value initiate tag.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-initack-0-tag

SCTP INIT ACK contains 0 value initiate tag:

This counter is incremented and the flow is dropped when sctp INIT ACK chunk contains 0 value initiate tag.

Recommendations:

None

Syslogs:

None

-----  
Name: sctp-chunk-init-0-stream-cnt

SCTP INIT contains 0 value inbound/outbound stream count:

This counter is incremented and the packet is dropped when sctp INIT chunk contains 0 value inbound/outbound stream count.

Recommendations:

None

Syslogs:  
None

-----  
Name: sctp-chunk-init-timeout  
SCTP INIT timed out (not receiving INIT ACK):  
    This counter is incremented and the flow is dropped when sctp INIT chunk timeout count reaches limit.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-cookie-timeout  
SCTP cookie timed out:  
    This counter is incremented and the flow is dropped when sctp cookie state (after received INIT ACK or COOKIE ECHO) timeout count reaches limit.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-endpoint-abort  
SCTP received ABORT from endpoint:  
    This counter is incremented and the flow is dropped when sctp ABORT chunk is received.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-chunk-init-ack-0-stream-cnt  
SCTP INIT ACK contains 0 value inbound/outbound stream count:  
    This counter is incremented and the packet is dropped when sctp INIT ACK chunk contains 0 value inbound/outbound stream count.

Recommendations:  
None

Syslogs:  
None

-----  
Name: sctp-shutdown-timeout  
SCTP SHUTDOWN timed out (not receiving SHUTDOWN ACK):

This counter is incremented and the flow is dropped when sctp SHUTDOWN timeout count reaches limit.

Recommendations:

None

Syslogs:

None

-----  
Name: mcast-intrf-removed

Multicast interface removed:

An output interface has been removed from the multicast entry.

- OR -

All output interfaces have been removed from the multicast entry.

Recommendation:

No action required.

- OR -

Verify that there are no longer any receivers for this group.

Syslogs:

None

-----  
Name: mcast-entry-removed

Multicast entry removed:

A packet has arrived that matches a multicast flow, but the multicast service is no longer enabled, or was re-enabled after the flow was built.

- OR -

The multicast entry has been deleted so the flow is being cleaned up, but the packet will be reinjected into the data path.

Recommendation:

Reenable multicast if it is disabled.

- OR -

No action required.

Syslogs:

None

-----  
Name: tcp-intercept-kill

Flow terminated by TCP Intercept:

TCP intercept would teardown a connection if this is the first SYN, a connection is created for the SYN, and TCP intercept replied with a SYN cookie, or after seeing a valid ACK from client, when TCP intercept sends a SYN to server, server replies with a RST.

Recommendation:

TCP intercept normally does not create a connection for first SYN, except when there are nailed rules or the packet comes over a VPN tunnel or the next hop gateway address to reach the client is not resolved. So for the first SYN this indicates that a connection got created. When TCP intercept receives a RST from server, its likely the corresponding port is closed on the server.

Syslogs:

None

-----  
Name: audit-failure

Audit failure:

A flow was freed after matching an "ip audit" signature that had reset as the associated action.

Recommendation:

If removing the flow is not the desired outcome of matching this signature, then remove the reset action from the "ip audit" command.

Syslogs:

None

-----  
Name: cxsc-request

Flow terminated by CXSC:

This reason is given for terminating a flow as requested by CXSC module.

Recommendations:

Check syslogs and alerts on CXSC module.

Syslogs:

429002

-----  
Name: cxsc-fail-close

CXSC fail-close:

This reason is given for terminating a flow since CXSC card is down and fail-close option was used with CXSC action.

Recommendations:

Check and bring up CXSC card

Syslogs:

429001

-----  
Name: cxsc-bad-hdl

Flow terminated by ASA due to bad handle from CX

Since the handle received from CX is invalid, dropping flow.

Recommendations:

Check syslogs and alerts on CXSC module.

Syslogs:

421004

-----  
Name: reset-by-cx

Flow reset by CXSC:

This reason is given for terminating a TCP flow as requested by the CXSC module.



## Recommendations:

Check syslogs and alerts on CXSC module.

## Syslogs:

429003

-----  
Name: sfr-request

## Flow terminated by SFR:

This reason is given for terminating a flow as requested by SFR module.

## Recommendations:

Check syslogs and alerts on SFR module.

## Syslogs:

434002

-----  
Name: sfr-fail-close

## SFR fail-close:

This reason is given for terminating a flow since SFR card is down and fail-close option was used with SFR action.

## Recommendations:

Check and bring up SFR card

## Syslogs:

434001

-----  
Name: sfr-bad-hdl

## Flow terminated by ASA due to bad handle from SFR

Since the handle received from SFR is invalid, dropping flow.

## Recommendations:

Check syslogs and alerts on SFR module.

## Syslogs:

421004

-----  
Name: reset-by-sfr

## Flow reset by SFR:

This reason is given for terminating a TCP flow as requested by the SFR module.

## Recommendations:

Check syslogs and alerts on SFR module.

## Syslogs:

434003

-----  
Name: snort-flow-drop

## Flow terminated by SNORT:

This reason is given for terminating a flow as requested by SNORT module.

Recommendations:

Review Snort policies for any such rule denying the flow.

Syslogs:

None.

-----  
Name: ips-request

Flow terminated by IPS:

This reason is given for terminating a flow as requested by IPS module.

Recommendations:

Check syslogs and alerts on IPS module.

Syslogs:

420002

-----  
Name: ips-fail-close

IPS fail-close:

This reason is given for terminating a flow since IPS card is down and fail-close option was used with IPS inspection.

Recommendations:

Check and bring up IPS card

Syslogs:

420001

-----  
Name: ips-license-disabled-fail-close

IPS module license disabled:

This reason is given for terminating a flow when the IPS module license is disabled and the fail-close option was used in IPS inspection.

Recommendations:

Please apply an activation key that has the IPS Module License enabled.

Syslogs:

420008

-----  
Name: reinject-punt

Flow terminated by punt action:

This counter is incremented when a packet is punted to the exception-path for processing by one of the enhanced services such as inspect, aaa etc and the servicing routine, having detected a violation in the traffic flowing on the flow, requests that the flow be dropped. The flow is immediately dropped.

Recommendation:

Please watch for syslogs fired by servicing routine for more information. Flow drop terminates the corresponding connection.

Syslogs:  
None.

-----  
Name: shunned

Flow shunned:

This counter will increment when a packet is received which has a source IP address that matches a host in the shun database. When a shun command is applied, it will be incremented for each existing flow that matches the shun command.

Recommendation:

No action required.

Syslogs:  
401004

-----  
Name: host-limit

host-limit

-----  
Name: nat-failed

NAT failed:

Failed to create an xlate to translate an IP or transport header.

Recommendation:

If NAT is not desired, disable "nat-control". Otherwise, use the "static", "nat" or "global" command to configure NAT policy for the dropped flow. For dynamic NAT, ensure that each "nat" command is paired with at least one "global" command. Use "show nat" and "debug pix process" to verify NAT rules.

Syslogs:  
305005, 305006, 305009, 305010, 305011, 305012

-----  
Name: nat-rpf-failed

NAT reverse path failed:

Rejected attempt to connect to a translated host using the translated host's real address.

Recommendation:

When not on the same interface as the host undergoing NAT, use the mapped address instead of the real address to connect to the host. Also, enable the appropriate inspect command if the application embeds IP address.

Syslogs:  
305005

-----  
Name: inspect-fail

Inspection failure:

This counter will increment when the appliance fails to enable protocol inspection carried out by the NP for the connection. The cause could be memory allocation failure, or for ICMP error message, the appliance not being able to find any established connection related to the frame embedded in the ICMP error message.

## Recommendation:

Check system memory usage. For ICMP error message, if the cause is an attack, you can deny the host using the ACLs.

## Syslogs:

313004 for ICMP error.

-----  
Name: no-inspect

Failed to allocate inspection:

This counter will increment when the security appliance fails to allocate a run-time inspection data structure upon connection creation. The connection will be dropped.

## Recommendation:

This error condition is caused when the security appliance runs out of system memory. Please check the current available free memory by executing the "show memory" command.

## Syslogs:

None

-----  
Name: reset-by-ips

Flow reset by IPS:

This reason is given for terminating a TCP flow as requested by IPS module.

## Recommendations:

Check syslogs and alerts on IPS module.

## Syslogs:

420003

-----  
Name: flow-reclaimed

Non-tcp/udp flow reclaimed for new request:

This counter is incremented when a reclaimable flow is removed to make room for a new flow. This occurs only when the number of flows through the appliance equals the maximum number permitted by the software imposed limit, and a new flow request is received. When this occurs, if the number of reclaimable flows exceeds the number of VPN tunnels permitted by the appliance, then the oldest reclaimable flow is removed to make room for the new flow. All flows except the following are deemed to be reclaimable:

1. TCP, UDP, GRE and Failover flows
2. ICMP flows if ICMP stateful inspection is enabled
3. ESP flows to the appliance

## Recommendation:

No action is required if this counter is incrementing slowly. If this counter is incrementing rapidly, it could mean that the appliance is under attack and the appliance is spending more time reclaiming and rebuilding flows.

## Syslogs

302021

-----  
Name: non\_tcp\_syn

non-syn TCP:

This reason is given for terminating a TCP flow when the first packet is not a SYN packet.

Recommendations:

None

Syslogs:

None

-----  
Name: rm-xlate-limit

RM xlate limit reached:

This counter is incremented when the maximum number of xlates for a context or the system has been reached and a new connection is attempted.

Recommendation:

The device administrator can use the commands 'show resource usage' and 'show resource usage system' to view context and system resource limits and 'Denied' counts and adjust resource limits if desired.

Syslogs:

321001

-----  
Name: rm-host-limit

RM host limit reached:

This counter is incremented when the maximum number of hosts for a context or the system has been reached and a new connection is attempted.

Recommendation:

The device administrator can use the commands 'show resource usage' and 'show resource usage system' to view context and system resource limits and 'Denied' counts and adjust resource limits if desired.

Syslogs:

321001

-----  
Name: rm-inspect-rate-limit

RM inspect rate limit reached:

This counter is incremented when the maximum inspection rate for a context or the system has been reached and a new connection is attempted.

Recommendation:

The device administrator can use the commands 'show resource usage' and 'show resource usage system' to view context and system resource limits and 'Denied' counts and adjust resource limits if desired.

Syslogs:

321002

-----  
Name: tcpmod-connect-clash

A TCP connect socket clashes with an existing listen connection. This is an internal system error. Contact TAC.

-----  
Name: ssm-app-request

Flow terminated by service module:

This counter only applies to the ASA 5500 series adaptive security appliance. It is incremented when the application running on the SSM requests the security appliance to terminate a connection.

Recommendation:

You can obtain more information by querying the incident report or system messages generated by the SSM itself. Please consult the documentation that comes with the SSM for instructions.

Syslogs:

None.

-----  
Name: ssm-app-fail

Service module failed:

This counter only applies to the ASA 5500 series adaptive security appliance. It is incremented when a connection that is being inspected by the SSM is terminated because the SSM has failed.

Recommendation:

The card manager process running in the security appliance control plane issued system messages and CLI warning to inform you of the failure. Please consult the documentation that comes with the SSM to trouble shoot the SSM failure. Contact Cisco Technical Assistance Center (TAC) if needed.

Syslog:

421001.

-----  
Name: ssm-app-incompetent

Service module incompetent:

This counter only applies to the ASA 5500 series adaptive security appliance. It is incremented when a connection is supposed to be inspected by the SSM, but the SSM is not able to inspect it. This counter is reserved for future use. It should always be 0 in the current release.

Recommendation:

None.

Syslog:

None.

-----  
Name: ssl-bad-record-detect

SSL bad record detected:

This counter is incremented for each unknown SSL record type received from the remote peer. Any unknown record type received from the peer is treated as a fatal error and the SSL connections that encounter this error must be terminated.

Recommendation:

It is not normal to see this counter increment at any time. If this counter is incremented, it usually means that the SSL protocol state is out of sync with the client software. The most likely cause of this problem is a software defect in the client software. Contact the Cisco TAC with the client software or web browser version and provide a network trace of the SSL data exchange to troubleshoot this problem.

Syslogs:  
None.

-----  
Name: ssl-handshake-failed

SSL handshake failed:

This counter is incremented when the TCP connection is dropped because the SSL handshake failed.

Recommendation:

This is to indicate that the TCP connection is dropped because the SSL handshake failed. If the problem cannot be resolved based on the syslog information generated by the handshake failure condition, please include the related syslog information when contacting the Cisco TAC.

Syslogs:  
725006.  
725014.

-----  
Name: dtls-hello-close

DTLS hello close:

This counter is incremented when the UDP connection is dropped after the DTLS client hello message processing is finished. This does not indicate an error.

Recommendation:

None.

Syslogs:  
None.

-----  
Name: ssl-malloc-error

SSL malloc error:

This counter is incremented for each malloc failure that occurs in the SSL lib. This is to indicate that SSL encountered a low memory condition where it can't allocate a memory buffer or packet block.

Recommendation:

Check the security appliance memory and packet block condition and contact Cisco the TAC with this memory information.

Syslogs:  
None.

-----  
Name: ctm-crypto-request-error

CTM crypto request error:

This counter is incremented each time CTM cannot accept our crypto request. This usually means the crypto hardware request queue is full.

## Recommendation:

Issue the show crypto protocol statistics ssl command and contact the Cisco TAC with this information.

## Syslogs:

None.

-----  
Name: ssl-record-decrypt-error

SSL record decryption failed:

This counter is incremented when a decryption error occurs during SSL data receive. This usually means that there is a bug in the SSL code of the ASA or peer, or an attacker may be modifying the data stream. The SSL connection has been closed.

## Recommendation:

Investigate the SSL data streams to and from your ASA. If there is no attacker, then this indicates a software error that should be reported to the Cisco TAC.

## Syslogs:

None.

-----  
Name: np-socket-conn-not-accepted

A new socket connection was not accepted:

This counter is incremented for each new socket connection that is not accepted by the security appliance.

## Recommendation:

It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of socket-based applications, then this may be caused by a software defect. Contact the Cisco TAC to investigate the issue further.

## Syslog:

None.

-----  
Name: np-socket-failure

NP socket failure:

This is a general counter for critical socket processing errors.

## Recommendation:

This indicates that a software error should be reported to the Cisco TAC.

## Syslog:

None.

-----  
Name: np-socket-relay-failure

NP socket relay failure:

This is a general counter for socket relay processing errors.

## Recommendation:



It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of socket-based applications, then this may be caused by a software defect. Contact the Cisco TAC to investigate the issue further.

Syslog:

None.

-----  
Name: np-socket-data-move-failure  
NP socket data movement failure:  
    This counter is incremented for socket data movement errors.

Recommendation:

    This indicates that a software error should be reported to the Cisco TAC.

Syslog:

None.

-----  
Name: np-socket-new-conn-failure  
NP socket new connection failure:  
    This counter is incremented for new socket connection failures.

Recommendation:

    This indicates that a software error should be reported to the Cisco TAC.

Syslog:

None.

-----  
Name: np-socket-transport-closed  
NP socket transport closed:  
    This counter is incremented when the transport attached to the socket is abruptly closed.

Recommendation:

    It is possible to see this counter increment as part of normal operation. However, if the counter is rapidly incrementing and there is a major malfunction of socket-based applications, then this may be caused by a software defect. Contact the Cisco TAC to investigate the issue further.

Syslog:

None.

-----  
Name: np-socket-block-conv-failure  
NP socket block conversion failure:  
    This counter is incremented for socket block conversion failures.

Recommendation:

    This indicates that a software error should be reported to the Cisco TAC.

Syslog:

None.

-----  
Name: ssl-received-close-alert

SSL received close alert:

This counter is incremented each time the security appliance receives a close alert from the remote client. This indicates that the client has notified us they are going to drop the connection. It is part of the normal disconnect process.

Recommendation:

None.

Syslog:

725007.

-----  
Name: children-limit

Max per-flow children limit exceeded:

The number of children flows associated with one parent flow exceeds the internal limit of 200.

Recommendation:

This message indicates either a misbehaving application or an active attempt to exhaust the firewall memory. Use "set connection per-client-max" command to further fine tune the limit. For FTP, additionally enable the "strict" option in "inspect ftp".

Syslogs:

210005

-----  
Name: tracer-flow

packet-tracer traced flow drop:

This counter is internally used by packet-tracer for flow freed once tracing is complete.

Recommendation:

None.

Syslog:

None.

-----  
Name: sp-looping-address

looping-address:

This counter is incremented when the source and destination addresses in a flow are the same. SIP flows where address privacy is enabled are excluded, as it is normal for those flows to have the same source and destination address.

Recommendation:

There are two possible conditions when this counter will increment. One is when the appliance receives a packet with the source address equal to the destination. This represents a type of DoS attack. The second is when the NAT configuration of the appliance NATs a source address to equal that of the destination. One should examine syslog message 106017 to determine what IP address is causing the counter to increment, then enable packet captures to capture the offending packet, and perform additional analysis.

```
Syslogs:
  106017
```

```
-----
Name: no-adjacency
```

```
No valid adjacency:
```

```
    This counter will increment when the security appliance receives a packet on an existing flow that no longer has a valid output adjacency. This can occur if the nexthop is no longer reachable or if a routing change has occurred typically in a dynamic routing environment.
```

```
Recommendation:
```

```
    No action required.
```

```
Syslogs:
```

```
    None
```

```
-----
Name: np-midpath-service-failure
```

```
NP midpath service failure:
```

```
    This is a general counter for critical midpath service errors.
```

```
Recommendation:
```

```
    This indicates that a software error should be reported to the Cisco TAC.
```

```
Syslog:
```

```
    None.
```

```
-----
Name: np-midpath-cp-event-failure
```

```
NP midpath CP event failure:
```

```
    This is counter for critical midpath events that could not be sent to the CP.
```

```
Recommendation:
```

```
    This indicates that a software error should be reported to the Cisco TAC.
```

```
Syslog:
```

```
    None.
```

```
-----
Name: np-context-removed
```

```
NP virtual context removed:
```

```
    This counter is incremented when the virtual context with which the flow is going to be associated has been removed. This could happen in multi-core environment when one CPU core is in the process of destroying the virtual context, and another CPU core tries to create a flow in the context.
```

```
Recommendation:
```

```
    No action is required.
```

```
Syslog:
```

```
    None.
```

```
-----
Name: fover-idle-timeout
```

Flow removed from standby unit due to idle timeout:

A flow is considered idle if standby unit no longer receives periodical update from active which is supposed to happen to at fixed interval when flow is alive. This counter is incremented when such flow is removed from standby unit.

Recommendation:

This counter is informational.

Syslogs:

None.

-----  
Name: dynamic-filter

Flow matched dynamic-filter blacklist:

A flow matched a dynamic-filter blacklist or greylist entry with a threat-level higher than the threat-level threshold configured to drop traffic.

Recommendation:

Use the internal IP address to trace the infected host. Take remediation steps to remove the infection.

Syslogs:

None.

-----  
Name: asa-teardown

ASA requested flow to be torndown:

ASA requested the flow to be removed

Recommendation:

None.

Syslogs:

None.

-----  
Name: punt-limit

No. of segments queued to an inspector reached limit:

For this flow, no. of packets queued to the inspector reached the limit. Thus, terminating the flow

Recommendation:

None.

Syslogs:

None.

-----  
Name: pdts-rule-meta-failed

PDTS rule-meta allocation failed:

This counter is incremented when rule-meta allocation failed, thus terminating the flow

Recommendation:

None.

Syslogs:

None.

```
-----
Name: tcp-full-proxy-required
Full TCP proxy is required, but not available in monitor-only mode:
    This flow requires full TCP proxy, but this feature is not available in    monitor-only
mode.
Recommendation:
    None.

Syslogs:
    None.
```

```
-----
Name: route-change
Flow terminated due to route change:
    When the system adds a lower cost (better metric) route, incoming packets    that match
the new route will cause their existing connection    to be torn down after the user
configured timeout (floating-conn) value.    Subsequent packets will rebuild the connection
out the interface with    the better metric.

Recommendation:
    To prevent the addition of lower cost routes from affecting active    flows, the
'floating-conn' configuration timeout value can be set to 0:0:0.

Syslogs:
    None.
```

```
-----
Name: svc-selector-failure
SVC VPN inner policy selector mismatch detected:
    This counter is incremented when an SVC packet is received with an inner IP header that
does not match the policy for the tunnel.

Recommendation:
    None. This packet will be discarded automatically.

Syslogs:
    None.
```

```
-----
Name: vPath-license-failure
Flow terminated due to vPath license failure:
    The flow is dropped due to licensing failure for ASA 1000V.

Recommendation:
    Check Nexus 1000V and verify that there are sufficient ASA 1000V licenses    installed
to support all ASA 1000V virtual machines in use.    Use "show license" to check the
available licenses for ASA 1000V and    use "show license usage" to check the status of
them.

Syslogs:
    4450002.
```

-----  
Name: svc-conn-timer-cb-fail  
SVC connection timer callback failure:  
This condition occurs when there is a failed attempt to place an event on the async lock queue for that connection.  
  
Recommendation:  
None.  
  
Syslogs:  
None.

-----  
Name: svc-udp-conn-timer-cb-fail  
SVC UDP connection timer callback failure:  
This condition occurs when there is a failed attempt to place an event on the async lock queue for that connection.  
  
Recommendation:  
None.  
  
Syslogs:  
None.

-----  
Name: nat64/46-conversion-fail  
IPv6 to IPv4 or vice-versa conversion failure:  
This condition occurs when there is a failure in conversion of IPv6 traffic to IPv4 or vice-versa.  
  
Recommendation:  
None.  
  
Syslogs:  
None.

-----  
Name: cluster-cflow-clu-closed  
Cluster flow with CLU closed on owner:  
Director/backup unit received a cluster flow clu delete message from the owner unit and terminated the flow.  
  
Recommendation:  
This counter should increment for every replicated clu that is torn down on the owner unit.  
  
Syslogs:  
None.

-----  
Name: cluster-cflow-stale-clu-closed  
Cluster flow with CLU removed due to stale owner:  
A cluster flow was removed because it has stale owner info. Stale info can happen due to missing CLU\_DELETE as normally this is not a reliable msg.

## Recommendation:

This counter is informational.

## Syslogs:

None.

-----  
Name: cluster-cflow-clu-timeout

Cluster flow with CLU removed from due to idle timeout:

A cluster flow with CLU is considered idle if director/backup unit no longer receives periodical update from owner which is supposed to happen at fixed interval when flow is alive.

## Recommendation:

This counter is informational.

## Syslogs:

None.

-----  
Name: cluster-redirect

Flow matched a cluster redirect classify rule:

A stub forwarding flow will thereafter forward packets to the cluster unit that owns the flow.

## Recommendations:

This counter is informational and the behavior expected. The packet was forwarded to the owner over the Cluster Control Link.

## Syslogs:

None.

-----  
Name: cluster-drop-on-slave

Flow matched a cluster drop-on-slave classify rule:

This is for cases that the packets from L3 subnet are seen by all units and only master unit need to process them.

## Recommendations:

This counter is informational and the behavior expected. The packet is processed by master.

## Syslogs:

None.

-----  
Name: cluster-director-change

The flow director changed due to a cluster join event:

A new unit joined the cluster and is now the director for the flow. The old director/backup has removed it's flow and the flow owner will update the new director.

## Recommendations:

This counter is informational and the behavior expected.

## Syslogs:

None.

-----  
Name: cluster-mcast-owner-change  
The multicast flow owner changed due to a cluster join or leave event:  
This flow gets created on a new owner unit.

Recommendations:  
This counter is informational and the behavior expected.

Syslogs:  
None.

-----  
Name: cluster-convert-to-dirbak  
Forwarding or redirect flow converted to director or backup flow:  
Forwarding or redirect flow is removed, so that director or backup flow can be created.

Recommendations:  
This counter is informational and the behavior expected.

Syslogs:  
None.

-----  
Name: cluster-mobility-owner-removed  
Flow mobility has old owner removed:  
Flow mobility moved this flow to another unit. This old owner will be removed.

Recommendations:  
This counter is informational and the behavior expected.

Syslogs:  
None.

-----  
Name: cluster-mobility-fwder-removed  
Flow mobility has old fwder removed:  
Flow mobility moved this flow to another unit. This old fwder will be removed because it's turning into a backup.

Recommendations:  
This counter is informational and the behavior expected.

Syslogs:  
None.

-----  
Name: cluster-mobility-backup-removed  
Flow mobility has backup removed:  
Flow mobility moved this flow to another unit. This backup will be removed because new owner and director are on difference nodes.



## Recommendations:

This counter is informational and the behavior expected.

## Syslogs:

None.

-----  
Name: cluster-mobility-owner-2-dir  
Flow mobility has old owner/director changed to director only:  
Flow mobility moved this flow to another unit. This unit used to be both owner and  
director, now will host director flow only.

## Recommendations:

This counter is informational and the behavior expected.

## Syslogs:

None.

-----  
Name: inspect-scansafe-server-not-reachable  
Scansafe server is not configured or the cloud is down:  
Either the scansafe server IP is not specified in the scansafe general options or  
the scansafe server is not reachable.

## Recommendations:

This counter is informational and the behavior expected.

## Syslogs:

None.

-----  
Name: cluster-owner-2-dir  
Another owner overrides me, and I will become a director later:  
Another unit owns the flow, and asks me to delete my flow in order to create a  
director flow in its place later.

## Recommendations:

This counter is informational and the behavior is expected.

## Syslogs:

None.

-----  
Name: cluster-owner-2-fw  
Another owner overrides me, and I will become a forwarder later:  
Another unit owns the flow, and asks me to delete my flow in order to create a  
forwarder flow in its place later.

## Recommendations:

This counter is informational and the behavior is expected.

## Syslogs:

None.

```
-----
Name: cluster-director-closed
Flow removed due to director flow closed:
    Owner unit received a cluster flow clu delete message from the director    unit and
    terminated the flow.

Recommendation:
    This counter should increment for every replicated clu that is torn down on    the
    director unit.

Syslogs:
    None.

-----
Name: cluster-pinhole-master-change
Master only pinhole flow removed at bulk sync due to master change:
    Master only pinhole flow is removed during bulk sync because cluster master    has
    changed.

Recommendation:
    This counter is informational and the behavior expected.

Syslogs:
    302014

-----
Name: cluster-parent-owner-left
Flow removed at bulk sync because parent flow is gone:
    Flow is removed during bulk sync because the parent flow's owner has left    the
    cluster.

Recommendation:
    This counter is informational and the behavior expected.

Syslogs:
    302014

-----
Name: cluster-ctp-punt-channel-missing
Flow removed at bulk sync because CTP punt channel is missing:
    Flow is removed during bulk sync because CTP punt channel is missing in    cluster
    restored flow.

Recommendation:
    The cluster master may have just left the cluster. And there might be    packet drops
    on the Cluster Control Link.

Syslogs:
    302014

-----
Name: invalid-vxlan-segment-id
Invalid VXLAN segment-id:
    This counter is incremented when the security appliance sees an invalid VXLAN
    segment-id attached to a flow.
```

Recommendation:

No.

Syslogs:

None.

-----  
Name: no-valid-nve-ifc

No valid NVE interface:

This counter is incremented when the security appliance fails to identify the NVE interface of a VNI interface for a flow.

Recommendation:

Verify that the nve is configured for all interfaces.

Syslogs:

None.

-----  
Name: invalid-peer-nve

Invalid peer NVE:

This counter is incremented when the security appliance fails to get IP and MAC address of a peer NVE for a flow.

Recommendation:

Verify that peer nve is configured or learned for the nve.

Syslogs:

None.

-----  
Name: vxlan-encap-error

Fail to encap with VXLAN:

This counter is incremented when the security appliance fails to encapsulate a packet with VXLAN for a flow.

Recommendation:

No.

Syslogs:

None.

-----  
Name: no-route-to-peer-nve

No route to peer NVE:

This counter is incremented when the security appliance fails to locate next hop to peer NVE.

Recommendation:

Verify peer NVE is reachable via source-interface.

Syslogs:

None.

```
-----
Name: vxlan-invalid-vni-mcast-ip
Invalid Multicast IP on VNI interface:
    This counter is incremented when the security appliance fails to get the multicast
group IP from the VNI interface.

Recommendation:
    Verify that in the absence of a configured peer NVE, the VNI      interface has a valid
multicast group IP configured on it.

Syslogs:
    None.

-----
Name: vxlan-missing-peer-vtep-ip
Peer VTEP IP not found:
    This counter is incremented when the security appliance fails to find the peer VTEP IP
for an inner destination IP for VXLAN encapsulation.

Recommendation:
    Verify that in show arp vtep-mapping/show mac-address-table      vtep-mapping/show ipv6
neighbor vtep-mapping, the VTEP IP is      present for the desired remote inner host.

Syslogs:
    None.

-----
Name: ifc-zn-chg
Interface experienced a zone change:
    This reason is given for terminating a flow because the parent interface has joined or
left a zone.

Recommendations:
    No action required.

Syslogs:
    302014, 302016, 302018, 302021, 302304

-----
Name: clean_for_vpn_stub
Clean up for creation of a new VPN stub:
    This reason is given for tearing down a conflicting connection in preparation for a new
vpn stub connection.

Recommendations:
    None.

Syslogs:
    None.

-----
Name: cluster-cflow-isakmp-owner-closed
Cluster flow closed on ISAKMP owner:
```

Director/backup unit received an isakmp redirected packet from a forwarding unit and terminated the flow.

Recommendation:

This counter should increment for every cflow torn down by isakmp redirected packet on the isakmp owner unit.

Syslogs:

None.

-----  
Name: vpn-context-association-failure

VPN context association failure:

This counter is increased whenever we fail to associate the VPN context with a cluster flow.

Recommendation:

None.

Syslogs:

None.

-----  
Name: ike-pkt-with-bad-spi

Flow removed for IKE packet with corrupted or expired SPI:

This counter is incremented and the flow is dropped when the IKE packet in this flow gets dropped due to corrupted or expired SPI.

Recommendations:

Check the syslog to get more information about the origin of the packet. This situation can be normal and transient. If the drops persist, call TAC to investigate further.

Syslogs:

753001

-----  
Name: cluster-dup-owner-to-dir

Duplicated owner flow detected, and I will become a director later:

Another unit owns the flow, so need to delete my flow in order to create a director flow in its place later.

Recommendations:

This counter is informational and the behavior is expected.

Syslogs:

None.

-----  
Name: cluster-dir-removed-dup-owner

Duplicated owner flow removed by director:

Another unit owns the flow, so director deleted the flow on this unit.

Recommendations:

This counter is informational and the behavior is expected.

```

Syslogs:
  None.

-----
Name: cluster-removed-stale-stub
Stale stub flow removed by owner:
  This is a stale stub flow, so owner deleted the flow on this unit.

Recommendations:
  This counter is informational and the behavior is expected.

Syslogs:
  None.

-----

```

## 예

아래에는 카운터를 지운 마지막 시간을 나타내는 타임스탬프가 포함된 **show asp drop** 명령의 샘플 출력이 나와 있습니다.

```

ciscoasa# show asp drop

Frame drop:
  Flow is denied by configured rule (acl-drop)                3
  Dst MAC L2 Lookup Failed (dst-l2_lookup-fail)             4110
  L2 Src/Dst same LAN port (l2_same-lan-port)                760
  Expired flow (flow-expired)                                1

Last clearing: Never

Flow drop:
  Flow is denied by access rule (acl-drop)                   24
  NAT failed (nat-failed)                                    28739
  NAT reverse path failed (nat-rpf-failed)                   22266
  Inspection failure (inspect-fail)                          19433

Last clearing: 17:02:12 UTC Jan 17 2012 by enable_15

```

## 관련 명령

Command(명령)	설명
<b>capture</b>	패킷을 캡처합니다(ASP 삭제 코드에 따라 패킷을 캡처하는 옵션 포함).
<b>clear asp drop</b>	가속화된 보안 경로의 삭제 통계를 지웁니다.
<b>show conn</b>	연결에 대한 정보를 표시합니다.