

Software version TC7.1  
APRIL 2014



# *Application Programmer Interface (API) Reference Guide*

Cisco TelePresence SX80

## What's in this guide?

The top menu bar and the entries in the table of contents are all hyperlinks, just click on them to go to the topic.

We recommend you visit our web site regularly for updated versions of the user documentation.

Go to: ► <http://www.cisco.com/go/sx-docs>

## Table of Contents

<b>Introduction</b> .....	<b>4</b>	<b>xConfiguration commands</b> .....	<b>21</b>
About this guide.....	5	Description of the xConfiguration commands .....	22
User documentation.....	5	Audio configuration .....	27
<b>About the API</b> .....	<b>6</b>	Cameras configuration.....	31
API fundamentals.....	7	Conference configuration .....	33
Connecting to the API .....	7	FacilityService configuration.....	37
Password .....	7	GPIO configuration.....	38
RS-232/serial connection .....	7	H323 configuration.....	39
Telnet.....	7	Logging configuration .....	41
SSH.....	7	Network configuration.....	41
HTTP/HTTPS.....	7	NetworkServices configuration.....	47
API output .....	8	Phonebook configuration.....	50
The output modes .....	8	Provisioning configuration.....	51
Using the command line.....	9	RTP configuration.....	53
API commands .....	9	Security configuration.....	53
Other commands .....	9	SerialPort configuration.....	55
Command line shortcuts .....	9	SIP configuration .....	55
Searching .....	10	Standby configuration .....	59
Value types and formats .....	10	SystemUnit configuration .....	60
Commands .....	11	Time configuration.....	61
Configurations .....	12	UserInterface configuration.....	62
Status.....	13	Video configuration .....	64
Events .....	14	Experimental configuration .....	72
Feedback mechanism.....	15	<b>xCommand commands</b> .....	<b>73</b>
Feedback expressions .....	15	Description of the xCommand commands .....	74
Terminal connections .....	16	Audio commands .....	78
Using HTTP.....	17	Bookings commands.....	87
Getting status and configurations .....	17	Boot commands.....	88
Sending commands and configurations.....	17	Call commands .....	89
Using HTTP POST.....	17	CallHistory commands .....	91
Feedback from codec over HTTP .....	18	CallLog commands .....	93
Registering for feedback.....	18	CamCtrlPip commands .....	93
Translating from terminal mode to XML.....	19	Camera commands.....	94
Dos and don'ts.....	20	Conference commands.....	97
		Dial commands.....	98
		DTMFSend commands.....	99
		FacilityService commands .....	99
		FarEndControl commands .....	100
		GPIO commands .....	101
		HttpFeedback commands.....	102

Key commands.....	102	<b>Appendices.....</b>	<b>203</b>
Logging commands .....	103	About startup scripts .....	204
Message commands.....	103	The SystemTools commands.....	205
Phonebook commands.....	106	About disconnect cause types .....	207
Presentation commands .....	111	Using a 3 <sup>rd</sup> party control system / touch panel.....	208
Preset commands.....	111		
Provisioning commands.....	112		
Security commands .....	114		
Standby commands .....	115		
SystemUnit commands .....	115		
UserInterface commands.....	118		
UserManagement commands.....	119		
Video commands .....	120		
Experimental commands .....	129		
<b>xStatus commands.....</b>	<b>130</b>		
Description of the xStatus commands .....	131		
Audio status.....	138		
Call status.....	141		
Camera status.....	144		
Conference status.....	146		
Diagnostics status.....	152		
GPIO status .....	156		
H320 status.....	157		
H323 status.....	158		
HttpFeedback status.....	159		
ICE status .....	159		
Logging status.....	162		
MediaChannels status.....	162		
Network status .....	171		
NetworkServices status.....	176		
Preset status .....	176		
Provisioning status .....	177		
Security status .....	182		
SIP status .....	184		
Standby status .....	186		
SystemUnit status .....	187		
Time status .....	193		
UserInterface status.....	193		
Video status.....	194		
Experimental status.....	202		

Chapter 1

# *Introduction*

## About this guide

This guide introduces you to the Application Programmer Interface (API) for the TC software in general, and serve as a reference guide for the command line commands for the following product:

- Cisco TelePresence SX80

## User documentation

The user documentation for the Cisco TelePresence systems, running the **TC software**, have several guides suitable to various user groups.

- Video conference room primer
- Video conference room acoustics guidelines
- Installation guides for the TelePresence systems
- Software release notes for the TC software
- Getting started guide for the TelePresence systems
- User guide for the TelePresence systems (Touch controller)
- Quick reference guides for the TelePresence systems
- Administrator guides for the TelePresence systems
- Camera user guide for the PrecisionHD cameras
- API reference guides
- TC Console user guide
- Regulatory compliance and safety information guides
- Licensing information for the TC software

To download the user documentation go to:

▶ <http://www.cisco.com/go/sx-docs>

Chapter 2

*About the API*

## API fundamentals

This chapter contains a top-level view of the mechanisms supported by the codec API. You can use the API to manage all parts of the TelePresence system.

Here you can read about how to access the API, how to use the command line and what the different parts of the API can be used for. Information on how to use the feedback functions that are available for the codec is included in this chapter.

The API consists of four major groups:

- Commands
- Configurations
- Status
- Events

These four groups are hierarchically organized, which makes it easier to find related functionality. You can find the complete lists of all commands, configurations and statuses in the following chapters.

### Connecting to the API

There are several ways to access the codec API. Regardless of which method you choose, the structure of the API stays the same. Choose the connection method that suites your application best. Before you start, please read this section about the different methods, as some of those may require additional configuration changes before being enabled.

The following commands can be set from the System configuration menu in the web interface or on the on-screen-display, or from the command line interface. All of the examples are for the command line interface.

### Password

Initially, no password is set for the default admin user. We strongly recommend that you set a password for this user, and any other users possessing an ADMIN role, to restrict access to system configuration. The password can be changed by issuing the following command:

```
xCommand SystemUnit AdminPassword Set Password:
<password>
```

### RS-232/serial connection

This is one of the most used connections to our products for integrators, as it can be used without an IP-address, DNS or a network.

#### Codec configurations

There are two different configurations that can be changed for serial connections; the baud-rate and whether login is required or not. A reboot of the codec is required for these settings to take effect.

```
xConfiguration SerialPort BaudRate:
<9600/19200/38400/57600/115200>
xConfiguration SerialPort LoginRequired: <Off/On>
```

#### Connecting

Connect a standard 9-pin serial cable <115200, N, 8, 1> to the COM port on the SX80 codec.

#### Note:

- For security reasons the password prompting is turned on by default, but it can be turned off if preferred.
- The default baud rate is set to 115200. The codec can give very much feedback. We therefore recommend keeping the connection at this speed.

### Telnet

Telnet can be viewed as the equivalent of the serial protocol in the TCP/IP world. Telnet is disabled by default. Before connecting to the codec with Telnet you have to enable it.

#### Codec configuration

To enable Telnet service, configure the following setting on the codec. Changing this setting does not require a reboot of the device, but it may take some time to take effect.

```
xConfiguration NetworkServices Telnet Mode: On
```

### SSH

SSH is a secure TCP/IP connection and it is enabled by default on the codec. It can be disabled. You need a SSH client, such as PuTTY, to access the API over SSH.

### HTTP/HTTPS

As HTTP/HTTPS are connectionless protocols, there is no persistent connection. There are several ways of communicating with the API over HTTP.

#### Codec configuration

In order to enable or disable the HTTP and HTTPS services, configure the following settings on the codec. Changing these settings requires a reboot of the device.

```
xConfiguration NetworkServices HTTP Mode:
<Off/On>
xConfiguration NetworkServices HTTPS Mode:
<Off/On>
```

#### Connecting

You can inspect the API by entering the IP-address or host name of the codec in your favorite web browser. In the web interface, you can find the API documents under the menu section [System Configuration > API > XML API](#). The HTTP POST and GET methods are used to execute commands and get feedback from the codec. This is described in [▶"Using HTTP" on page 17](#) in this document.

## API output

The xPreferences is used to set preferences for the RS-232, Telnet and SSH sessions.

### The output modes

- **Terminal:** Line based output for use with line based control systems
- **XML:** XML output for use with control systems that understand XML.

The default output mode is **terminal**. To change this you have to define your preferences for each session individually. Examples in this guide are in terminal mode.

To set output mode to XML, issue the command:

```
xPreferences outputmode xml
```

To revert to terminal mode, issue the command:

```
xPreferences outputmode terminal
```

#### Example: Layout command in terminal mode

```
xCommand Video Layout AssignCall CallId: 2 LayoutId: 1
```

#### Example: Layout command in XML mode

```
<Command>  
<Video>  
<Layout>  
<AssignCall command="True">  
<CallId>2</CallId>  
<LayoutId>1</LayoutId>  
</AssignCall>  
</Layout>  
</Video>  
</Command>
```



## Using the command line

### Help

To get a list of all supported top level commands you can type `?` or `help` after connecting to the TelePresence System using RS-232, Telnet or SSH.

### Bye

Typing the `bye` command closes the command line interface.

```

?
- User Commands -

help          xcommand      xconfiguration  xevent         xfeedback
xgetxml       xpreferences  xstatus         bye            echo
log           systemtools
OK
    
```

## API commands

### xConfiguration

Configurations are system settings, such as system name and network settings. These are persistent across boots. Refer to ["Configurations" on page 12](#).

### xCommand

Commands instruct the codec to execute actions, such as to dial a number or to search the phone book. Refer to ["Commands" on page 11](#).

### xStatus

A status contains the current state of the codec, such as connected calls, the status of the gatekeeper registration, connected inputs and output sources. Refer to ["Status" on page 13](#).

### xFeedback

The Feedback commands are used to specify what parts of the configuration and status hierarchies to monitor. Feedback is only issued on the RS-232, Telnet or SSH session for which it is specified. If you are connecting to the codec with multiple sessions, you have to define feedback individually for each session. Refer to ["Feedback mechanism" on page 15](#).

### xPreferences

The xPreferences command is used to set preferences for the RS-232, Telnet and SSH sessions. Refer to ["API output" on page 8](#).

### Echo <on/off>

If echo is set to **On** the key inputs are displayed when entering text in a command line interface.

If echo is set to **Off** no user input is displayed when entering text in a command line interface.

### xEvent

the xEvent command returns information on which events are available for feedback. Refer to ["Events" on page 14](#).

### xGetxml

The xGetxml request returns an XML document based on the location parameter attached to the request. The elements (or a complete document) matching the expression will be returned. Refer to ["Feedback mechanism" on page 15](#).

## Other commands

### Systemtools

The systemtools commands are a set of command line tools for administrative control and diagnostics. The commands can be used for advanced troubleshooting together with Cisco technical support. Systemtools are not a part of the programming API. Refer to ["The SystemTools commands" on page 205](#).

### Log

The log command is used to enable advanced logs. It is only used for debugging the system.

## Command line shortcuts

If your client supports it, there are some timesaving shortcuts you can use:

- Tab-completion to complete the commands and arguments.
- Arrow up and arrow down keys to navigate your command history.
- **<CTRL-a>**: Jump to the beginning of the line.
- **<CTRL-e>**: Jump to the end of the line.
- **<CTRL-r>**: Incremental command history search.
- **<CTRL-w>**: Erase the current line.

## Searching

You can use `//` to search for elements anywhere in the status or configuration hierarchy (Example 1).

You can also combine multiple `//`'s (Example 2).

**WARNING:** The search shortcuts work well for inspecting the API, but should not be used in applications. We recommend that you always use the complete paths to avoid command ambiguity when upgrading to newer firmware releases.

## Value types and formats

The system supports the following value types (Example 3):

- **Integer values:** `<x..y>`  
Defines the valid range for an integer input. x = min value, y = max value.
- **Literal values:** `<X/Y/./Z>`  
Defines the possible values for a given configuration.
- **String values:** `<S: x, y>`  
Defines that the valid input for this configuration is a string with minimum length of x and maximum length of y characters. Strings can have rules that further specify their format and length.

### Input values that contain spaces need to be quoted

Any values for configurations and commands containing spaces must be enclosed in quotes. Quotes are not necessary for values without spaces.

#### Examples:

**Correct:** `xCommand dial number: "my number contains spaces"`

**Correct:** `xCommand dial number: 12345`

**Incorrect:** `xCommand dial number: my number contains spaces`

### Case sensitivity

All commands are case-insensitive. All of the following commands will work.

```
XCOMMAND DIAL NUMBER: foo@bar.org
xcommand dial number: foo@bar.org
xCommand Dial Number: foo@bar.org
```

#### Example 1: List all configurations that include words that starts with OUT and HDMI:

```
xconfiguration //out//hdmi
*c xConfiguration Audio Output HDMI 1 Level: 0
*c xConfiguration Audio Output HDMI 1 Mode: On
*c xConfiguration Audio Output HDMI 2 Level: 0
*c xConfiguration Audio Output HDMI 2 Mode: Off
** end
```

OK

#### Example 2: Get the resolution width of all connected sources for both inputs and outputs:

```
xStatus //vid//res//wid
*s Video Input Source 1 Resolution Width: 1920
*s Video Input Source 2 Resolution Width: 0
*s Video Input Source 3 Resolution Width: 0
*s Video Input Source 4 Resolution Width: 0
*s Video Output Connector 1 Resolution Width: 1920
*s Video Output Connector 2 Resolution Width: 1280
*s Video Output Connector 3 Resolution Width: 1280
** end
```

OK

#### Example 3: Value types and formats

```
xconfiguration ??
*? xConfiguration Audio DefaultVolume: <0..100>
*? xConfiguration Audio Input HDMI[1] Level: <-24..0>
*? xConfiguration Audio Input HDMI[1] Mode: <Off/On>
*? xConfiguration Audio Input HDMI[1] VideoAssociation MuteOnInactiveVideo: <Off/On>
*? xConfiguration Audio Input HDMI[1] VideoAssociation VideoInputSource: <1/2/3/4>
*? xConfiguration Audio Input HDMI[2] Level: <-24..0>
*? xConfiguration Audio Input HDMI[2] Mode: <Off/On>
*? xConfiguration Audio Input HDMI[2] VideoAssociation MuteOnInactiveVideo: <Off/On>
*? xConfiguration Audio Input HDMI[2] VideoAssociation VideoInputSource: <1/2/3/4>
.
.
.
*? xConfiguration Video SelfviewDefault Mode: <Off/Current/On>
*? xConfiguration Video SelfviewDefault OnMonitorRole: <First/Second/Current/Third>
*? xConfiguration Video SelfviewDefault PIPPosition: <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>
*? xConfiguration Video Wallpaper: <None/Custom> DEPRECATED
```

OK

## Commands

Commands instruct the codec to execute actions, such as to dial a number or to search the phone book. All commands start with the prefix `xCommand` followed by a command path. Writing `xCommand ?` on the command line will list all the top level commands.

To view the complete list of commands and their parameters, write `xCommand ??` on the command line.

Command arguments are key-value pairs. The `(r)` behind the argument name indicates that the argument is required for the command.

When issuing a `xCommand`, the command consists of one argument and one required parameter.

### Example: `xCommand Dial Number: 123`

- `xCommand` is the command prefix. The command to be executed is `Dial`.
- The example contains one argument, `Number: 123`. `Number` is the key and `123` is its value. The key/value pair is separated with `:'`.

```
xCommand ?
- User Commands -

Audio          Conference    Key           SStringSend
Bookings       Dial          Logging       Standby
Boot           DTMFSend     Message       SystemUnit
Call           Experimental  Phonebook     TStringSend
CallHistory    FacilityService Presentation  UserInterface
CallLog        FarEndControl Preset         UserManagement
CamCtrlPip     GPIO          Provisioning  Video
Camera         HttpFeedback Security

OK
```

```
xCommand ??
xCommand Audio Equalizer List
  EqualizerId: <1..8>
xCommand Audio Equalizer Update
  EqualizerId(r): <1..8>
  FilterType(r): <highpass/highshelf/lowpass/lowshelf/none/peaking>
  Frequency(r): <S: 0, 32>
  Gain(r): <S: 0, 32>
  Q(r): <S: 0, 32>
  Section(r): <1..6>
.
.
.
xCommand Video PreviewFilmstrip Set
  Position(r): <LowerCenter/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>
xCommand Video Selfview Set
  FullscreenMode: <On/Off>
  Mode: <On/Off>
  OnMonitorRole: <First/Fourth/Second/Third>
  PIPPosition: <CenterLeft/CenterRight/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>

OK
```

## Configurations

Configurations are system settings that are persistent across boots. Like commands, also configurations are structured in a hierarchy.

Writing `xConfiguration ?` on the command line lists all the top level configurations.

Writing `xConfiguration ??` lists all configurations and their value spaces.

Writing `xConfiguration` lists all configurations and their current values. To list out only parts of the configuration, write `xConfiguration` followed by one or more parts of the configuration paths.

### Example: Set the H323 Alias ID

Write in:

```
xConfiguration H323 Profile 1 H323Alias ID:
"changed@company.com"
```

### Example: Get the H323 Alias ID

Write in:

```
xConfiguration H323 Profile 1 H323Alias ID
```

Result:

```
*c xConfiguration H323 Profile 1 H323Alias ID:
"changed@company.com"
**end
```

```
xConfiguration ?
- User Configurations -

Audio           H323           RTP           Time
Cameras         Logging        Security      UserInterface
Conference      Network        SerialPort    Video
Experimental    NetworkServices SIP
FacilityService Phonebook      Standby
GPIO            Provisioning   SystemUnit

OK
```

```
xConfiguration ??
*? xConfiguration Audio DefaultVolume: <0..100>
*? xConfiguration Audio Input HDMI[1] Level: <-24..0>
*? xConfiguration Audio Input HDMI[1] Mode: <Off/On>
*? xConfiguration Audio Input HDMI[1] VideoAssociation MuteOnInactiveVideo: <Off/On>
*? xConfiguration Audio Input HDMI[1] VideoAssociation VideoInputSource: <1/2/3/4>
*? xConfiguration Audio Input HDMI[2] Level: <-24..0>
*? xConfiguration Audio Input HDMI[2] Mode: <Off/On>
*? xConfiguration Audio Input HDMI[2] VideoAssociation MuteOnInactiveVideo: <Off/On>
.
.
.
*? xConfiguration Video PIP Presentation DefaultValue Position: <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>
*? xConfiguration Video SelfviewDefault FullscreenMode: <Off/Current/On>
*? xConfiguration Video SelfviewDefault Mode: <Off/Current/On>
*? xConfiguration Video SelfviewDefault OnMonitorRole: <First/Second/Current/Third>
*? xConfiguration Video SelfviewDefault PIPPosition: <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>
*? xConfiguration Video Wallpaper: <None/Custom> DEPRECATED

OK
```

## Status

A status contains the current state of the codec, such as connected calls, the status of the gatekeeper registration, connected inputs and output sources.

Writing `xStatus ?` on the command line lists all top level statuses.

Writing `xStatus` lists all statuses and their current values.

To list out only some of the statuses, write `xstatus` followed by the relevant part of the status path.

```
xStatus ?
- Status -
Audio          GPIO          MediaChannels  SIP
Call           H320          Network        Standby
Camera         H323          NetworkServices SystemUnit
Conference     HttpFeedback  Preset         Time
Diagnostics    ICE           Provisioning   UserInterface
Experimental   Logging      Security       Video

OK
```

### Addressing status information with xStatus

To read the status from the system type `xStatus` followed by a path (address expression):

```
xStatus <address expression>
```

Example 1: Query all ongoing Call information:

```
xStatus Call
*s Call 2 AnswerState: Answered
*s Call 2 CallPriority: None
*s Call 2 CallType: Video
*s Call 2 CallbackNumber: "sip:name@company.com"
*s Call 2 DeviceType: Endpoint
*s Call 2 Direction: Outgoing
*s Call 2 DisplayName: "Display Name"
*s Call 2 Duration: 15
*s Call 2 Encryption Type: "None"
*s Call 2 FacilityServiceId: 0
*s Call 2 ModifyState: Idle
*s Call 2 PlacedOnHold: False
*s Call 2 Protocol: "sip"
*s Call 2 ReceiveCallRate: 6000
*s Call 2 RemoteNumber: "name@company.com"
*s Call 2 Status: Connected
*s Call 2 TransmitCallRate: 4000
** end
```

Example 2: Query the protocol for a call:

```
xStatus Call Protocol
*s Call 2 Protocol: "sip"
OK
```

## Events

Event returns information about the events that are available for feedback. This overview presents examples of some the events that are available on the API.

To get an overview of the supported events type [?](#), [??](#) or [help](#) after xEvent:

- [xEvent ?](#) Lists the top level events
- [xEvent ??](#) List all of the available events
- [xEvent help](#) Lists the top level events

The result for events depends on the state of the codec.

### Example 1: Outgoing Call Indication

Outgoing Call Indication is an event reported when an outgoing call is about to be dialled. Returns the CallId the call has been assigned.

```
*e OutgoingCallIndication CallId: x
** end
```

### Example 2: Call Disconnect

Call Disconnect is an event reported when a call is disconnected. Returns the CallId of the disconnected call and reason for the call's disconnection.

```
*e CallDisconnect CallId: x CauseValue: 0
CauseString: "" CauseType: LocalDisconnect
OrigCallDirection: "outgoing"
** end
```

### Example 3: Call Successful

Call Successful is an event reported when a call is connected successfully, that is when all channels are up and established.

```
*e CallSuccessful CallId: 132 Protocol: "h223"
Direction: "outgoing" CallRate: 768 RemoteURI:
"h223:integratorHQ@company.com" EncryptionIn:
"Off" EncryptionOut: "Off"
** end
```

### Example 4: FECC Action request

FECC Action request is an event reported when far end is sending FECC commands.

```
*e FeccActionInd Id: 132 Req: 1 Pan: 1 PanRight:
1 Tilt: 0 TiltUp: 0 Zoom: 0 ZoomIn: 0 Focus: 0
FocusIn: 0 Timeout: 300 VideoSrc: 0 m: 0
** end
```

### Example 5: TString message received

TString message received is an event reported when far end has sent a TString message.

```
*e TString CallId: 132 Message: "ee"
** end
```

### Example 6: SString message received

SString message received is an event reported when far end has sent a SString message.

```
*e SString String: "ee" Id: 132
** end
```

## Feedback mechanism

To build solutions that can reliably keep the state between the application and the codec synchronized, you need to set up a notification system to report the changes in the state of the codec.

The API supports notifications on the following:

- Configuration changes
- Status changes
- Event notifications

These notifications will not be sent unless the user has explicitly told the codec to do so. The user is required to subscribe to all the feedback the application needs. This is done by registering feedback expressions. The way of registering feedback expressions varies according to the connection method used.

When using HTTP, the method of handling feedback differs slightly from what is presented in this section. See [▶"Feedback from codec over HTTP" on page 18](#) for more information.

**WARNING:** A codec may give very much feedback, especially when calls are connected and disconnected. Therefore, you should only subscribe to the feedback that you need.

Never register for all status feedback by issuing `xFeedback register /Status`. This may give the control application too much data to handle, which may lead to sluggish or unpredictable behavior.

## Feedback expressions

The expression used when registering for feedback is a variant of the XPath language. This language describes a way to select nodes from an XML document. TC software contains three main feedback documents:

Document	API command	Path
Status	<code>xStatus</code>	<code>/Status</code>
Configuration	<code>xConfiguration</code>	<code>/Configuration</code>
Event	<code>xEvent</code>	<code>/Event</code>

The syntax for feedback registering is: `xFeedback register <path>`

Never register for all status feedback by issuing `xFeedback register /Status`.

It is safe to register for all configuration changes using `xFeedback register /Configuration`, as configuration changes will most likely not occur that often.

By going through some examples, we can see how this information can be used to build feedback expressions. A good way to verify the expressions is to point your browser to <http://<ip-address>/getxml?location=path> or to execute `xgetxml <path>` from the terminal, and check that the output matches the nodes you want feedback on.

### Example 1: Microphones Mute status.

Terminal query

```
xStatus Audio Microphones Mute
*s Audio Microphones Mute: Off
** end
```

Equivalent feedback expression

```
xFeedback register /Status/Audio/Microphones/Mute
```

### Example 2: Name of all video input connectors.

Terminal query

```
xConfiguration Video Input Connector Name
*c xConfiguration Video Input Connector 1 Name:
"NameA"
*c xConfiguration Video Input Connector 2 Name:
"NameB"
*c xConfiguration Video Input Connector 3 Name:
"NameC"
*c xConfiguration Video Input Connector 4 Name:
"NameD"
*c xConfiguration Video Input Connector 5 Name:
"NameE"
** end
```

Equivalent feedback expression

```
xFeedback register /Configuration/Video/Input/
Connector/Name
```

### Example 3: Name of video input connector 3.

Terminal query

```
xConfiguration Video Input Connector 3 Name
*c xConfiguration Video Input Connector 3 Name:
"NameC"
** end
```

Equivalent feedback expression

```
xFeedback register /Configuration/Video/Input/
Connector[@item='3']/Name
```

## Terminal connections

### Managing feedback subscriptions

To register, list and deregister feedback expressions you use the command xFeedback and its corresponding sub commands.

The registered expressions are only valid for the currently active connection. If you open two Telnet sessions and register to get feedback in one session, you do not receive feedback in the other session. This also means that if you disconnect from a session, you have to re-register all expressions after reconnecting.

You can register up to 38 expressions.

### Feedback output

The feedback output is exactly the same as you get when querying the system using the xConfiguration and xStatus commands. E.g., if you issue the command xStatus Standby Active on the command line the result is:

```
*s Standby Active: On
** end
```

If you have registered for feedback on status changes the feedback you get when the system goes to standby-mode will be exactly the same:

```
*s Standby Active: On
** end
```

This means that when you are programming against the device you only need to handle one format.

### Example: Managing feedback subscriptions

**A:** Register feedback expressions.

```
Write in: xFeedback register /Status/Audio
Result:  ** end
        OK
```

```
Write in: xFeedback register /Event/CallDisconnect
Result:  ** end
        OK
```

```
Write in: xFeedback register /Configuration/Video/
MainVideoSource
Result:  ** end
        OK
```

**B:** List out currently registered expressions.

```
Write in: xFeedback list
Result:  /Configuration/Video/MainVideoSource
        /Event/CallDisconnect
        /Status/Audio
        ** end
        OK
```

**C:** Deregister feedback expressions.

```
Write in: xFeedback deregister /Event/CallDisconnect
Result:  ** end
        OK
```

```
Write in: xFeedback deregister /Status/Audio
Result:  ** end
        OK
```

**D:** List the new feedback expressions.

```
Write in: xFeedback list
Result:  /Configuration/Video/MainVideoSource
        ** end
        OK
```



## Using HTTP

The codec supports sending commands and configurations over HTTP and HTTPS. It is also possible to retrieve configurations and statuses this way. This interface exposes the same API as the command line, but in XML format.

### URL cheat sheet

The following table contains the main URLs used when accessing the API over HTTP.

Method	URL	Description
GET	http://<ip-address>/status.xml	Complete status document
GET	http://<ip-address>/configuration.xml	Complete configuration document
GET	http://<ip-address>/command.xml	Complete command document
GET	http://<ip-address>/valuespace.xml	Complete valuespace document
GET	http://<ip-address>/getxml?location=<path>	Retrieve document based on a path
POST	http://<ip-address>/putxml	Configurations and commands in HTTP body
GET, POST	http://<ip-address>/formputxml?xmldoc=<xml>	Configurations and commands www-urlencoded

### Getting status and configurations

#### Example 1: Get all status entries on the codec.

```
http://<ip-address>/getxml?location=/Status
```

#### Example 2: Get just the audio statuses of the codec.

```
http://<ip-address>/getxml?location=/Status/Audio
```

#### Example 3: Get all configurations of the codec.

```
http://<ip-address>/getxml?location=/Configuration
```

#### Example 4: Get all video configurations of the codec.

```
http://<ip-address>/getxml?location=/
Configuration/Video
```

### Sending commands and configurations

#### Using HTTP GET

It is possible to use HTTP GET when sending commands or configurations to the codec. This makes it easy to test commands using your browser.

#### Example 1: Setting the camera position.

```
http://<ip-address>/formputxml?xmldoc=
<Command><Camera><PositionSet command="True">
<CameraId>1</CameraId><Pan>200</Pan>
<Tilt>200</Tilt></PositionSet></Camera></Command>
```

#### Example 2: Changing the system name.

```
http://<ip-address>/formputxml?xmldoc=
<Configuration><SystemUnit>
<Name>newName</Name></SystemUnit></Configuration>
```

#### Example 3: Changing multiple configurations in one go.

```
http://<ip-address>/formputxml?xmldoc=
<Configuration><Audio><DefaultVolume>80</
DefaultVolume></Audio><UserInterface><Wallpaper>C
ustom</Wallpaper></UserInterface></Configuration>
```

### Using HTTP POST

When sending configurations and commands to the codec, it is important that the HTTP header Content-Type is set to text/xml, i.e. [Content-Type: text/xml](#). The body of the POST should contain the XML content.

#### Example 1: Changing the system name.

##### Request

```
POST /putxml HTTP/1.1
Content-Type: text/xml
Connection: close
<Configuration>
  <SystemUnit>
    <Name>newName</Name>
  </SystemUnit>
</Configuration>
```

#### Example 2: Setting the camera position.

##### Request

```
POST /putxml HTTP/1.1
Content-Type: text/xml
Connection: close
<Command>
  <Camera>
    <PositionSet command="True">
      <CameraId>1</CameraId>
      <Pan>200</Pan>
      <Tilt>200</Tilt>
    </PositionSet>
  </Camera>
</Command>
```

##### Response

```
HTTP/1.1 200 OK
Date: <date>
Server: WSGIServer/0.1 Python/2.5.4
Cache-Control: no-cache
Content-Type: text/xml
Content-Length: 91
Connection: close
<?xml version="1.0"?>
<Command>
<CameraPositionSetResult item="1" status="OK"/>
</Command>
```

## Feedback from codec over HTTP

To get notifications from the codec, you need to register HTTP feedback expressions. The codec will then use HTTP POST to send feedback messages to the supplied IP-address. This means that you have to have a HTTP server running for your application to receive updates from the codec.

### Registering for feedback

The command for registering is [xCommand HttpFeedback Register](#). The syntax for this command and its arguments are described in this section.

#### HttpFeedback Register syntax:

```
xCommand HttpFeedback Register
  FeedbackSlot: <1..4>
  ServerUrl(r): <S: 1, 2048>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
  Expression: <S: 1, 255>
```

#### HttpFeedback Register arguments:

**FeedbackSlot:** The codec can register up to 4 slots of servers requesting HTTP feedback. Set the registering to one of them.

**Note:** Avoid using FeedbackSlot 3 in an environment where Cisco TelePresence Management Suite (TMS) is used as TMS uses this feedbackslot to register its expressions.

**ServerUrl:** The URL that you want the codec to post the HTTP feedback messages to.

**Expression 1-15:** Register the expressions you want to receive feedback on. See the ["Feedback mechanism" on page 15](#) section for more information about the expression formats.

**Example:** Registering feedback on configuration changes, disconnect events and call status changes.

```
<Command>
  <HttpFeedback>
    <Register command="True">
      <FeedbackSlot>1</FeedbackSlot>
      <ServerUrl>http://127.0.0.1/
        myhttppostsripturl</ServerUrl>
      <Expression item="1">/Configuration</
        Expression>
      <Expression item="2">/Event/
        CallDisconnect</Expression>
      <Expression item="3">/Status/Call</
        Expression>
    </Register>
  </HttpFeedback>
</Command>
```

#### Feedback output

When the codec notifies the registered HTTP server about changes, the body contains the same XML as when polling. There is however one small difference. The root-node contains an [Identification](#) node with children that specify the codec from which the notification originated. This means that you can handle multiple codecs with a single HTTP server URI.

**Example:** Audio volume changed.

```
<Configuration xmlns="http://www.company.com/XML/
  CUIL/2.0">
  <Identification>
    <SystemName>integrator</SystemName>
    <MACAddress>00:00:de:ad:be:ef</MACAddress>
    <IPAddress>192.168.1.100</IPAddress>
    <ProductType>Cisco Codec</ProductType>
    <ProductID>Cisco Codec C90</ProductID>
    <SWVersion>TC6.0.0.199465</SWVersion>
    <HWBoard>101401-5 [08]</HWBoard>
    <SerialNumber>PH0000000</SerialNumber>
  </Identification>
  <Audio item="1">
    <Volume item="1">60</Volume>
  </Audio>
</Configuration>
```

## Translating from terminal mode to XML

### Translating commands

The XML commands maintain the same structure as the terminal commands, but they use a parent-child relationship to describe the hierarchy. You can see this structure in the examples below.

#### Example 1: Setting up a call.

##### Terminal

```
xCommand Dial Number: "12345" Protocol: H323
```

##### XML

```
<Command>
  <Dial command="True">
    <Number>12345</Number>
    <Protocol>H323</Protocol>
  </Dial>
</Command>
```

#### Example 2: Assigning video layout to a call.

##### Terminal

```
xCommand Video Layout AssignCall CallId: 2
LayoutId: 1
```

##### XML

```
<Command>
  <Video>
    <Layout>
      <AssignCall command="True">
        <CallId>2</CallId>
        <LayoutId>1</LayoutId>
      </AssignCall>
    </Layout>
  </Video>
</Command>
```

### Translating configurations

Translating from xConfiguration to XML is similar to commands, but with the addition of a special attribute item="NN" for specifying the index in arrays.

#### Example: Configuring the input source type for video input connector 2.

##### Terminal

```
xConfiguration Video Input Connector 2
InputSourceType: camera
```

##### XML

```
<Configuration>
  <Video>
    <Input>
      <Connector item="2">
        <InputSourceType>camera</InputSourceType>
      </Connector>
    </Input>
  </Video>
</Configuration>
```

## Dos and don'ts

Here are some best practices when programming the Cisco C- and SX-series API.

### **AVOID remote control emulation**

The use of xCommand Key Press and xCommand Key Click commands is highly discouraged. The commands are still available in the API, but we recommend the use of direct commands, as this ensures backwards compatibility in your integrations. Program against the codec, not the on-screen-display.

### **DO use complete commands**

You should always use complete commands when programming, i.e. always use xConfiguration Video instead of xconf vid. The shortcuts can be used for searches in the API on the command line, but not for programming. The reason for this is that you might end up with ambiguous code when additional commands are added to the API.

### **DO NOT subscribe to unnecessary feedback**

Subscribing to too much feedback may congest the control application. Although the amount of feedback may seem fine in the current version, the amount of feedback may grow in future releases.

### **DO NOT use the experimental section in production**

Under the listing of commands, status and configurations, you can find subsections that start with Experimental.

- xCommand Experimental
- xStatus Experimental
- xConfiguration Experimental

These sections give access to features that we are still working on and have yet to release for official use. This part of the API will NOT stay backwards compatible and the structure WILL CHANGE.

Do not use the experimental section in production - in future versions of the firmware these sections may be hidden or removed.

Chapter 3

# *xConfiguration commands*

## Description of the xConfiguration commands

In this chapter, you can find a complete list of the xConfiguration commands. The examples show either the default value or an example of a value.

We recommend you visit our web site regularly for updated versions of the manual.

Go to: <http://www.cisco.com/go/sx-docs>

<b>Audio configuration</b> .....	<b>27</b>	xConfiguration Audio Output Line [1..6] Equalizer ID .....	30
xConfiguration Audio Input HDMI [1..3] Mode .....	27	xConfiguration Audio Output Line [1..6] Equalizer Mode .....	30
xConfiguration Audio Input HDMI [1..3] Level .....	27	xConfiguration Audio Output Line [1..6] Level .....	30
xConfiguration Audio Input HDMI [1..3] VideoAssociation MuteOnInactiveVideo .....	27	xConfiguration Audio Output Line [1..6] Mode .....	30
xConfiguration Audio Input HDMI [1..3] VideoAssociation VideoInputSource .....	27	xConfiguration Audio Microphones Mute Enabled .....	30
xConfiguration Audio Input Line [1..4] Equalizer ID .....	27	xConfiguration Audio SoundsAndAlerts KeyTones Mode .....	30
xConfiguration Audio Input Line [1..4] Equalizer Mode .....	27	xConfiguration Audio SoundsAndAlerts RingTone .....	31
xConfiguration Audio Input Line [1..4] VideoAssociation MuteOnInactiveVideo .....	27	xConfiguration Audio SoundsAndAlerts RingVolume .....	31
xConfiguration Audio Input Line [1..4] VideoAssociation VideoInputSource .....	27	xConfiguration Audio DefaultVolume .....	31
xConfiguration Audio Input Line [1..4] Channel .....	28		
xConfiguration Audio Input Line [1..4] Level .....	28	<b>Cameras configuration</b> .....	<b>31</b>
xConfiguration Audio Input Line [1..4] Mode .....	28	xConfiguration Cameras PowerLine Frequency .....	31
xConfiguration Audio Input Microphone [1..8] EchoControl Mode .....	28	xConfiguration Cameras Camera [1..7] Backlight .....	31
xConfiguration Audio Input Microphone [1..8] EchoControl NoiseReduction .....	28	xConfiguration Cameras Camera [1..7] Brightness Mode .....	31
xConfiguration Audio Input Microphone [1..8] EchoControl Dereverberation .....	28	xConfiguration Cameras Camera [1..7] Brightness Level .....	32
xConfiguration Audio Input Microphone [1..8] Equalizer ID .....	29	xConfiguration Cameras Camera [1..7] Flip .....	32
xConfiguration Audio Input Microphone [1..8] Equalizer Mode .....	29	xConfiguration Cameras Camera [1..7] Focus Mode .....	32
xConfiguration Audio Input Microphone [1..8] VideoAssociation MuteOnInactiveVideo .....	29	xConfiguration Cameras Camera [1..7] Gamma Mode .....	32
xConfiguration Audio Input Microphone [1..8] VideoAssociation VideoInputSource .....	29	xConfiguration Cameras Camera [1..7] Gamma Level .....	32
xConfiguration Audio Input Microphone [1..8] Level .....	29	xConfiguration Cameras Camera [1..7] IrSensor .....	32
xConfiguration Audio Input Microphone [1..8] Mode .....	29	xConfiguration Cameras Camera [1..7] Mirror .....	32
xConfiguration Audio Input Microphone [1..8] Type .....	29	xConfiguration Cameras Camera [1..7] MotorMoveDetection .....	33
xConfiguration Audio Output HDMI [1..2] Level .....	29	xConfiguration Cameras Camera [1..7] Whitebalance Mode .....	33
xConfiguration Audio Output HDMI [1..2] Mode .....	30	xConfiguration Cameras Camera [1..7] Whitebalance Level .....	33
xConfiguration Audio Output Line [1..6] Channel .....	30	xConfiguration Cameras Camera [1..7] DHCP .....	33

<b>Conference configuration</b> .....	<b>33</b>	xConfiguration H323 Profile [1..1] Authentication Password.....	39
xConfiguration Conference ActiveControl Mode.....	33	xConfiguration H323 Profile [1..1] CallSetup Mode.....	40
xConfiguration Conference [1..1] CallProtocolIPStack.....	33	xConfiguration H323 Profile [1..1] Gatekeeper Discovery.....	40
xConfiguration Conference [1..1] AutoAnswer Mode.....	33	xConfiguration H323 Profile [1..1] Gatekeeper Address.....	40
xConfiguration Conference [1..1] AutoAnswer Mute.....	34	xConfiguration H323 Profile [1..1] H323Alias E164.....	40
xConfiguration Conference [1..1] AutoAnswer Delay.....	34	xConfiguration H323 Profile [1..1] H323Alias ID.....	40
xConfiguration Conference [1..1] MicUnmuteOnDisconnect Mode.....	34	xConfiguration H323 Profile [1..1] PortAllocation.....	40
xConfiguration Conference [1..1] DoNotDisturb DefaultTimeout.....	34		
xConfiguration Conference [1..1] FarEndControl Mode.....	34	<b>Logging configuration</b> .....	<b>41</b>
xConfiguration Conference [1..1] FarEndControl SignalCapability.....	34	xConfiguration Logging Mode.....	41
xConfiguration Conference [1..1] Encryption Mode.....	34		
xConfiguration Conference [1..1] DefaultCall Rate.....	35	<b>Network configuration</b> .....	<b>41</b>
xConfiguration Conference [1..1] MaxTransmitCallRate.....	35	xConfiguration Network [1..1] IPStack.....	41
xConfiguration Conference [1..1] MaxReceiveCallRate.....	35	xConfiguration Network [1..1] IPv4 Assignment.....	41
xConfiguration Conference [1..1] MaxTotalTransmitCallRate.....	35	xConfiguration Network [1..1] IPv4 Address.....	41
xConfiguration Conference [1..1] MaxTotalReceiveCallRate.....	35	xConfiguration Network [1..1] IPv4 Gateway.....	42
xConfiguration Conference [1..1] VideoBandwidth Mode.....	35	xConfiguration Network [1..1] IPv4 SubnetMask.....	42
xConfiguration Conference [1..1] VideoBandwidth MainChannel Weight.....	36	xConfiguration Network [1..1] IPv6 Assignment.....	42
xConfiguration Conference [1..1] VideoBandwidth PresentationChannel Weight.....	36	xConfiguration Network [1..1] IPv6 Address.....	42
xConfiguration Conference [1..1] Presentation RelayQuality.....	36	xConfiguration Network [1..1] IPv6 Gateway.....	42
xConfiguration Conference [1..1] Presentation OnPlacedOnHold.....	36	xConfiguration Network [1..1] IPv6 DHCPOptions.....	42
xConfiguration Conference [1..1] Multipoint Mode.....	36	xConfiguration Network [1..1] DHCP RequestTFTPServerAddress.....	43
xConfiguration Conference [1..1] IncomingMultisiteCall Mode.....	37	xConfiguration Network [1..1] DNS Domain Name.....	43
		xConfiguration Network [1..1] DNS Server [1..3] Address.....	43
<b>FacilityService configuration</b> .....	<b>37</b>	xConfiguration Network [1..1] QoS Mode.....	43
xConfiguration FacilityService Service [1..5] Type.....	37	xConfiguration Network [1..1] QoS Diffserv Audio.....	43
xConfiguration FacilityService Service [1..5] Name.....	37	xConfiguration Network [1..1] QoS Diffserv Video.....	44
xConfiguration FacilityService Service [1..5] Number.....	38	xConfiguration Network [1..1] QoS Diffserv Data.....	44
xConfiguration FacilityService Service [1..5] CallType.....	38	xConfiguration Network [1..1] QoS Diffserv Signalling.....	44
		xConfiguration Network [1..1] QoS Diffserv ICMPv6.....	44
<b>GPIO configuration</b> .....	<b>38</b>	xConfiguration Network [1..1] QoS Diffserv NTP.....	45
xConfiguration GPIO Pin [1..4] Mode.....	38	xConfiguration Network [1..1] IEEE8021X Mode.....	45
		xConfiguration Network [1..1] IEEE8021X TlsVerify.....	45
<b>H323 configuration</b> .....	<b>39</b>	xConfiguration Network [1..1] IEEE8021X UseClientCertificate.....	45
xConfiguration H323 NAT Mode.....	39	xConfiguration Network [1..1] IEEE8021X Identity.....	45
xConfiguration H323 NAT Address.....	39	xConfiguration Network [1..1] IEEE8021X Password.....	45
xConfiguration H323 Profile [1..1] Authentication Mode.....	39	xConfiguration Network [1..1] IEEE8021X AnonymouslyIdentity.....	45
xConfiguration H323 Profile [1..1] Authentication LoginName.....	39	xConfiguration Network [1..1] IEEE8021X Eap Md5.....	46

xConfiguration Network [1..1] IEEE8021X Eap Tls .....	46	<b>Provisioning configuration .....</b>	<b>51</b>
xConfiguration Network [1..1] IEEE8021X Eap Tls .....	46	xConfiguration Provisioning Connectivity .....	51
xConfiguration Network [1..1] IEEE8021X Eap Peap .....	46	xConfiguration Provisioning Mode .....	51
xConfiguration Network [1..1] MTU .....	46	xConfiguration Provisioning LoginName .....	51
xConfiguration Network [1..1] Speed .....	46	xConfiguration Provisioning Password.....	51
xConfiguration Network [1..1] TrafficControl Mode .....	47	xConfiguration Provisioning HttpMethod .....	51
xConfiguration Network [1..1] RemoteAccess Allow .....	47	xConfiguration Provisioning ExternalManager Address.....	52
xConfiguration Network [1..1] VLAN Voice Mode .....	47	xConfiguration Provisioning ExternalManager AlternateAddress .....	52
xConfiguration Network [1..1] VLAN Voice VlanId .....	47	xConfiguration Provisioning ExternalManager Protocol.....	52
<b>NetworkServices configuration .....</b>	<b>47</b>	xConfiguration Provisioning ExternalManager Path .....	52
xConfiguration NetworkServices H323 Mode .....	47	xConfiguration Provisioning ExternalManager Domain .....	52
xConfiguration NetworkServices HTTP Mode .....	47	<b>RTP configuration .....</b>	<b>53</b>
xConfiguration NetworkServices SIP Mode.....	47	xConfiguration RTP Ports Range Start.....	53
xConfiguration NetworkServices Telnet Mode .....	48	xConfiguration RTP Ports Range Stop .....	53
xConfiguration NetworkServices WelcomeText.....	48	<b>Security configuration .....</b>	<b>53</b>
xConfiguration NetworkServices XMLAPI Mode .....	48	xConfiguration Security Audit Logging Mode .....	53
xConfiguration NetworkServices HTTPS Mode.....	48	xConfiguration Security Audit OnError Action.....	53
xConfiguration NetworkServices HTTPS VerifyServerCertificate.....	48	xConfiguration Security Audit Server Address .....	54
xConfiguration NetworkServices HTTPS VerifyClientCertificate.....	48	xConfiguration Security Audit Server Port.....	54
xConfiguration NetworkServices HTTPS OCSP Mode.....	48	xConfiguration Security Audit Server PortAssignment.....	54
xConfiguration NetworkServices HTTPS OCSP URL .....	49	xConfiguration Security Session ShowLastLogon.....	54
xConfiguration NetworkServices NTP Mode .....	49	xConfiguration Security Session InactivityTimeout.....	54
xConfiguration NetworkServices NTP Address .....	49	<b>SerialPort configuration.....</b>	<b>55</b>
xConfiguration NetworkServices SNMP Mode.....	49	xConfiguration SerialPort Mode.....	55
xConfiguration NetworkServices SNMP Host [1..3] Address.....	49	xConfiguration SerialPort BaudRate.....	55
xConfiguration NetworkServices SNMP CommunityName .....	49	xConfiguration SerialPort LoginRequired.....	55
xConfiguration NetworkServices SNMP SystemContact .....	50	<b>SIP configuration .....</b>	<b>55</b>
xConfiguration NetworkServices SNMP SystemLocation .....	50	xConfiguration SIP ANAT .....	55
xConfiguration NetworkServices SSH Mode.....	50	xConfiguration SIP AuthenticateTransferror .....	55
xConfiguration NetworkServices SSH AllowPublicKey.....	50	xConfiguration SIP ListenPort .....	55
<b>Phonebook configuration .....</b>	<b>50</b>	xConfiguration SIP PreferredIPMedia .....	55
xConfiguration Phonebook Server [1..1] ID.....	50	xConfiguration SIP PreferredIPSignaling.....	56
xConfiguration Phonebook Server [1..1] Type .....	50	xConfiguration SIP OCSP Mode .....	56
xConfiguration Phonebook Server [1..1] URL .....	50		



xConfiguration SIP OCSP DefaultResponder.....	56
xConfiguration SIP Profile [1..1] Ice Mode .....	56
xConfiguration SIP Profile [1..1] Ice DefaultCandidate .....	56
xConfiguration SIP Profile [1..1] Turn DiscoverMode .....	56
xConfiguration SIP Profile [1..1] Turn BandwidthProbe.....	56
xConfiguration SIP Profile [1..1] Turn DropRflx .....	56
xConfiguration SIP Profile [1..1] Turn Server.....	57
xConfiguration SIP Profile [1..1] Turn UserName .....	57
xConfiguration SIP Profile [1..1] Turn Password.....	57
xConfiguration SIP Profile [1..1] URI.....	57
xConfiguration SIP Profile [1..1] DisplayName .....	57
xConfiguration SIP Profile [1..1] Authentication [1..1] LoginName .....	57
xConfiguration SIP Profile [1..1] Authentication [1..1] Password.....	57
xConfiguration SIP Profile [1..1] DefaultTransport .....	57
xConfiguration SIP Profile [1..1] TlsVerify.....	58
xConfiguration SIP Profile [1..1] Outbound .....	58
xConfiguration SIP Profile [1..1] Proxy [1..4] Address .....	58
xConfiguration SIP Profile [1..1] Proxy [1..4] Discovery .....	58
xConfiguration SIP Profile [1..1] Type.....	58
xConfiguration SIP Profile [1..1] Mailbox .....	58
xConfiguration SIP Profile [1..1] Line.....	59
<b>Standby configuration .....</b>	<b>59</b>
xConfiguration Standby Control.....	59
xConfiguration Standby Delay.....	59
xConfiguration Standby BootAction.....	59
xConfiguration Standby StandbyAction .....	60
xConfiguration Standby WakeupAction .....	60
<b>SystemUnit configuration .....</b>	<b>60</b>
xConfiguration SystemUnit Name .....	60
xConfiguration SystemUnit MenuLanguage .....	60
xConfiguration SystemUnit CallLogging Mode .....	60
xConfiguration SystemUnit ContactInfo Type .....	61
xConfiguration SystemUnit IrSensor.....	61

<b>Time configuration.....</b>	<b>61</b>
xConfiguration Time Zone.....	61
xConfiguration Time TimeFormat.....	62
xConfiguration Time DateFormat .....	62
<b>UserInterface configuration.....</b>	<b>62</b>
xConfiguration UserInterface Language .....	62
xConfiguration UserInterface OSD EncryptionIndicator.....	62
xConfiguration UserInterface OSD LanguageSelection.....	63
xConfiguration UserInterface OSD LoginRequired .....	63
xConfiguration UserInterface OSD Output.....	63
xConfiguration UserInterface Wallpaper .....	63
xConfiguration UserInterface TouchPanel DefaultPanel .....	63
xConfiguration UserInterface UserPreferences.....	63
<b>Video configuration .....</b>	<b>64</b>
xConfiguration Video AllowWebSnapshots .....	64
xConfiguration Video CamCtrlPip CallSetup Mode.....	64
xConfiguration Video CamCtrlPip CallSetup Duration .....	64
xConfiguration Video DefaultPresentationSource.....	64
xConfiguration Video Input Connector [1..5] Name.....	64
xConfiguration Video Input Connector [1..5] InputSourceType .....	64
xConfiguration Video Input Connector [1..5] Visibility .....	64
xConfiguration Video Input Connector [1..5] CameraControl Mode .....	65
xConfiguration Video Input Connector [1..5] CameraControl CameraId .....	65
xConfiguration Video Input Connector [1..5] Quality .....	65
xConfiguration Video Input Connector [1..5] OptimalDefinition Profile .....	65
xConfiguration Video Input Connector [1..5] OptimalDefinition Threshold60fps .....	66
xConfiguration Video Input Connector [1..4] PresentationSelection .....	66
xConfiguration Video Input Connector [1..4] RGBQuantizationRange.....	66
xConfiguration Video Input Connector [4] DviType .....	66
xConfiguration Video Input Connector [5] SignalType .....	67
xConfiguration Video Layout DisableDisconnectedLocalOutputs .....	67
xConfiguration Video Layout LocalLayoutFamily .....	67
xConfiguration Video Layout PresentationDefault View .....	67
xConfiguration Video Layout RemoteLayoutFamily .....	67

xConfiguration Video Layout Scaling .....	68	xConfiguration Video OSD Output .....	70
xConfiguration Video Layout ScaleToFrame .....	68	xConfiguration Video OSD LoginRequired .....	70
xConfiguration Video Layout ScaleToFrameThreshold .....	68	xConfiguration Video Output Connector [1..2] CEC Mode .....	70
xConfiguration Video PIP ActiveSpeaker DefaultValue Position .....	68	xConfiguration Video Output Connector [1..3] Location HorizontalOffset .....	70
xConfiguration Video PIP Presentation DefaultValue Position .....	68	xConfiguration Video Output Connector [1..3] Location VerticalOffset .....	71
xConfiguration Video SelfviewDefault Mode .....	69	xConfiguration Video Output Connector [1..3] RGBQuantizationRange .....	71
xConfiguration Video SelfviewDefault FullscreenMode .....	69	xConfiguration Video Output Connector [1..3] Resolution .....	71
xConfiguration Video SelfviewDefault PIPPosition .....	69	xConfiguration Video Output Connector [1..3] MonitorRole .....	71
xConfiguration Video SelfviewDefault OnMonitorRole .....	69	xConfiguration Video Wallpaper .....	72
xConfiguration Video Monitors .....	70		
xConfiguration Video OSD LanguageSelection .....	70	<b>Experimental configuration .....</b>	<b>72</b>
xConfiguration Video OSD EncryptionIndicator .....	70		

## Audio configuration

### xConfiguration Audio Input HDMI [1..3] Mode

Determine if the audio channels on the HDMI input shall be enabled. The HDMI input has two audio channels.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable audio on the HDMI input.

*On:* Enable audio on the HDMI input.

**Example:** xConfiguration Audio Input HDMI 1 Mode: On

### xConfiguration Audio Input HDMI [1..3] Level

Define the audio level of the HDMI input connector, in steps of 1 dB.

See the Audio Level tables in the Physical Interfaces Guide for the codec for a complete overview of the menu values represented in dB.

**Requires user role:** ADMIN

**Value space:** <-24..0>

*Range:* Select a value from -24 to 0 dB.

**Example:** xConfiguration Audio Input HDMI 2 Level: 0

### xConfiguration Audio Input HDMI [1..3] VideoAssociation MuteOnInactiveVideo

Enable association of a video source to an HDMI audio input.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No video source is associated.

*On:* A video source is associated, and the audio will be muted if the associated video source is not displayed.

**Example:** xConfiguration Audio Input HDMI 2 VideoAssociation MuteOnInactiveVideo: Off

### xConfiguration Audio Input HDMI [1..3] VideoAssociation VideoInputSource

Select the associated video input source.

**Requires user role:** ADMIN

**Value space:** <1/2/3/4>

*Range:* Select one of the video input sources.

**Example:** xConfiguration Audio Input HDMI 2 VideoAssociation VideoInputSource: 1

### xConfiguration Audio Input Line [1..4] Equalizer ID

Select the audio input line equalizer ID.

**Requires user role:** ADMIN

**Value space:** <1..8>

*Range:* Select EqualizerID 1 to 8.

**Example:** xConfiguration Audio Input Line 1 Equalizer ID: 1

### xConfiguration Audio Input Line [1..4] Equalizer Mode

Set the audio input line equalizer mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No equalizer.

*On:* Enable the equalizer for the audio input line.

**Example:** xConfiguration Audio Input Line 1 Equalizer Mode: Off

### xConfiguration Audio Input Line [1..4] VideoAssociation MuteOnInactiveVideo

Enable association of a video source to a Line audio input.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No video source is associated.

*On:* A video source is associated, and the audio will be muted if the associated video source is not displayed.

**Example:** xConfiguration Audio Input Line 1 VideoAssociation MuteOnInactiveVideo: Off

### xConfiguration Audio Input Line [1..4] VideoAssociation VideoInputSource

Select the associated video input source.

**Requires user role:** ADMIN

**Value space:** <1/2/3>

*Range:* Select one of the video input sources.

**Example:** xConfiguration Audio Input Line 1 VideoAssociation VideoInputSource: 1

### xConfiguration Audio Input Line [1..4] Channel

Define whether the Audio Line input is a mono signal or part of a multichannel signal.

**Requires user role:** ADMIN

**Value space:** <Right/Left/Mono>

*Right:* The Audio Line input signal is the right channel of a stereo signal.

*Left:* The Audio Line input signal is the left channel of a stereo signal.

*Mono:* The Audio Line input signal is a mono signal.

**Example:** xConfiguration Audio Input 1 Channel: Left

### xConfiguration Audio Input Line [1..4] Level

Define the audio level of the Line input connector, in steps of 1 dB.

See the Audio Level tables in the Physical Interfaces Guide for the codec for a complete overview of the menu values represented in dB.

**Requires user role:** ADMIN

**Value space:** <0..24>

*Range:* Select a value from 0 to 24 dB.

**Example:** xConfiguration Audio Input Line 1 Level: 10

### xConfiguration Audio Input Line [1..4] Mode

Set the audio input line mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the Audio Line input.

*On:* Enable the Audio Line input.

**Example:** xConfiguration Audio Input Line 1 Mode: On

### xConfiguration Audio Input Microphone [1..8] EchoControl Mode

The echo canceller continuously adjusts itself to the audio characteristics of the room and compensate for any changes it detects in the audio environment. If the changes in the audio conditions are very significant the echo canceller may take a second or two to re-adjust.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Echo Control should be switched Off if external echo cancellation or playback equipment is used.

*On:* Echo Control is normally set to On to prevent the far end from hearing their own audio. Once selected, echo cancellation is active at all times.

**Example:** xConfiguration Audio Input Microphone 1 EchoControl Mode: On

### xConfiguration Audio Input Microphone [1..8] EchoControl NoiseReduction

The system has a built-in noise reduction which reduces constant background noise (for example noise from air-conditioning systems, cooling fans etc.). In addition, a high pass filter (Humfilter) reduces very low frequency noise. Requires the Echo Control Mode to be enabled for the microphone.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Turn off the Noise Reduction.

*On:* The Noise Reduction should be enabled in the presence of low frequency noise.

**Example:** xConfiguration Audio Input Microphone 1 EchoControl NoiseReduction: On

### xConfiguration Audio Input Microphone [1..8] EchoControl Dereverberation

The system has built-in signal processing to reduce the effect of room reverberation. Requires the Echo Control Mode to be enabled for the microphone.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Turn off the dereverberation.

*On:* Turn on the dereverberation.

**Example:** xConfiguration Audio Input Microphone 1 EchoControl Dereverberation: On

### xConfiguration Audio Input Microphone [1..8] Equalizer ID

Select the audio input microphone equalizer ID.

**Requires user role:** ADMIN

**Value space:** <1..8>

*Range:* Select Equalizer ID 1 to 8.

**Example:** `xConfiguration Audio Input Microphone 1 Equalizer ID: 1`

### xConfiguration Audio Input Microphone [1..8] Equalizer Mode

Set the audio input microphone equalizer mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No equalizer.

*On:* Enable the equalizer for the audio input microphone.

**Example:** `xConfiguration Audio Input Microphone 1 Equalizer Mode: Off`

### xConfiguration Audio Input Microphone [1..8] VideoAssociation MuteOnInactiveVideo

Enable association of a video source to a microphone audio input.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No video source is associated.

*On:* A video source is associated, and the audio will be muted if the associated video source is not displayed.

**Example:** `xConfiguration Audio Input Microphone 1 VideoAssociation MuteOnInactiveVideo: On`

### xConfiguration Audio Input Microphone [1..8] VideoAssociation VideoInputSource

Select the associated video input source.

**Requires user role:** ADMIN

**Value space:** <1/2/3>

*Range:* Select one of the video input sources.

**Example:** `xConfiguration Audio Input Microphone 1 VideoAssociation VideoInputSource: 1`

### xConfiguration Audio Input Microphone [1..8] Level

Define the audio level of the Microphone input connector, in steps of 1dB.

See the Audio Level tables in the Physical Interfaces Guide for the codec for a complete overview of the menu values represented in dB.

**Requires user role:** ADMIN

**Value space:** <0..70>

*Range:* Select a value between 0 and 70 dB.

**Example:** `xConfiguration Audio Input Microphone 1 Level: 58`

### xConfiguration Audio Input Microphone [1..8] Mode

Set the audio input microphone mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the microphone connector.

*On:* Enable the microphone connector.

**Example:** `xConfiguration Audio Input Microphone 1 Mode: On`

### xConfiguration Audio Input Microphone [1..8] Type

The microphone connectors are intended for electret type microphones. The microphone connector can be set to line or microphone mode.

**Requires user role:** ADMIN

**Value space:** <Microphone/Line>

*Microphone:* Select Microphone when you have 48 V Phantom voltage and the pre-amplification is On.

*Line:* Select Line when you have a standard balanced line input. The phantom voltage and pre-amplification is Off.

**Example:** `xConfiguration Audio Input Microphone 1 Type: Line`

### xConfiguration Audio Output HDMI [1..2] Level

Define the output level of the HDMI output connector, in steps of 1 dB.

See the Audio Level tables in the Physical Interfaces Guide for the codec for a complete overview of the menu values represented in dB.

**Requires user role:** ADMIN

**Value space:** <-24..0>

*Range:* Select a value from -24 to 0 dB.

**Example:** `xConfiguration Audio Output HDMI 1 Level: 0`

### xConfiguration Audio Output HDMI [1..2] Mode

Determine if the audio channel on the HDMI output connector shall be enabled.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the audio channel on the HDMI output.

*On:* Enable the audio channel on the HDMI output.

**Example:** `xConfiguration Audio Output HDMI 1 Mode: On`

### xConfiguration Audio Output Line [1..6] Channel

Define whether the Audio Line output is a mono signal or part of a multichannel signal.

**Requires user role:** ADMIN

**Value space:** <Right/Left/Mono>

*Right:* The Audio Line output signal is the right channel of a stereo signal.

*Left:* The Audio Line output signal is the left channel of a stereo signal.

*Mono:* The Audio Line output signal is a mono signal.

**Example:** `xConfiguration Audio Output Line 1 Channel: left`

### xConfiguration Audio Output Line [1..6] Equalizer ID

Select the audio output line equalizer ID.

**Requires user role:** ADMIN

**Value space:** <1..8>

*Range:* Select EqualizerID 1 to 8.

**Example:** `xConfiguration Audio Output Line 1 Equalizer ID: 1`

### xConfiguration Audio Output Line [1..6] Equalizer Mode

Set the audio output line equalizer mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No equalizer.

*On:* Enable the equalizer for the audio output line.

**Example:** `xConfiguration Audio Output Line 1 Equalizer Mode: Off`

### xConfiguration Audio Output Line [1..6] Level

Define the output level of the Audio Output Line connector, in steps of 1 dB.

See the Audio Level tables in the Physical Interfaces Guide for the codec for a complete overview of the menu values represented in dB.

**Requires user role:** ADMIN

**Value space:** <-24..0>

*Range:* Select a value from -24 to 0 dB.

**Example:** `xConfiguration Audio Output Line 1 Level: -10`

### xConfiguration Audio Output Line [1..6] Mode

Set the audio output line mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the Audio Line output.

*On:* Enable the Audio Line output.

**Example:** `xConfiguration Audio Output Line 1 Mode: On`

### xConfiguration Audio Microphones Mute Enabled

Determine whether audio-mute is allowed or not. The default value is True.

**Requires user role:** ADMIN

**Value space:** <True/InCallOnly>

*True:* Muting of audio is always available.

*InCallOnly:* Muting of audio is only available when the device is in a call. When Idle it is not possible to mute the microphone. This is useful when an external telephone service/audio system is connected via the codec and is to be available when the codec is not in a call. When set to InCallOnly this will prevent the audio-system from being muted by mistake.

**Example:** `xConfiguration Audio Microphones Mute Enabled: True`

### xConfiguration Audio SoundsAndAlerts KeyTones Mode

The system can be configured to make a keyboard click sound effect (key tone) when typing text or numbers on the Touch controller.

**Requires user role:** USER

**Value space:** <Off/On>

*Off:* No key tones will be played when you type.

*On:* You will hear key tones when you type.

**Example:** `xConfiguration Audio SoundsAndAlerts KeyTones Mode: Off`

### xConfiguration Audio SoundsAndAlerts RingTone

This setting defines which ringtone to use for incoming calls. You need to enter the exact name of the ringtone. You can find the available ringtones the following ways.

Web interface: On the Configuration > Personalization page.

Touch controller: On the Ringtone & Sound panel of the Settings menu. This panel is either in the open part of the Settings menu, or included in the password protected Administrator menu. The UserInterface UserPreference setting defines which panels will be in the password protected area.

**Requires user role:** USER

**Value space:** <S: 1, 100>

*Format:* String with a maximum of 100 characters.

**Example:** xConfiguration Audio SoundsAndAlerts RingTone: "Sunrise"

### xConfiguration Audio SoundsAndAlerts RingVolume

Sets the ring volume for an incoming call.

**Requires user role:** USER

**Value space:** <0..100>

*Range:* The value goes in steps of 5 from 0 to 100 (from -34.5 dB to 15 dB). Volume 0 = Off.

**Example:** xConfiguration Audio SoundsAndAlerts RingVolume: 50

### xConfiguration Audio DefaultVolume

Set the default speaker volume. The volume returns to this value when you switch on or restart the video system. You can also run the following API command to return to the default value: xCommand Audio Volume SetToDefault. Run the xCommand Audio Volume commands or use the Touch controller to change the volume while the video system is running.

**Requires user role:** USER

**Value space:** <0..100>

*Range:* The value must be between 0 and 100. The values from 1 to 100 correspond to the range from -34.5 dB to 15 dB (0.5 dB steps). The value 0 means that the audio is switched off.

**Example:** xConfiguration Audio DefaultVolume: 70

## Cameras configuration

### xConfiguration Cameras PowerLine Frequency

If your camera supports power line frequency anti-flickering, the camera is able to compensate for any flicker noise from the electrical power supply. You should set this camera configuration based on your power line frequency. If your camera supports auto detection of line frequency, you can select the Auto option in the configuration.

All Cisco Precision cameras support both anti-flickering and auto detection of line frequency. Auto is the default value, so you should change this setting if you have a camera that does not support auto detection.

**Requires user role:** ADMIN

**Value space:** <Auto/50Hz/60Hz>

*Auto:* Allow the camera to detect the power frequency automatically.

*50Hz:* Use this value when the power line frequency is 50 Hz.

*60Hz:* Use this value when the power line frequency is 60 Hz.

**Example:** xConfiguration Cameras PowerLine Frequency: Auto

### xConfiguration Cameras Camera [1..7] Backlight

This configuration turns backlight compensation on or off. Backlight compensation is useful when there is much light behind the persons in the room. Without compensation the persons will easily appear very dark to the far end.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Turn off the camera backlight compensation.

*On:* Turn on the camera backlight compensation.

**Example:** xConfiguration Cameras Camera 1 Backlight: Off

### xConfiguration Cameras Camera [1..7] Brightness Mode

Set the camera brightness mode.

**Requires user role:** ADMIN

**Value space:** <Auto/Manual>

*Auto:* The camera brightness is automatically set by the system.

*Manual:* Enable manual control of the camera brightness. The brightness level is set using the Cameras Camera Brightness Level setting.

**Example:** xConfiguration Cameras Camera 1 Brightness Mode: Auto

### xConfiguration Cameras Camera [1..7] Brightness Level

Set the brightness level. Requires the Camera Brightness Mode to be set to Manual.

**Requires user role:** ADMIN

**Value space:** <1..31>

*Range:* Select a value from 1 to 31.

**Example:** xConfiguration Cameras Camera 1 Brightness Level: 1

### xConfiguration Cameras Camera [1..7] Flip

With Flip mode (vertical flip) you can flip the image upside down.

**Requires user role:** ADMIN

**Value space:** <Auto/Off/On>

*Auto:* When the camera is placed upside down the image is automatically flipped upside down. This setting will only take effect for a camera that automatically detects which way it is mounted.

*Off:* Display the video on screen the normal way.

*On:* When enabled the video on screen is flipped. This setting is used when a camera is mounted upside down, but cannot automatically detect which way it is mounted.

**Example:** xConfiguration Cameras Camera 1 Flip: Off

### xConfiguration Cameras Camera [1..7] Focus Mode

Set the camera focus mode.

**Requires user role:** ADMIN

**Value space:** <Auto/Manual>

*Auto:* The camera will auto focus once a call is connected, as well as after moving the camera (pan, tilt, zoom). The system will use auto focus only for a few seconds to set the right focus; then auto focus is turned off to prevent continuous focus adjustments of the camera.

*Manual:* Turn the autofocus off and adjust the camera focus manually.

**Example:** xConfiguration Cameras Camera 1 Focus Mode: Auto

### xConfiguration Cameras Camera [1..7] Gamma Mode

This setting enables gamma corrections, and applies only to cameras which support gamma mode. Gamma describes the nonlinear relationship between image pixels and monitor brightness.

**Requires user role:** ADMIN

**Value space:** <Auto/Manual>

*Auto:* Auto is the default and the recommended setting.

*Manual:* In manual mode the gamma value is changed with the gamma level setting, ref: Cameras Camera [1..n] Gamma Level.

**Example:** xConfiguration Cameras Camera 1 Gamma Mode: Auto

### xConfiguration Cameras Camera [1..7] Gamma Level

By setting the Gamma Level you can select which gamma correction table to use. This setting may be useful in difficult lighting conditions, where changes to the brightness setting does not provide satisfactory results. Requires the Gamma Mode to be set to Manual.

**Requires user role:** ADMIN

**Value space:** <0..7>

*Range:* Select a value from 0 to 7.

**Example:** xConfiguration Cameras Camera 1 Gamma Level: 0

### xConfiguration Cameras Camera [1..7] IrSensor

Not applicable in this version.

### xConfiguration Cameras Camera [1..7] Mirror

With Mirror mode (horizontal flip) you can mirror the image on screen.

**Requires user role:** ADMIN

**Value space:** <Auto/Off/On>

*Auto:* When the camera is placed upside down the image is automatically mirrored. Use this setting with cameras that can be mounted upside down, and that can auto detect that the camera is mounted upside down.

*Off:* See the self-view in normal mode, that is the experience of self-view is as seeing yourself as other people see you.

*On:* See the self-view in mirror mode, that is the self-view is reversed and the experience of self-view is as seeing yourself in a mirror.

**Example:** xConfiguration Cameras Camera 1 Mirror: Off



### xConfiguration Cameras Camera [1..7] MotorMoveDetection

This setting applies only when using a Cisco TelePresence PrecisionHD 1080p12x camera.

If adjusting the camera position by hand you can configure whether the camera should keep its new position or return to the preset or position it had before.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* When the camera position is adjusted manually the camera will keep this position until adjusted again. **WARNING:** If moving the camera by hand, the camera will not register the new pan and tilt values since there is no position feedback. This will result in wrong pan and tilt values when recalling the camera presets subsequently.

*On:* When the camera position is adjusted manually, or the camera detects that the motors have moved, it will first re-initialize (i.e. go to default position) then return to the preset/position it had before the camera was adjusted.

**Example:** xConfiguration Cameras Camera 1 MotorMoveDetection: Off

### xConfiguration Cameras Camera [1..7] Whitebalance Mode

Set the camera whitebalance mode.

**Requires user role:** ADMIN

**Value space:** <Auto/Manual>

*Auto:* The camera will continuously adjust the whitebalance depending on the camera view.

*Manual:* Enables manual control of the camera whitebalance. The whitebalance level is set using the Cameras Camera Whitebalance Level setting.

**Example:** xConfiguration Cameras Camera 1 Whitebalance Mode: Auto

### xConfiguration Cameras Camera [1..7] Whitebalance Level

Set the whitebalance level. Requires the Camera Whitebalance Mode to be set to manual.

**Requires user role:** ADMIN

**Value space:** <1..16>

*Range:* Select a value from 1 to 16.

**Example:** xConfiguration Cameras Camera 1 Whitebalance Level: 1

### xConfiguration Cameras Camera [1..7] DHCP

Not applicable for this product.

## Conference configuration

### xConfiguration Conference ActiveControl Mode

Active control is a feature that allows conference participants to administer a conference on Cisco TelePresence Server using the video system's interfaces . Each user can see the participant list, change video layout, disconnect participants, etc. from the interface. The active control feature is enabled by default, provided that it is supported by the infrastructure (Cisco Unified Communications Manager (CUCM) version 9.1.2 or newer, Cisco TelePresence Video Communication Server (VCS) version X8.1 or newer). Change this setting if you want to disable the active control features.

**Requires user role:** ADMIN

**Value space:** <Auto/Off>

*Auto:* Active control is enabled when supported by the infrastructure.

*Off:* Active control is disabled.

**Example:** xConfiguration Conference ActiveControl Mode: Auto

### xConfiguration Conference [1..1] CallProtocolIPStack

Select if the system should enable IPv4, IPv6, or dual IP stack on the call protocol (SIP, H323).

**Requires user role:** ADMIN

**Value space:** <Dual/IPv4/IPv6>

*Dual:* Enables both IPv4 and IPv6 for H323 and SIP calls.

*IPv4:* When set to IPv4, the call protocol (SIP, H323) will use IPv4.

*IPv6:* When set to IPv6, the call protocol (SIP, H323) will use IPv6.

**Example:** xConfiguration Conference 1 CallProtocolIPStack: Dual

### xConfiguration Conference [1..1] AutoAnswer Mode

Set the auto answer mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* An incoming call must be answered manually by tapping the Accept key on the Touch controller.

*On:* Enable auto answer to let the system automatically answer all incoming calls.

**Example:** xConfiguration Conference 1 AutoAnswer Mode: Off

### xConfiguration Conference [1..1] AutoAnswer Mute

Determine if the microphone shall be muted when an incoming call is automatically answered. Requires that AutoAnswer Mode is switched on.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The incoming call will not be muted.

*On:* The incoming call will be muted when automatically answered.

**Example:** xConfiguration Conference 1 AutoAnswer Mute: Off

### xConfiguration Conference [1..1] AutoAnswer Delay

Define how long (in seconds) an incoming call has to wait before it is answered automatically by the system. Requires that AutoAnswer Mode is switched on.

**Requires user role:** ADMIN

**Value space:** <0..50>

*Range:* Select a value from 0 to 50 seconds.

**Example:** xConfiguration Conference 1 AutoAnswer Delay: 0

### xConfiguration Conference [1..1] MicUnmuteOnDisconnect Mode

Determine if the microphones shall be unmuted automatically when all calls are disconnected. In a meeting room or other shared resources this may be done to prepare the system for the next user.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* If muted during a call, let the microphones remain muted after the call is disconnected.

*On:* Unmute the microphones after the call is disconnected.

**Example:** xConfiguration Conference 1 MicUnmuteOnDisconnect Mode: On

### xConfiguration Conference [1..1] DoNotDisturb DefaultTimeout

This setting determines the default duration of a Do Not Disturb session, i.e. the period when incoming calls are rejected and registered as missed calls. The session can be terminated earlier by using the user interface (Touch controller) or the Conference DoNotDisturb Mode setting. The default value is 60 minutes.

**Requires user role:** ADMIN

**Value space:** <0..1440>

*Range:* Select the number of minutes (between 0 and 1440, i.e. 24 hours) before the Do Not Disturb session times out automatically.

**Example:** xConfiguration Conference 1 DoNotDisturb DefaultTimeOut: 60

### xConfiguration Conference [1..1] FarEndControl Mode

Lets you decide if the remote side (far end) should be allowed to select your video sources and control your local camera (pan, tilt, zoom).

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The far end is not allowed to select your video sources or to control your local camera (pan, tilt, zoom).

*On:* Allows the far end to be able to select your video sources and control your local camera (pan, tilt, zoom). You will still be able to control your camera and select your video sources as normal.

**Example:** xConfiguration Conference 1 FarEndControl Mode: On

### xConfiguration Conference [1..1] FarEndControl SignalCapability

Set the far end control (H.224) signal capability mode.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the far end control signal capability.

*On:* Enable the far end control signal capability.

**Example:** xConfiguration Conference 1 FarEndControl SignalCapability: On

### xConfiguration Conference [1..1] Encryption Mode

Set the conference encryption mode. A padlock with the text "Encryption On" or "Encryption Off" displays on screen for a few seconds when the conference starts.

NOTE: Requires the Encryption Option Key to be installed. When the Encryption Option Key is not installed the encryption mode is set to Off.

**Requires user role:** ADMIN

**Value space:** <Off/On/BestEffort>

*Off:* The system will not use encryption.

*On:* The system will only allow calls that are encrypted.

*BestEffort:* The system will use encryption whenever possible.

> *In Point to point calls:* If the far end system supports encryption (AES-128), the call will be encrypted. If not, the call will proceed without encryption.

> *In MultiSite calls:* In order to have encrypted MultiSite conferences, all sites must support encryption. If not, the conference will be unencrypted.

**Example:** xConfiguration Conference 1 Encryption Mode: BestEffort

### xConfiguration Conference [1..1] DefaultCall Rate

Set the Default Call Rate to be used when placing calls from the system.

**Requires user role:** ADMIN

**Value space:** <64..6000>

*Range:* Select a value between 64 and 6000 kbps.

**Example:** `xConfiguration Conference 1 DefaultCall Rate: 1920`

### xConfiguration Conference [1..1] MaxTransmitCallRate

Specify the maximum transmit bit rate to be used when placing or receiving calls. Note that this is the maximum bit rate for each individual call; use the Conference MaxTotalTransmitCallRate setting to set the aggregated maximum for all simultaneous active calls.

**Requires user role:** ADMIN

**Value space:** <64..6000>

*Range:* Select a value between 64 and 6000 kbps.

**Example:** `xConfiguration Conference 1 MaxTransmitCallRate: 6000`

### xConfiguration Conference [1..1] MaxReceiveCallRate

Specify the maximum receive bit rate to be used when placing or receiving calls. Note that this is the maximum bit rate for each individual call; use the Conference MaxTotalReceiveCallRate setting to set the aggregated maximum for all simultaneous active calls.

**Requires user role:** ADMIN

**Value space:** <64..6000>

*Range:* Select a value between 64 and 6000 kbps.

**Example:** `xConfiguration Conference 1 MaxReceiveCallRate: 6000`

### xConfiguration Conference [1..1] MaxTotalTransmitCallRate

This configuration applies when using a video system's built-in MultiSite feature (optional) to host a multipoint video conference.

Specify the maximum overall transmit bit rate allowed. The bit rate will be divided fairly among all active calls at any time. This means that the individual calls will be up-speeded or down-speeded as appropriate when someone leaves or enters a multipoint conference, or when a call is put on hold (suspended) or resumed.

The maximum transmit bit rate for each individual call is defined in the Conference MaxTransmitCallRate setting.

**Requires user role:** ADMIN

**Value space:** <64..10000>

*Range:* Select a value between 64 and 10000.

**Example:** `xConfiguration Conference 1 MaxTotalTransmitCallRate: 10000`

### xConfiguration Conference [1..1] MaxTotalReceiveCallRate

This configuration applies when using a video system's built-in MultiSite feature (optional) to host a multipoint video conference.

Specify the maximum overall receive bit rate allowed. The bit rate will be divided fairly among all active calls at any time. This means that the individual calls will be up-speeded or down-speeded as appropriate when someone leaves or enters a multipoint conference, or when a call is put on hold (suspended) or resumed.

The maximum receive bit rate for each individual call is defined in the Conference MaxReceiveCallRate setting.

**Requires user role:** ADMIN

**Value space:** <64..10000>

*Range:* Select a value between 64 and 10000.

**Example:** `xConfiguration Conference 1 MaxTotalReceiveCallRate: 10000`

### xConfiguration Conference [1..1] VideoBandwidth Mode

Set the conference video bandwidth mode.

**Requires user role:** ADMIN

**Value space:** <Dynamic/Static>

*Dynamic:* The available transmit bandwidth for the video channels are distributed among the currently active channels. If there is no presentation, the main video channels will use the bandwidth of the presentation channel.

*Static:* The available transmit bandwidth is assigned to each video channel, even if it is not active.

**Example:** `xConfiguration Conference 1 VideoBandwidth Mode: Dynamic`

### xConfiguration Conference [1..1] VideoBandwidth MainChannel Weight

The available transmit video bandwidth is distributed on the main channel and presentation channel according to "MainChannel Weight" and "PresentationChannel Weight". If the main channel weight is 2 and the presentation channel weight is 1, then the main channel will use twice as much bandwidth as the presentation channel.

**Requires user role:** ADMIN

**Value space:** <1..10>

*Range:* 1 to 10.

**Example:** `xConfiguration Conference 1 VideoBandwidth MainChannel Weight: 5`

### xConfiguration Conference [1..1] VideoBandwidth PresentationChannel Weight

The available transmit video bandwidth is distributed on the main channel and presentation channel according to "MainChannel Weight" and "PresentationChannel Weight". If the main channel weight is 2 and the presentation channel weight is 1, then the main channel will use twice as much bandwidth as the presentation channel.

**Requires user role:** ADMIN

**Value space:** <1..10>

*Range:* 1 to 10.

**Example:** `xConfiguration Conference 1 VideoBandwidth PresentationChannel Weight: 5`

### xConfiguration Conference [1..1] Presentation RelayQuality

This configuration applies to video systems that are using the built-in MultiSite feature (optional) to host a multipoint video conference. When a remote user shares a presentation, the video system (codec) will transcode the presentation and send it to the other participants in the multipoint conference. The RelayQuality setting specifies whether to give priority to high frame rate or to high resolution for the presentation source.

**Requires user role:** ADMIN

**Value space:** <Motion/Sharpness>

*Motion:* Gives the highest possible frame rate. Used when there is a need for higher frame rates, typically when there is a lot of motion in the picture.

*Sharpness:* Gives the highest possible resolution. Used when you want the highest quality of detailed images and graphics.

**Example:** `xConfiguration Conference 1 Presentation RelayQuality: Sharpness`

### xConfiguration Conference [1..1] Presentation OnPlacedOnHold

Define whether or not to continue sharing a presentation after the remote site has put you on hold.

**Requires user role:** ADMIN

**Value space:** <Stop/NoAction>

*Stop:* The video system stops the presentation sharing when the remote site puts you on hold. The presentation will not continue when the call is resumed.

*NoAction:* The video system will not stop the presentation sharing when put on hold. The presentation will not be shared while you are on hold, but it will continue automatically when the call is resumed.

**Example:** `xConfiguration Conference 1 Presentation OnPlacedOnHold: NoAction`

### xConfiguration Conference [1..1] Multipoint Mode

Define how the video system handles multiparty video conferences.

If registered to a Cisco TelePresence Video Communication Server (VCS), the video system can use its built-in MultiSite feature. If registered to a Cisco Unified Communications Manager (CUCM) version 8.6.2 or newer, the video system can use either the CUCM conference bridge, or the video system's built-in MultiSite feature. Which one to use is set-up by CUCM. The CUCM conference bridge allows you to set up conferences with many participants; MultiSite allows up to five participants (yourself included).

Note that the built-in MultiSite feature is optional and may not be available on all video systems.

**Requires user role:** ADMIN

**Value space:** <Auto/Off/MultiSite/CUCMMediaResourceGroupList>

*Auto:* The multipoint method available will be chosen automatically; if none are available the Multipoint Mode will automatically be set to Off.

*Off:* Multiparty conferences are not allowed.

*MultiSite:* Multiparty conferences are set up using the built-in MultiSite feature. If MultiSite is chosen when the MultiSite feature is not available, the Multipoint Mode will automatically be set to Off.

*CUCMMediaResourceGroupList:* Multiparty conferences (ad hoc conferences) are hosted by the CUCM configured conference bridge. This setting is provisioned by CUCM in a CUCM environment and should never be set manually by the user.

**Example:** `xConfiguration Conference 1 Multipoint Mode: Auto`

### xConfiguration Conference [1..1] IncomingMultisiteCall Mode

Select whether or not to allow incoming calls when already in a call/conference.

**Requires user role:** ADMIN

**Value space:** <Allow/Deny>

*Allow:* You will be notified when someone calls you while you are already in a call. You can accept the incoming call or not. The ongoing call may be put on hold while answering the incoming call; or you may merge the calls (requires MultiSite support).

*Deny:* An incoming call will be rejected if you are already in a call. You will not be notified about the incoming call. However, the call will appear as a missed call in the call history list.

**Example:** `xConfiguration Conference 1 IncomingMultisiteCall Mode: Allow`

## FacilityService configuration

### xConfiguration FacilityService Service [1..5] Type

Up to five different facility services can be supported simultaneously. With this setting you can select what kind of services they are. A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set. Only FacilityService Service 1 with Type Helpdesk is available on the Touch controller; the other options are available for system integrators using the API (Application Programming Interface) command set.

**Requires user role:** ADMIN

**Value space:** <Other/Concierge/Helpdesk/Emergency/Security/Catering/Transportation>

*Other:* Select this option for services not covered by the other options.

*Concierge:* Select this option for concierge services.

*Helpdesk:* Select this option for helpdesk services.

*Emergency:* Select this option for emergency services.

*Security:* Select this option for security services.

*Catering:* Select this option for catering services.

*Transportation:* Select this option for transportation services.

**Example:** `xConfiguration FacilityService Service 1 Type: Helpdesk`

### xConfiguration FacilityService Service [1..5] Name

Enter the name of the facility service. Up to five different facility services are supported. A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set. Only FacilityService Service 1 is available on the Touch controller, and the name will show on the facility service call button. The other services are available for system integrators using the API (Application Programming Interface) command set.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters.

**Example:** `xConfiguration FacilityService Service 1 Name: ""`

### xConfiguration FacilityService Service [1..5] Number

Enter the number (URI or phone number) of the facility service. Up to five different facility services are supported. A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set. Only FacilityService Service 1 is available on the Touch controller; the other options are available for system integrators using the API (Application Programming Interface) command set.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters.

**Example:** `xConfiguration FacilityService Service 1 Number: ""`

### xConfiguration FacilityService Service [1..5] CallType

Set the call type for each facility service. Up to five different facility services are supported. A facility service is not available unless both the FacilityService Service Name and the FacilityService Service Number settings are properly set. Only FacilityService Service 1 is available on the Touch controller; the other options are available for system integrators using the API (Application Programming Interface) command set.

**Requires user role:** ADMIN

**Value space:** <Video/Audio>

*Video:* Select this option for video calls.

*Audio:* Select this option for audio calls.

**Example:** `xConfiguration FacilityService Service 1 CallType: Video`

## GPIO configuration

### xConfiguration GPIO Pin [1..4] Mode

The four GPIO pins are configured individually. The state can be retrieved by "xStatus GPIO Pin [1..4] State". The default pin state is High (+12 V). When activated as output, they are set to 0 V. To activate them as input, they must be pulled down to 0 V.

**Requires user role:** ADMIN

**Value space:** <InputNoAction/OutputManualState/OutputInCall/OutputMicrophonesMuted/OutputPresentationOn/OutputAllCallsEncrypted/OutputStandbyActive/InputMuteMicrophones>

*InputNoAction:* The pin state can be set, but no operation is performed.

*OutputManualState:* The pin state can be set by "xCommand GPIO ManualState Set PinX: <High/Low>" (to +12 V or 0 V, respectively).

*OutputInCall:* The pin is activated when in call, deactivated when not in call.

*OutputMicrophonesMuted:* The pin is activated when microphones are muted, deactivated when not muted.

*OutputPresentationOn:* The pin is activated when presentation is active, deactivated when presentation is not active.

*OutputAllCallsEncrypted:* The pin is activated when all calls are encrypted, deactivated when one or more calls are not encrypted.

*OutputStandbyActive:* The pin is activated when the system is in standby mode, deactivated when no longer in standby.

*InputMuteMicrophones:* When the pin is activated (0 V), the microphones will be muted. When deactivated (+ 12 V), the microphones are unmuted.

**Example:** `xConfiguration GPIO Pin 1 Mode: InputNoAction`

## H323 configuration

### xConfiguration H323 NAT Mode

The firewall traversal technology creates a secure path through the firewall barrier, and enables proper exchange of audio/video data when connected to an external video conferencing system (when the IP traffic goes through a NAT router). NOTE: NAT does not work in conjunction with gatekeepers.

**Requires user role:** ADMIN

**Value space:** <Auto/Off/On>

*Auto:* The system will determine if the H323 NAT Address or the real IP address should be used in signaling. This makes it possible to place calls to endpoints on the LAN as well as endpoints on the WAN. If the H323 NAT Address is wrong or not set, the real IP address will be used.

*Off:* The system will signal the real IP address.

*On:* The system will signal the configured H323 NAT Address instead of its real IP address in Q.931 and H.245. The NAT Server Address will be shown in the startup-menu as: "My IP Address: 10.0.2.1". If the H323 NAT Address is wrong or not set, H.323 calls cannot be set up.

**Example:** `xConfiguration H323 NAT Mode: Off`

### xConfiguration H323 NAT Address

Enter the external/global IP address to the router with NAT support. Packets sent to the router will then be routed to the system. Note that NAT cannot be used when registered to a gatekeeper.

In the router, the following ports must be routed to the system's IP address:

- \* Port 1720
- \* Port 5555-6555
- \* Port 2326-2487

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address or IPv6 address.

**Example:** `xConfiguration H323 NAT Address: ""`

### xConfiguration H323 Profile [1..1] Authentication Mode

Set the authenticatin mode for the H.323 profile.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* If the H.323 Gatekeeper Authentication Mode is set to Off the system will not try to authenticate itself to a H.323 Gatekeeper, but will still try a normal registration.

*On:* If the H.323 Gatekeeper Authentication Mode is set to On and a H.323 Gatekeeper indicates that it requires authentication, the system will try to authenticate itself to the gatekeeper. Requires the Authentication LoginName and Authentication Password to be defined on both the codec and the Gatekeeper.

**Example:** `xConfiguration H323 Profile 1 Authentication Mode: Off`

### xConfiguration H323 Profile [1..1] Authentication LoginName

The system sends the Authentication Login Name and the Authentication Password to a H.323 Gatekeeper for authentication. The authentication is a one way authentication from the codec to the H.323 Gatekeeper, i.e. the system is authenticated to the gatekeeper. If the H.323 Gatekeeper indicates that no authentication is required, the system will still try to register. Requires the H.323 Gatekeeper Authentication Mode to be enabled.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** `xConfiguration H323 Profile 1 Authentication LoginName: ""`

### xConfiguration H323 Profile [1..1] Authentication Password

The system sends the Authentication Login Name and the Authentication Password to a H.323 Gatekeeper for authentication. The authentication is a one way authentication from the codec to the H.323 Gatekeeper, i.e. the system is authenticated to the gatekeeper. If the H.323 Gatekeeper indicates that no authentication is required, the system will still try to register. Requires the H.323 Gatekeeper Authentication Mode to be enabled.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** `xConfiguration H323 Profile 1 Authentication Password: ""`

### xConfiguration H323 Profile [1..1] CallSetup Mode

The H.323 Call Setup Mode defines whether to use a Gatekeeper or Direct calling when establishing H323 calls.

NOTE: Direct H.323 calls can be made even though the H.323 Call Setup Mode is set to Gatekeeper.

**Requires user role:** ADMIN

**Value space:** <Direct/Gatekeeper>

*Direct:* An IP address must be used when dialing in order to make the H323 call.

*Gatekeeper:* The system will use a Gatekeeper to make a H.323 call. When selecting this option the H323 Profile Gatekeeper Address and H323 Profile Gatekeeper Discovery settings must also be configured.

**Example:** `xConfiguration H323 Profile 1 CallSetup Mode: Gatekeeper`

### xConfiguration H323 Profile [1..1] Gatekeeper Discovery

Determine how the system shall register to a H.323 Gatekeeper.

**Requires user role:** ADMIN

**Value space:** <Manual/Auto>

*Manual:* The system will use a specific Gatekeeper identified by the Gatekeeper's IP address.

*Auto:* The system will automatically try to register to any available Gatekeeper. If a Gatekeeper responds to the request sent from the codec within 30 seconds this specific Gatekeeper will be used. This requires that the Gatekeeper is in auto discovery mode as well. If no Gatekeeper responds, the system will not use a Gatekeeper for making H.323 calls and hence an IP address must be specified manually.

**Example:** `xConfiguration H323 Profile 1 Gatekeeper Discovery: Manual`

### xConfiguration H323 Profile [1..1] Gatekeeper Address

Enter the IP address of the Gatekeeper. Requires the H.323 Call Setup Mode to be set to Gatekeeper and the Gatekeeper Discovery to be set to Manual.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* A valid IPv4 address, IPv6 address or DNS name.

**Example:** `xConfiguration H323 Profile 1 Gatekeeper Address: "192.0.2.0"`

### xConfiguration H323 Profile [1..1] H323Alias E164

The H.323 Alias E.164 defines the address of the system, according to the numbering plan implemented in the H.323 Gatekeeper. The E.164 alias is equivalent to a telephone number, sometimes combined with access codes.

**Requires user role:** ADMIN

**Value space:** <S: 0, 30>

*Format:* Compact string with a maximum of 30 characters. Valid characters are 0-9, \* and #.

**Example:** `xConfiguration H323 Profile 1 H323Alias E164: "90550092"`

### xConfiguration H323 Profile [1..1] H323Alias ID

Lets you specify the H.323 Alias ID which is used to address the system on a H.323 Gatekeeper and will be displayed in the call lists. Example: "firstname.lastname@company.com", "My H.323 Alias ID"

**Requires user role:** ADMIN

**Value space:** <S: 0, 49>

*Format:* String with a maximum of 49 characters.

**Example:** `xConfiguration H323 Profile 1 H323Alias ID: "firstname.lastname@company.com"`

### xConfiguration H323 Profile [1..1] PortAllocation

The H.323 Port Allocation setting affects the H.245 port numbers used for H.323 call signalling.

**Requires user role:** ADMIN

**Value space:** <Dynamic/Static>

*Dynamic:* The system will allocate which ports to use when opening a TCP connection. The reason for doing this is to avoid using the same ports for subsequent calls, as some firewalls consider this as a sign of attack. When Dynamic is selected, the H.323 ports used are from 11000 to 20999. Once 20999 is reached they restart again at 11000. For RTP and RTCP media data, the system is using UDP ports in the range 2326 to 2487. Each media channel is using two adjacent ports, ie 2330 and 2331 for RTP and RTCP respectively. The ports are automatically selected by the system within the given range. Firewall administrators should not try to deduce which ports are used when, as the allocation schema within the mentioned range may change without any further notice.

*Static:* When set to Static the ports are given within a static predefined range [5555-6555].

**Example:** `xConfiguration H323 Profile 1 PortAllocation: Dynamic`



## Logging configuration

### xConfiguration Logging Mode

Not applicable in this version.

## Network configuration

### xConfiguration Network [1..1] IPStack

Select if the sFsystem should use IPv4, IPv6, or dual IP stack, on the network interface. NOTE: After changing this setting you may have to wait up to 30 seconds before it takes effect.

**Requires user role:** ADMIN

**Value space:** <Dual/IPv4/IPv6>

*Dual:* When set to Dual, the network interface can operate on both IP versions at the same time, and can have both an IPv4 and an IPv6 address at the same time.

*IPv4:* When set to IPv4, the system will use IPv4 on the network interface.

*IPv6:* When set to IPv6, the system will use IPv6 on the network interface.

**Example:** xConfiguration Network 1 IPStack: Dual

### xConfiguration Network [1..1] IPv4 Assignment

Define how the system will obtain its IPv4 address, subnet mask and gateway address. This setting only applies to systems on IPv4 networks.

**Requires user role:** ADMIN

**Value space:** <Static/DHCP>

*Static:* The addresses must be configured manually using the Network IPv4 Address, Network IPv4 Gateway and Network IPv4 SubnetMask settings (static addresses).

*DHCP:* The system addresses are automatically assigned by the DHCP server.

**Example:** xConfiguration Network 1 IPv4 Assignment: DHCP

### xConfiguration Network [1..1] IPv4 Address

Enter the static IPv4 network address for the system. This setting is only applicable when Network Assignment is set to Static.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address.

**Example:** xConfiguration Network 1 IPv4 Address: "192.0.2.2"

### xConfiguration Network [1..1] IPv4 Gateway

Define the IPv4 network gateway. This setting is only applicable when the Network Assignment is set to Static.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address.

**Example:** xConfiguration Network 1 IPv4 Gateway: "192.0.2.1"

### xConfiguration Network [1..1] IPv4 SubnetMask

Define the IPv4 network subnet mask. This setting is only applicable when the Network Assignment is set to Static.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* The valid IPv4 address format.

**Example:** xConfiguration Network 1 IPv4 SubnetMask: "255.255.255.0"

### xConfiguration Network [1..1] IPv6 Assignment

Define how the system will obtain its IPv6 address and the default gateway address. This setting only applies to systems on IPv6 networks.

**Requires user role:** ADMIN

**Value space:** <Static/DHCPv6/Autoconf>

*Static:* The codec and gateway IP addresses must be configured manually using the Network IPv6 Address and Network IPv6 Gateway settings. The options, for example NTP and DNS server addresses, must either be set manually or obtained from a DHCPv6 server. The Network IPv6 DHCPOptions setting determines which method to use.

*DHCPv6:* All IPv6 addresses, including options, will be obtained from a DHCPv6 server. See RFC 3315 for a detailed description. The Network IPv6 DHCPOptions setting will be ignored.

*Autoconf:* Enable IPv6 stateless autoconfiguration of the IPv6 network interface. See RFC 4862 for a detailed description. The options, for example NTP and DNS server addresses, must either be set manually or obtained from a DHCPv6 server. The Network IPv6 DHCPOptions setting determines which method to use.

**Example:** xConfiguration Network 1 IPv6 Assignment: Autoconf

### xConfiguration Network [1..1] IPv6 Address

Enter the static IPv6 network address for the system. This setting is only applicable when the Network IPv6 Assignment is set to Static.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv6 address.

**Example:** xConfiguration Network 1 IPv6 Address: "2001:0DB8:0000:0000:0000:0000:0000:0002"

### xConfiguration Network [1..1] IPv6 Gateway

Define the IPv6 network gateway address. This setting is only applicable when the Network IPv6 Assignment is set to Static.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv6 address.

**Example:** xConfiguration Network 1 IPv6 Gateway: "2001:0DB8:0000:0000:0000:0000:0000:0001"

### xConfiguration Network [1..1] IPv6 DHCPOptions

Retrieve a set of DHCP options, for example NTP and DNS server addresses, from a DHCPv6 server.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the retrieval of DHCP options from a DHCPv6 server.

*On:* Enable the retrieval of a selected set of DHCP options from a DHCPv6 server.

**Example:** xConfiguration Network 1 IPv6 DHCPOptions: On

### xConfiguration Network [1..1] DHCP RequestTFTPServerAddress

This setting is used only for video systems that are registered to a Cisco Unified Communications Manager (CUCM).

The setting determines whether the endpoint should ask the DHCP server for DHCP option 150, so that it can discover the address of the TFTP server (provisioning server) automatically.

If this setting is Off or the DHCP server does not support option 150, the TFTP server address must be set manually using the Provisioning ExternalManager Address setting.

If the Network VLAN Voice Mode setting is Auto and the Cisco Discovery Protocol (CDP) assigns an ID to the voice VLAN, then a request for option 150 will always be sent. That is, the Network DHCP RequestTFTPServerAddress setting will be ignored.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The video system will not send a request for DHCP option 150 and the address of the TFTP server must be set manually. See the note above for any exception to this rule.

*On:* The video system will send a request for option 150 to the DHCP server so that it can automatically discover the address of the TFTP server.

**Example:** xConfiguration Network 1 DHCP RequestTFTPServerAddress: On

### xConfiguration Network [1..1] DNS Domain Name

DNS Domain Name is the default domain name suffix which is added to unqualified names.

Example: If the DNS Domain Name is "company.com" and the name to lookup is "MyVideoSystem", this will result in the DNS lookup "MyVideoSystem.company.com".

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* String with a maximum of 64 characters.

**Example:** xConfiguration Network 1 DNS Domain Name: ""

### xConfiguration Network [1..1] DNS Server [1..3] Address

Define the network addresses for DNS servers. Up to 3 addresses may be specified. If the network addresses are unknown, contact your administrator or Internet Service Provider.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address or IPv6 address.

**Example:** xConfiguration Network 1 DNS Server 1 Address: ""

### xConfiguration Network [1..1] QoS Mode

The QoS (Quality of Service) is a method which handles the priority of audio, video and data in the network. The QoS settings must be supported by the infrastructure. Diffserv (Differentiated Services) is a computer networking architecture that specifies a simple, scalable and coarse-grained mechanism for classifying, managing network traffic and providing QoS priorities on modern IP networks.

**Requires user role:** ADMIN

**Value space:** <Off/Diffserv>

*Off:* No QoS method is used.

*Diffserv:* When you set the QoS Mode to Diffserv, the Network QoS Diffserv Audio, Network QoS Diffserv Video, Network QoS Diffserv Data, Network QoS Diffserv Signalling, Network QoS Diffserv ICMPv6 and Network QoS Diffserv NTP settings are used to prioritize packets.

**Example:** xConfiguration Network 1 QoS Mode: Diffserv

### xConfiguration Network [1..1] QoS Diffserv Audio

This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Audio packets should have in the IP network.

The priority for the packets ranges from 0 to 63 - the higher the number, the higher the priority. The recommended class for Audio is CS4, which equals the decimal value 32. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

**Requires user role:** ADMIN

**Value space:** <0..63>

*Range:* Select a value between 0 to 63 - the higher the number, the higher the priority. The default value is 0 (best effort).

**Example:** xConfiguration Network 1 QoS Diffserv Audio: 0

### xConfiguration Network [1..1] QoS Diffserv Video

This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Video packets should have in the IP network. The packets on the presentation channel (shared content) are also in the Video packet category. The priority for the packets ranges from 0 to 63 - the higher the number, the higher the priority. The recommended class for Video is CS4, which equals the decimal value 32. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

**Requires user role:** ADMIN

**Value space:** <0..63>

*Range:* Select a value between 0 to 63 - the higher the number, the higher the priority. The default value is 0 (best effort).

**Example:** xConfiguration Network 1 QoS Diffserv Video: 0

### xConfiguration Network [1..1] QoS Diffserv Data

This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Data packets should have in the IP network.

The priority for the packets ranges from 0 to 63 - the higher the number, the higher the priority. The recommended value for Data is 0, which means best effort. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

**Requires user role:** ADMIN

**Value space:** <0..63>

*Range:* Select a value between 0 to 63 - the higher the number, the higher the priority. The default value is 0 (best effort).

**Example:** xConfiguration Network 1 QoS Diffserv Data: 0

### xConfiguration Network [1..1] QoS Diffserv Signalling

This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority Signalling packets that are deemed critical (time-sensitive) for the real-time operation should have in the IP network.

The priority for the packets ranges from 0 to 63 - the higher the number, the higher the priority. The recommended class for Signalling is CS3, which equals the decimal value 24. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

**Requires user role:** ADMIN

**Value space:** <0..63>

*Range:* Select a value between 0 to 63 - the higher the number, the higher the priority. The default value is 0 (best effort).

**Example:** xConfiguration Network 1 QoS Diffserv Signalling: 0

### xConfiguration Network [1..1] QoS Diffserv ICMPv6

This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority ICMPv6 packets should have in the IP network.

The priority for the packets ranges from 0 to 63 - the higher the number, the higher the priority. The recommended value for ICMPv6 is 0, which means best effort. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

**Requires user role:** ADMIN

**Value space:** <0..63>

*Range:* Select a value between 0 to 63 - the higher the number, the higher the priority. The default value is 0 (best effort).

**Example:** xConfiguration Network 1 QoS Diffserv ICMPv6: 0

### xConfiguration Network [1..1] QoS Diffserv NTP

This setting will only take effect if Network QoS Mode is set to Diffserv.

Define which priority NTP packets should have in the IP network.

The priority for the packets ranges from 0 to 63 - the higher the number, the higher the priority. The recommended value for NTP is 0, which means best effort. If in doubt, contact your network administrator.

The priority set here might be overridden when packets are leaving the network controlled by the local network administrator.

**Requires user role:** ADMIN

**Value space:** <0..63>

*Range:* Select a value between 0 to 63 - the higher the number, the higher the priority. The default value is 0 (best effort).

**Example:** xConfiguration Network 1 QoS Diffserv NTP: 0

### xConfiguration Network [1..1] IEEE8021X Mode

The system can be connected to an IEEE 802.1X LAN network, with a port-based network access control that is used to provide authenticated network access for Ethernet networks.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The 802.1X authentication is disabled (default).

*On:* The 802.1X authentication is enabled.

**Example:** xConfiguration Network 1 IEEE8021X Mode: Off

### xConfiguration Network [1..1] IEEE8021X TlsVerify

Verification of the server-side certificate of an IEEE802.1x connection against the certificates in the local CA-list when TLS is used. The CA-list must be uploaded to the video system. This can be done from the web interface.

This setting takes effect only when Network [1..1] IEEE8021X Eap Tls is enabled (On).

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* When set to Off, TLS connections are allowed without verifying the server-side X.509 certificate against the local CA-list. This should typically be selected if no CA-list has been uploaded to the codec.

*On:* When set to On, the server-side X.509 certificate will be validated against the local CA-list for all TLS connections. Only servers with a valid certificate will be allowed.

**Example:** xConfiguration Network 1 IEEE8021X TlsVerify: Off

### xConfiguration Network [1..1] IEEE8021X UseClientCertificate

Authentication using a private key/certificate pair during an IEEE802.1x connection. The authentication X.509 certificate must be uploaded to the video system. This can be done from the web interface.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* When set to Off client-side authentication is not used (only server-side).

*On:* When set to On the client (video system) will perform a mutual authentication TLS handshake with the server.

**Example:** xConfiguration Network 1 IEEE8021X UseClientCertificate: Off

### xConfiguration Network [1..1] IEEE8021X Identity

The 802.1X Identity is the user name needed for 802.1X authentication.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* String with a maximum of 64 characters.

**Example:** xConfiguration Network 1 IEEE8021X Identity: ""

### xConfiguration Network [1..1] IEEE8021X Password

The 802.1X Password is the password needed for 802.1X authentication.

**Requires user role:** ADMIN

**Value space:** <S: 0, 32>

*Format:* String with a maximum of 32 characters.

**Example:** xConfiguration Network 1 IEEE8021X Password: ""

### xConfiguration Network [1..1] IEEE8021X AnonymousIdentity

The 802.1X Anonymous ID string is to be used as unencrypted identity with EAP (Extensible Authentication Protocol) types that support different tunneled identity, like EAP-PEAP and EAP-TTLS. If set, the anonymous ID will be used for the initial (unencrypted) EAP Identity Request.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* String with a maximum of 64 characters.

**Example:** xConfiguration Network 1 IEEE8021X AnonymousIdentity: ""

### xConfiguration Network [1..1] IEEE8021X Eap Md5

Set the Md5 (Message-Digest Algorithm 5) mode. This is a Challenge Handshake Authentication Protocol that relies on a shared secret. Md5 is a Weak security.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The EAP-MD5 protocol is disabled.

*On:* The EAP-MD5 protocol is enabled (default).

**Example:** xConfiguration Network 1 IEEE8021X Eap Md5: On

### xConfiguration Network [1..1] IEEE8021X Eap Ttls

Set the TTLS (Tunneled Transport Layer Security) mode. Authenticates LAN clients without the need for client certificates. Developed by Funk Software and Certicom. Usually supported by Agere Systems, Proxim and Avaya.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The EAP-TTLS protocol is disabled.

*On:* The EAP-TTLS protocol is enabled (default).

**Example:** xConfiguration Network 1 IEEE8021X Eap Ttls: On

### xConfiguration Network [1..1] IEEE8021X Eap Tls

Enable or disable the use of EAP-TLS (Transport Layer Security) for IEEE802.1x connections. The EAP-TLS protocol, defined in RFC 5216, is considered one of the most secure EAP standards. LAN clients are authenticated using client certificates.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The EAP-TLS protocol is disabled.

*On:* The EAP-TLS protocol is enabled (default).

**Example:** xConfiguration Network 1 IEEE8021X Eap Tls: On

### xConfiguration Network [1..1] IEEE8021X Eap Peap

Set the Peap (Protected Extensible Authentication Protocol) mode. Authenticates LAN clients without the need for client certificates. Developed by Microsoft, Cisco and RSA Security.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The EAP-PEAP protocol is disabled.

*On:* The EAP-PEAP protocol is enabled (default).

**Example:** xConfiguration Network 1 IEEE8021X Eap Peap: On

### xConfiguration Network [1..1] MTU

Set the Ethernet MTU (Maximum Transmission Unit).

**Requires user role:** ADMIN

**Value space:** <576..1500>

*Range:* Select a value from 576 to 1500 bytes.

**Example:** xConfiguration Network 1 MTU: 1500

### xConfiguration Network [1..1] Speed

Set the Ethernet link speed.

**Requires user role:** ADMIN

**Value space:** <Auto/10half/10full/100half/100full/1000full>

*Auto:* Autonegotiate link speed.

*10half:* Force link to 10 Mbps half-duplex.

*10full:* Force link to 10 Mbps full-duplex.

*100half:* Force link to 100 Mbps half-duplex.

*100full:* Force link to 100 Mbps full-duplex.

*1000full:* Force link to 1 Gbps full-duplex.

**Example:** xConfiguration Network 1 Speed: Auto

### xConfiguration Network [1..1] TrafficControl Mode

Set the network traffic control mode to decide how to control the video packets transmission speed.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Transmit video packets at link speed.

*On:* Transmit video packets at maximum 20 Mbps. Can be used to smooth out bursts in the outgoing network traffic.

**Example:** `xConfiguration Network 1 TrafficControl: On`

### xConfiguration Network [1..1] RemoteAccess Allow

Filter IP addresses for access to ssh/telnet/HTTP/HTTPS.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters, comma separated IP addresses or IP range.

**Example:** `xConfiguration Network 1 RemoteAccess Allow: "192.168.1.231, 192.168.1.182"`

### xConfiguration Network [1..1] VLAN Voice Mode

Set the VLAN voice mode. The VLAN Voice Mode will be set to Auto automatically if you choose Cisco UCM (Cisco Unified Communications Manager) as provisioning infrastructure via the Provisioning Wizard on the Touch controller.

**Requires user role:** ADMIN

**Value space:** <Auto/Manual/Off>

*Auto:* The Cisco Discovery Protocol (CDP), if available, assigns an id to the voice VLAN. If CDP is not available, VLAN is not enabled.

*Manual:* The VLAN ID is set manually using the Network VLAN Voice VlanId setting. If CDP is available, the manually set value will be overruled by the value assigned by CDP.

*Off:* VLAN is not enabled.

**Example:** `xConfiguration Network 1 VLAN Voice Mode: Auto`

### xConfiguration Network [1..1] VLAN Voice VlanId

Set the VLAN voice ID. This setting will only take effect if VLAN Voice Mode is set to Manual.

**Requires user role:** ADMIN

**Value space:** <1..4094>

*Range:* Select a value from 1 to 4094.

**Example:** `xConfiguration Network 1 VLAN Voice VlanId: 1`

## NetworkServices configuration

### xConfiguration NetworkServices H323 Mode

Determine whether the system should be able to place and receive H.323 calls or not.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the possibility to place and receive H.323 calls.

*On:* Enable the possibility to place and receive H.323 calls (default).

**Example:** `xConfiguration NetworkServices H323 Mode: On`

### xConfiguration NetworkServices HTTP Mode

Set the HTTP mode to enable/disable access to the system through a web browser. The web interface is used for system management, call management such as call transfer, diagnostics and software uploads.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The HTTP protocol is disabled.

*On:* The HTTP protocol is enabled.

**Example:** `xConfiguration NetworkServices HTTP Mode: On`

### xConfiguration NetworkServices SIP Mode

Determine whether the system should be able to place and receive SIP calls or not.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the possibility to place and receive SIP calls.

*On:* Enable the possibility to place and receive SIP calls (default).

**Example:** `xConfiguration NetworkServices SIP Mode: On`

### xConfiguration NetworkServices Telnet Mode

Telnet is a network protocol used on the Internet or Local Area Network (LAN) connections.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The Telnet protocol is disabled. This is the factory setting.

*On:* The Telnet protocol is enabled.

**Example:** `xConfiguration NetworkServices Telnet Mode: Off`

### xConfiguration NetworkServices WelcomeText

Choose which information the user should see when logging on to the codec through Telnet/SSH.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The welcome text is: Login successful

*On:* The welcome text is: Welcome to <system name>; Software version; Software release date; Login successful.

**Example:** `xConfiguration NetworkServices WelcomeText: On`

### xConfiguration NetworkServices XMLAPI Mode

Enable or disable the video system's XML API. For security reasons this may be disabled. Disabling the XML API will limit the remote manageability with for example TMS, which no longer will be able to connect to the video system.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The XML API is disabled.

*On:* The XML API is enabled (default).

**Example:** `xConfiguration NetworkServices XMLAPI Mode: On`

### xConfiguration NetworkServices HTTPS Mode

HTTPS is a web protocol that encrypts and decrypts user page requests as well as the pages that are returned by the web server.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The HTTPS protocol is disabled.

*On:* The HTTPS protocol is enabled.

**Example:** `xConfiguration NetworkServices HTTPS Mode: On`

### xConfiguration NetworkServices HTTPS VerifyServerCertificate

When the video system connects to an external HTTPS server (like a phone book server or an external manager), this server will present a certificate to the video system to identify itself.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Do not verify server certificates.

*On:* Requires the system to verify that the server certificate is signed by a trusted Certificate Authority (CA). This requires that a list of trusted CAs are uploaded to the system in advance.

**Example:** `xConfiguration NetworkServices HTTPS VerifyServerCertificate: Off`

### xConfiguration NetworkServices HTTPS VerifyClientCertificate

When the video system connects to a HTTPS client (like a web browser), the client can be asked to present a certificate to the video system to identify itself.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Do not verify client certificates.

*On:* Requires the client to present a certificate that is signed by a trusted Certificate Authority (CA). This requires that a list of trusted CAs are uploaded to the system in advance.

**Example:** `xConfiguration NetworkServices HTTPS VerifyClientCertificate: Off`

### xConfiguration NetworkServices HTTPS OCSP Mode

Define the support for OCSP (Online Certificate Status Protocol) responder services. The OCSP feature allows users to enable OCSP instead of certificate revocation lists (CRLs) to check the certificate status.

For any outgoing HTTPS connection, the OCSP responder is queried of the status. If the corresponding certificate has been revoked, then the HTTPS connection will not be used.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable OCSP support.

*On:* Enable OCSP support.

**Example:** `xConfiguration NetworkServices HTTPS OCSP Mode: Off`



### xConfiguration NetworkServices HTTPS OCSP URL

Specify the URL of the OCSP responder (server) that will be used to check the certificate status.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters.

**Example:** xConfiguration NetworkServices HTTPS OCSP URL: "http://ocspserver.company.com:81"

### xConfiguration NetworkServices NTP Mode

The Network Time Protocol (NTP) is used to synchronize the time of the system to a reference time server. The time server will subsequently be queried every 24th hour for time updates. The time will be displayed on the top of the screen. The system will use the time to timestamp messages transmitted to Gatekeepers or Border Controllers requiring H.235 authentication. The system will use the time to timestamp messages transmitted to Gatekeepers or Border Controllers that requires H.235 authentication. It is also used for timestamping Placed Calls, Missed Calls and Received Calls.

**Requires user role:** ADMIN

**Value space:** <Auto/Off/Manual>

*Auto:* The system will use the NTP server, by which address is supplied from the DHCP server in the network. If no DHCP server is used, or the DHCP server does not provide the system with a NTP server address, the system will use the static defined NTP server address specified by the user.

*Off:* The system will not use an NTP server.

*Manual:* The system will always use the static defined NTP server address specified by the user.

**Example:** xConfiguration NetworkServices NTP Mode: Manual

### xConfiguration NetworkServices NTP Address

Enter the NTP Address to define the network time protocol server address. This address will be used if NTP Mode is set to Manual, or if set to Auto and no address is supplied by a DHCP server.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address, IPv6 address or DNS name.

**Example:** xConfiguration NetworkServices NTP Address: "1.ntp.tandberg.com"

### xConfiguration NetworkServices SNMP Mode

SNMP (Simple Network Management Protocol) is used in network management systems to monitor network-attached devices (routers, servers, switches, projectors, etc) for conditions that warrant administrative attention. SNMP exposes management data in the form of variables on the managed systems, which describe the system configuration. These variables can then be queried (set to ReadOnly) and sometimes set (set to ReadWrite) by managing applications.

**Requires user role:** ADMIN

**Value space:** <Off/ReadOnly/ReadWrite>

*Off:* Disable the SNMP network service.

*ReadOnly:* Enable the SNMP network service for queries only.

*ReadWrite:* Enable the SNMP network service for both queries and commands.

**Example:** xConfiguration NetworkServices SNMP Mode: ReadWrite

### xConfiguration NetworkServices SNMP Host [1..3] Address

Enter the address of up to three SNMP Managers.

The system's SNMP Agent (in the codec) responds to requests from SNMP Managers (a PC program etc.), for example about system location and system contact. SNMP traps are not supported.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address, IPv6 address or DNS name.

**Example:** xConfiguration NetworkServices SNMP Host 1 Address: ""

### xConfiguration NetworkServices SNMP CommunityName

Enter the name of the Network Services SNMP Community. SNMP Community names are used to authenticate SNMP requests. SNMP requests must have a password (case sensitive) in order to receive a response from the SNMP Agent in the codec. The default password is "public". If you have the Cisco TelePresence Management Suite (TMS) you must make sure the same SNMP Community is configured there too. NOTE: The SNMP Community password is case sensitive.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** xConfiguration NetworkServices SNMP CommunityName: "public"

#### xConfiguration NetworkServices SNMP SystemContact

Enter the name of the Network Services SNMP System Contact.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** `xConfiguration NetworkServices SNMP SystemContact: ""`

#### xConfiguration NetworkServices SNMP SystemLocation

Enter the name of the Network Services SNMP System Location.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** `xConfiguration NetworkServices SNMP SystemLocation: ""`

#### xConfiguration NetworkServices SSH Mode

SSH (or Secure Shell) protocol can provide secure encrypted communication between the codec and your local computer.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The SSH protocol is disabled.

*On:* The SSH protocol is enabled.

**Example:** `xConfiguration NetworkServices SSH Mode: On`

#### xConfiguration NetworkServices SSH AllowPublicKey

Secure Shell (SSH) public key authentication can be used to access the codec.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The SSH public key is not allowed.

*On:* The SSH public key is allowed.

**Example:** `xConfiguration NetworkServices SSH AllowPublicKey: On`

## Phonebook configuration

#### xConfiguration Phonebook Server [1..1] ID

Enter a name for the external phone book.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* String with a maximum of 64 characters.

**Example:** `xConfiguration Phonebook Server 1 ID: ""`

#### xConfiguration Phonebook Server [1..1] Type

Select the phonebook server type.

**Requires user role:** ADMIN

**Value space:** <VCS/TMS/Callway/CUCM>

*VCS:* Select VCS if the phonebook is located on the Cisco TelePresence Video Communication Server.

*TMS:* Select TMS if the phonebook is located on the Cisco TelePresence Management Suite server.

*Callway:* Select Callway if the phonebook is to be provided by the WebEx TelePresence subscription service (formerly called CallWay). Contact your WebEx TelePresence provider for more information.

*CUCM:* Select CUCM if the phonebook is located on the Cisco Unified Communications Manager.

**Example:** `xConfiguration Phonebook Server 1 Type: TMS`

#### xConfiguration Phonebook Server [1..1] URL

Enter the address (URL) to the external phone book server.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters.

**Example:** `xConfiguration Phonebook Server 1 URL: "http://tms.company.com/tms/public/external/phonebook/phonebookservice.asmx"`

## Provisioning configuration

### xConfiguration Provisioning Connectivity

This setting controls how the device discovers whether it should request an internal or external configuration from the provisioning server.

**Requires user role:** ADMIN

**Value space:** <Internal/External/Auto>

*Internal:* Request internal configuration.

*External:* Request external configuration.

*Auto:* Automatically discover using NAPTR queries whether internal or external configurations should be requested. If the NAPTR responses have the "e" flag, external configurations will be requested. Otherwise internal configurations will be requested.

**Example:** `xConfiguration Provisioning Connectivity: Auto`

### xConfiguration Provisioning Mode

It is possible to configure a video system using a provisioning system (external manager). This allows video conferencing network administrators to manage many video systems simultaneously. With this setting you choose which type of provisioning system to use. Provisioning can also be switched off. Contact your provisioning system provider/representative for more information.

**Requires user role:** ADMIN

**Value space:** <Off/TMS/VCS/CallWay/CUCM/Auto/Edge>

*Off:* The video system will not be configured by a provisioning system.

*Auto:* The provisioning server will automatically be selected by the video system.

*TMS:* The video system will be configured using TMS (Cisco TelePresence Management System).

*VCS:* The video system will be configured using VCS (Cisco TelePresence Video Communication Server).

*Callway:* The video system will be configured using the WebEx TelePresence subscription service (formerly named Callway).

*CUCM:* The video system will be configured using CUCM (Cisco Unified Communications Manager).

*Edge:* The system will connect to CUCM via the Collaboration Edge infrastructure.

**Example:** `xConfiguration Provisioning Mode: Auto`

### xConfiguration Provisioning LoginName

This is the user name part of the credentials used to authenticate the video system with the provisioning server. This setting must be used when required by the provisioning server. If Provisioning Mode is Callway (WebEx TelePresence), enter the video number.

**Requires user role:** ADMIN

**Value space:** <S: 0, 80>

*Format:* String with a maximum of 80 characters.

**Example:** `xConfiguration Provisioning LoginName: ""`

### xConfiguration Provisioning Password

This is the password part of the credentials used to authenticate the video system with the provisioning server. This setting must be used when required by the provisioning server. If Provisioning Mode is Callway (WebEx TelePresence), enter the activation code.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* String with a maximum of 64 characters.

**Example:** `xConfiguration Provisioning Password: ""`

### xConfiguration Provisioning HttpMethod

Select the HTTP method to be used for the provisioning.

**Requires user role:** ADMIN

**Value space:** <GET/POST>

*GET:* Select GET when the provisioning server supports GET.

*POST:* Select POST when the provisioning server supports POST.

**Example:** `xConfiguration Provisioning HttpMethod: POST`

### xConfiguration Provisioning ExternalManager Address

Enter the IP Address or DNS name of the external manager / provisioning system.

If an External Manager Address (and Path) is configured, the system will send a message to this address when starting up. When receiving this message the external manager / provisioning system can return configurations/commands to the unit as a result.

When using CUCM or TMS provisioning, the DHCP server can be set up to provide the external manager address automatically (DHCP Option 242 for TMS, and DHCP Option 150 for CUCM). An address set in the Provisioning ExternalManager Address setting will override the address provided by DHCP.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address, IPv6 address or DNS name.

**Example:** xConfiguration Provisioning ExternalManager Address: ""

### xConfiguration Provisioning ExternalManager AlternateAddress

Only applicable when the endpoint is provisioned by Cisco Unified Communication Manager (CUCM) and an alternate CUCM is available for redundancy. Enter the address of the alternate CUCM. If the main CUCM is not available, the endpoint will be provisioned by the alternate CUCM. When the main CUCM is available again, the endpoint will be provisioned by this CUCM.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address, IPv6 address or DNS name.

**Example:** xConfiguration Provisioning ExternalManager AlternateAddress: ""

### xConfiguration Provisioning ExternalManager Protocol

Determine whether to use secure management or not.

**Requires user role:** ADMIN

**Value space:** <HTTP/HTTPS>

*HTTP:* Set to HTTP to disable secure management. Requires HTTP to be enabled in the NetworkServices HTTP Mode setting.

*HTTPS:* Set to HTTPS to enable secure management. Requires HTTPS to be enabled in the NetworkServices HTTPS Mode setting.

**Example:** xConfiguration Provisioning ExternalManager Protocol: HTTP

### xConfiguration Provisioning ExternalManager Path

Set the Path to the external manager / provisioning system. This setting is required when several management services reside on the same server, i.e. share the same External Manager address.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters.

**Example:** xConfiguration Provisioning ExternalManager Path: "tms/public/external/management/SystemManagementService.asmx"

### xConfiguration Provisioning ExternalManager Domain

Enter the SIP domain for the VCS provisioning server.

**Requires user role:** ADMIN

**Value space:** <S: 0, 64>

*Format:* String with a maximum of 64 characters.

**Example:** xConfiguration Provisioning ExternalManager Domain: "any.domain.com"

## RTP configuration

### xConfiguration RTP Ports Range Start

Specify the first port in the range of RTP ports. Also see the H323 Profile [1..1] PortAllocation setting.

NOTE: Restart the system for any change to this setting to take effect.

**Requires user role:** ADMIN

**Value space:** <1024..65502>

*Range:* Select a value from 1024 to 65502.

**Example:** xConfiguration RTP Ports Range Start: 2326

### xConfiguration RTP Ports Range Stop

Specify the last RTP port in the range. Also see the H323 Profile [1..1] PortAllocation setting.

NOTE: Restart the system for any change to this setting to take effect.

**Requires user role:** ADMIN

**Value space:** <1056..65535>

*Range:* Select a value from 1056 to 65535.

**Example:** xConfiguration RTP Ports Range Stop: 2486

## Security configuration

### xConfiguration Security Audit Logging Mode

Determine where to record or transmit the audit logs. The audit logs are sent to a syslog server.

When using the External/ExternalSecure modes and setting the port assignment to manual in the Security Audit Server PortAssignment setting, you must also enter the address and port number for the audit server in the Security Audit Server Address and Security Audit Server Port settings.

**Requires user role:** AUDIT

**Value space:** <Off/Internal/External/ExternalSecure>

*Off:* No audit logging is performed.

*Internal:* The system records the audit logs to internal logs, and rotates logs when they are full.

*External:* The system sends the audit logs to an external syslog server. The syslog server must support UDP.

*ExternalSecure:* The system sends encrypted audit logs to an external syslog server that is verified by a certificate in the Audit CA list. The Audit CA list file must be uploaded to the codec using the web interface. The common\_name parameter of a certificate in the CA list must match the IP address of the syslog server, and the secure TCP server must be set up to listen for secure (TLS) TCP Syslog messages.

**Example:** xConfiguration Security Audit Logging Mode: Off

### xConfiguration Security Audit OnError Action

Determine what happens when the connection to the syslog server is lost. This setting is only relevant when Security Audit Logging Mode is set to ExternalSecure.

**Requires user role:** AUDIT

**Value space:** <Halt/Ignore>

*Halt:* If a halt condition is detected the system codec is rebooted and only the auditor is allowed to operate the unit until the halt condition has passed. When the halt condition has passed the audit logs are re-spoiled to the syslog server. Halt conditions are: A network breach (no physical link), no syslog server running (or incorrect address or port to the syslog server), TLS authentication failed (if in use), local backup (re-spooling) log full.

*Ignore:* The system will continue its normal operation, and rotate internal logs when full. When the connection is restored it will again send its audit logs to the syslog server.

**Example:** xConfiguration Security Audit OnError Action: Ignore

### xConfiguration Security Audit Server Address

The audit logs are sent to a syslog server. Enter the IP address of the syslog server. Only valid IPv4 or IPv6 address formats are accepted. Host names are not supported. This setting is only relevant when Security Audit Logging Mode is set to External or ExternalSecure.

**Requires user role:** AUDIT

**Value space:** <S: 0, 64>

*Format:* A valid IPv4 address or IPv6 address

**Example:** xConfiguration Security Audit Server Address: ""

### xConfiguration Security Audit Server Port

The audit logs are sent to a syslog server. Enter the port of the syslog server that the system shall send its audit logs to. This setting is only relevant when Security Audit PortAssignment is set to Manual.

**Requires user role:** AUDIT

**Value space:** <0..65535>

*Range:* Select a value from 0 to 65535.

**Example:** xConfiguration Security Audit Server Port: 514

### xConfiguration Security Audit Server PortAssignment

The audit logs are sent to a syslog server. You can define how the port number of the external syslog server will be assigned. This setting is only relevant when Security Audit Logging Mode is set to External or ExternalSecure. To see which port number is used you can check the Security Audit Server Port status. Navigate to Configuration > System status on the web interface or; if on a command line interface, run the command xStatus Security Audit Server Port.

**Requires user role:** AUDIT

**Value space:** <Auto/Manual>

*Auto:* Will use UDP port number 514 when the Security Audit Logging Mode is set to External. Will use TCP port number 6514 when the Security Audit Logging Mode is set to ExternalSecure.

*Manual:* Will use the port value defined in the Security Audit Server Port setting.

**Example:** xConfiguration Security Audit Server PortAssignment: Auto

### xConfiguration Security Session ShowLastLogon

When logging in to the system using SSH or Telnet you will see the UserId, time and date of the last session that did a successful login.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*On:* Show information about the last session.

*Off:* Do not show information about the last session.

**Example:** xConfiguration Security Session ShowLastLogon: Off

### xConfiguration Security Session InactivityTimeout

Determine how long the system will accept inactivity from the user before he is automatically logged out.

**Requires user role:** ADMIN

**Value space:** <0..10000>

*Range:* Select a value between 1 and 10000 seconds; or select 0 when inactivity should not enforce automatic logout.

**Example:** xConfiguration Security Session InactivityTimeout: 0

## SerialPort configuration

### xConfiguration SerialPort Mode

Enable/disable the serial port (COM port).

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable the serial port.

*On:* Enable the serial port.

**Example:** `xConfiguration SerialPort Mode: On`

### xConfiguration SerialPort BaudRate

Specify the baud rate (data transmission rate, bits per second) for the serial port. The default value is 115200.

Other connection parameters for the serial port are: Data bits: 8; Parity: None; Stop bits: 1; Flow control: None.

**Requires user role:** ADMIN

**Value space:** <9600/19200/38400/57600/115200>

*Range:* Select a baud rate from the baud rates listed (bps).

**Example:** `xConfiguration SerialPort BaudRate: 115200`

### xConfiguration SerialPort LoginRequired

Determine if login shall be required when connecting to the serial port.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The user can access the codec via the serial port without any login.

*On:* Login is required when connecting to the codec via the serial port.

**Example:** `xConfiguration SerialPort LoginRequired: On`

## SIP configuration

### xConfiguration SIP ANAT

ANAT (Alternative Network Address Types) enables media negotiation for multiple addresses and address types, as specified in RFC 4091.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable ANAT.

*On:* Enable ANAT.

**Example:** `xConfiguration SIP ANAT: Off`

### xConfiguration SIP AuthenticateTransferor

Not applicable in this version.

### xConfiguration SIP ListenPort

Turn on or off the listening for incoming connections on the SIP TCP/UDP ports. If turned off, the endpoint will only be reachable through the SIP registrar (CUCM or VCS). It is recommended to leave this setting at its default value.

**Requires user role:** ADMIN

**Value space:** <On/Off>

*On:* Listening for incoming connections on the SIP TCP/UDP ports is turned on.

*Off:* Listening for incoming connections on the SIP TCP/UDP ports is turned off.

**Example:** `xConfiguration SIP ListenPort: On`

### xConfiguration SIP PreferredIPMedia

Define the preferred IP version for sending and receiving media (audio, video, data). Only applicable when both Network IPStack and Conference CallProtocolIPStack are set to Dual, and the network does not have a mechanism for choosing the preferred IP version.

**Requires user role:** ADMIN

**Value space:** <IPv4/IPv6>

*IPv4:* The preferred IP version for media is IPv4.

*IPv6:* The preferred IP version for media is IPv6.

**Example:** `xConfiguration SIP PreferredIPMedia: IPv4`

### xConfiguration SIP PreferredIPSignaling

Define the preferred IP version for signaling (audio, video, data). Only applicable when both Network IPStack and Conference CallProtocolIPStack are set to Dual, and the network does not have a mechanism for choosing the preferred IP version. It also determines the priority of the A/AAAA lookups in DNS, so that the preferred IP version is used for registration.

**Requires user role:** ADMIN

**Value space:** <IPv4/IPv6>

*IPv4:* The preferred IP version for signaling is IPv4.

*IPv6:* The preferred IP version for signaling is IPv6.

**Example:** xConfiguration SIP PreferredIPSignaling: IPv4

### xConfiguration SIP OCSP Mode

Not applicable in this version.

### xConfiguration SIP OCSP DefaultResponder

Not applicable in this version.

### xConfiguration SIP Profile [1..1] Ice Mode

ICE (Interactive Connectivity Establishment, RFC 5245) is a NAT traversal solution that the endpoints can use to discover the optimized media path. Thus the shortest route for audio and video is always secured between the endpoints. NOTE: ICE is not supported when registered to CUCM (Cisco Unified Communication Manager).

**Requires user role:** ADMIN

**Value space:** <Auto/Off/On>

*Auto:* When set to Auto, ICE will be enabled if a turn server is provided, otherwise ICE will be disabled.

*Off:* Set to Off to disable ICE.

*On:* Set to On to enable ICE.

**Example:** xConfiguration SIP Profile 1 Ice Mode: Auto

### xConfiguration SIP Profile [1..1] Ice DefaultCandidate

This is the default IP address that the endpoint will receive media on until ICE has reached a conclusion about which media route to use (up to the first 5 seconds of a call).

**Requires user role:** ADMIN

**Value space:** <Host/Rflx/Relay>

*Host:* The endpoint will receive media on its own IP address.

*Rflx:* The endpoint will receive media on its public IP address as seen by the TURN server.

*Relay:* The endpoint will receive media on the IP address and port allocated on the TURN server, and is used as a fallback until ICE has concluded.

**Example:** xConfiguration SIP Profile 1 Ice DefaultCandidate: Host

### xConfiguration SIP Profile [1..1] Turn DiscoverMode

Set the discover mode to enable/disable the application to search for available Turn servers in DNS. Before making calls, the system will test if port allocation is possible.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Set to Off to disable discovery mode.

*On:* When set to On, the system will search for available Turn servers in DNS, and before making calls the system will test if port allocation is possible.

**Example:** xConfiguration SIP Profile Turn DiscoverMode: On

### xConfiguration SIP Profile [1..1] Turn BandwidthProbe

Not applicable in this version.

### xConfiguration SIP Profile [1..1] Turn DropRflx

DropRflx will make the endpoint force media through the Turn relay, unless the remote endpoint is on the same network.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable DropRflx.

*On:* The system will force media through the Turn relay when the remote endpoint is on another network.

**Example:** xConfiguration SIP Profile Turn DropRflx: Off



### xConfiguration SIP Profile [1..1] Turn Server

This is the address of the TURN (Traversal Using Relay NAT) server that the endpoints will use. It is used as a media relay fallback and it is also used to discover the endpoint's own public IP address.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* The preferred format is DNS SRV record (e.g. `_turn._udp.<domain>`), or it can be a valid IPv4 or IPv6 address.

**Example:** `xConfiguration SIP Profile 1 Turn Server: "_turn._udp.example.com"`

### xConfiguration SIP Profile [1..1] Turn UserName

The user name needed for accessing the TURN server.

**Requires user role:** ADMIN

**Value space:** <S: 0, 128>

*Format:* String with a maximum of 128 characters.

**Example:** `xConfiguration SIP Profile 1 Turn UserName: ""`

### xConfiguration SIP Profile [1..1] Turn Password

The password needed for accessing the TURN server.

**Requires user role:** ADMIN

**Value space:** <S: 0, 128>

*Format:* String with a maximum of 128 characters.

**Example:** `xConfiguration SIP Profile 1 Turn Password: ""`

### xConfiguration SIP Profile [1..1] URI

The SIP URI (Uniform Resource Identifier) is the address that is used to identify the video system. The URI is registered and used by the SIP services to route inbound calls to the system. The SIP URI syntax is defined in RFC 3261.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with maximum 255 characters and compliant with the SIP URI syntax.

**Example:** `xConfiguration SIP Profile 1 URI: "sip:firstname.lastname@company.com"`

### xConfiguration SIP Profile [1..1] DisplayName

When configured the incoming call will report the DisplayName instead of the SIP URI.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* String with a maximum of 255 characters.

**Example:** `xConfiguration SIP Profile 1 DisplayName: ""`

### xConfiguration SIP Profile [1..1] Authentication [1..1] LoginName

This is the user name part of the credentials used to authenticate towards the SIP proxy.

**Requires user role:** ADMIN

**Value space:** <S: 0, 128>

*Format:* String with a maximum of 128 characters.

**Example:** `xConfiguration SIP Profile 1 Authentication 1 LoginName: ""`

### xConfiguration SIP Profile [1..1] Authentication [1..1] Password

This is the password part of the credentials used to authenticate towards the SIP proxy.

**Requires user role:** ADMIN

**Value space:** <S: 0, 128>

*Format:* String with a maximum of 128 characters.

**Example:** `xConfiguration SIP Profile 1 Authentication 1 Password: ""`

### xConfiguration SIP Profile [1..1] DefaultTransport

Select the transport protocol to be used over the LAN.

**Requires user role:** ADMIN

**Value space:** <TCP/UDP/Tls/Auto>

*TCP:* The system will always use TCP as the default transport method.

*UDP:* The system will always use UDP as the default transport method.

*Tls:* The system will always use TLS as the default transport method. For TLS connections a SIP CA-list can be uploaded to the video system. If no such CA-list is available on the system then anonymous Diffie Hellman will be used.

*Auto:* The system will try to connect using transport protocols in the following order: TLS, TCP, UDP.

**Example:** `xConfiguration SIP Profile 1 DefaultTransport: Auto`

### xConfiguration SIP Profile [1..1] TlsVerify

For TLS connections a SIP CA-list can be uploaded to the video system. This can be done from the web interface.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Set to Off to allow TLS connections without verifying them. The TLS connections are allowed to be set up without verifying the x.509 certificate received from the server against the local CA-list. This should typically be selected if no SIP CA-list has been uploaded.

*On:* Set to On to verify TLS connections. Only TLS connections to servers, whose x.509 certificate is validated against the CA-list, will be allowed.

**Example:** `xConfiguration SIP Profile 1 TlsVerify: Off`

### xConfiguration SIP Profile [1..1] Outbound

Turn on or off the client initiated connections mechanism for firewall traversal, connection reuse and redundancy. The current version supports RFC 5626.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Connect to the single proxy configured first in Proxy Address list.

*On:* Set up multiple outbound connections to servers in the Proxy Address list.

**Example:** `xConfiguration SIP Profile 1 Outbound: Off`

### xConfiguration SIP Profile [1..1] Proxy [1..4] Address

The Proxy Address is the manually configured address for the outbound proxy. It is possible to use a fully qualified domain name, or an IP address. The default port is 5060 for TCP and UDP but another one can be provided. If SIP Profile Outbound is enabled, multiple proxies can be addressed.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>

*Format:* A valid IPv4 address, IPv6 address or DNS name.

**Example:** `xConfiguration SIP Profile 1 Proxy 1 Address: ""`

### xConfiguration SIP Profile [1..1] Proxy [1..4] Discovery

Select if the SIP Proxy address is to be obtained manually or by using Dynamic Host Configuration Protocol (DHCP).

**Requires user role:** ADMIN

**Value space:** <Auto/Manual>

*Auto:* When Auto is selected, the SIP Proxy address is obtained using Dynamic Host Configuration Protocol (DHCP).

*Manual:* When Manual is selected, the manually configured SIP Proxy address will be used.

**Example:** `xConfiguration SIP Profile 1 Proxy 1 Discovery: Manual`

### xConfiguration SIP Profile [1..1] Type

Enables SIP extensions and special behaviour for a vendor or provider.

**Requires user role:** ADMIN

**Value space:** <Standard/Cisco>

*Standard:* Use this when registering to standard SIP Proxy (tested with Cisco TelePresence VCS and Broadsoft)

*Cisco:* Use this when registering to Cisco Unified Communication Manager.

**Example:** `xConfiguration SIP Profile 1 Type: Standard`

### xConfiguration SIP Profile [1..1] Mailbox

When registered to a Cisco Unified Communications Manager (CUCM) you may be offered the option of having a private voice mailbox. Enter the number (address) of the mailbox in this setting, or leave the string empty if you do not have a voice mailbox.

**Requires user role:** ADMIN

**Value space:** <S: 0, 255>>

*Format:* String with a maximum of 255 characters.

**Example:** `xConfiguration SIP Profile 1 Mailbox: "12345678"`

### xConfiguration SIP Profile [1..1] Line

When registered to a Cisco Unified Communications Manager (CUCM) the endpoint may be part of a shared line. This means that several devices share the same directory number. The different devices sharing the same number receive status from the other appearances on the line as defined in RFC 4235.

Note that shared lines are set up by CUCM, not by the endpoint. Therefore do not change this setting manually; CUCM pushes this information to the endpoint when required.

**Requires user role:** ADMIN

**Value space:** <Private/Shared>

*Shared:* The system is part of a shared line and is therefore sharing its directory number with other devices.

*Private:* This system is not part of a shared line (default).

**Example:** xConfiguration SIP Profile 1 Line: Private

## Standby configuration

### xConfiguration Standby Control

Determine whether the system should go into standby mode or not.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The system will not enter standby mode.

*On:* Enter standby mode when the Standby Delay has timed out. Requires the Standby Delay to be set to an appropriate value.

**Example:** xConfiguration Standby Control: On

### xConfiguration Standby Delay

Define how long (in minutes) the system shall be in idle mode before it goes into standby mode. Requires the Standby Control to be enabled.

**Requires user role:** ADMIN

**Value space:** <1..480>

*Range:* Select a value from 1 to 480 minutes.

**Example:** xConfiguration Standby Delay: 10

### xConfiguration Standby BootAction

Define the camera position after a restart of the codec.

**Requires user role:** ADMIN

**Value space:** <None/Preset1/Preset2/Preset3/Preset4/Preset5/Preset6/Preset7/Preset8/Preset9/Preset10/Preset11/Preset12/Preset13/Preset14/Preset15/RestoreCameraPosition/DefaultCameraPosition>

*None:* No action.

*Preset1 to Preset15:* After a reboot the camera position will be set to the position defined by the selected preset.

*RestoreCameraPosition:* After a reboot the camera position will be set to the position it had before the last boot.

*DefaultCameraPosition:* After a reboot the camera position will be set to the factory default position.

**Example:** xConfiguration Standby BootAction: DefaultCameraPosition

### xConfiguration Standby StandbyAction

Define the camera position when going into standby mode.

**Requires user role:** ADMIN

**Value space:** <None/PrivacyPosition>

*None:* No action.

*PrivacyPosition:* Turns the camera to a sideways position for privacy.

**Example:** `xConfiguration Standby StandbyAction: PrivacyPosition`

### xConfiguration Standby WakeupAction

Define the camera position when leaving standby mode.

**Requires user role:** ADMIN

**Value space:** <None/Preset1/Preset2/Preset3/Preset4/Preset5/Preset6/Preset7/Preset8/  
Preset9/Preset10/Preset11/Preset12/Preset13/Preset14/Preset15/RestoreCameraPosition/  
DefaultCameraPosition>

*None:* No action.

*Preset1 to Preset15:* When leaving standby the camera position will be set to the position defined by the selected preset.

*RestoreCameraPosition:* When leaving standby the camera position will be set to the position it had before entering standby.

*DefaultCameraPosition:* When leaving standby the camera position will be set to the factory default position.

**Example:** `xConfiguration Standby WakeupAction: RestoreCameraPosition`

## SystemUnit configuration

### xConfiguration SystemUnit Name

Enter a System Name to define a name of the system unit. If the H.323 Alias ID is configured on the system then this ID will be used instead of the system name. The system name will be displayed:

- 1) When the codec is acting as an SNMP Agent.
- 2) Towards a DHCP server.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** `xConfiguration SystemUnit Name: "Meeting Room"`

### xConfiguration SystemUnit MenuLanguage

This has been replaced with the UserInterface Language setting.

### xConfiguration SystemUnit CallLogging Mode

Set the call logging mode for calls that are received or placed by the system. The call logs may then be viewed via the web interface or using the xCommand CallHistory Get command.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable logging.

*On:* Enable logging.

**Example:** `xConfiguration SystemUnit CallLogging Mode: On`

### xConfiguration SystemUnit ContactInfo Type

Choose which type of contact information to show in the status field in the upper left corner of the main display and Touch controller. The information can also be read with the command xStatus SystemUnit ContactInfo.

**Requires user role:** ADMIN

**Value space:** <Auto/None/IPv4/IPv6/H323Id/E164Alias/H320Number/SipUri/SystemName/DisplayName>

*Auto:* Show the address which another system can dial to reach this system. The address depends on the default call protocol and system registration.

*None:* Do not show any contact information in the status field.

*IPv4:* Show the IPv4 address as contact information.

*IPv6:* Show the IPv6 address as contact information.

*H323Id:* Show the H.323 ID as contact information (see the H323 Profile [1..1] H323Alias ID setting).

*E164Alias:* Show the H.323 E164 Alias as contact information (see the H323 Profile [1..1] H323Alias E164 setting).

*H320Number:* Show the H.320 number as contact information (only applicable if connected to a Cisco TelePresence ISDN Link gateway).

*SipUri:* Show the SIP URI as contact information (see the SIP Profile [1..1] URI setting).

*SystemName:* Show the system name as contact information (see the SystemUnit Name setting).

*DisplayName:* Show the display name as contact information (see the SIP Profile [1..1] DisplayName setting).

**Example:** xConfiguration SystemUnit ContactInfo Type: Auto

### xConfiguration SystemUnit IrSensor

Not applicable in this version.

## Time configuration

### xConfiguration Time Zone

Set the time zone where the system is located, using Windows time zone description format.

**Requires user role:** USER

**Value space:** <GMT-12:00 (International Date Line West)/GMT-11:00 (Midway Island, Samoa)/ GMT-10:00 (Hawaii)/GMT-09:00 (Alaska)/GMT-08:00 (Pacific Time (US & Canada); Tijuana)/ GMT-07:00 (Arizona)/GMT-07:00 (Mountain Time (US & Canada))/GMT-07:00 (Chihuahua, La Paz, Mazatlan)/GMT-06:00 (Central America)/GMT-06:00 (Saskatchewan)/GMT-06:00 (Guadalajara, Mexico City, Monterrey)/GMT-06:00 (Central Time (US & Canada))/GMT-05:00 (Indiana (East))/ GMT-05:00 (Bogota, Lima, Quito)/GMT-05:00 (Eastern Time (US & Canada))/GMT-04:30 (Caracas)/ GMT-04:00 (La Paz)/GMT-04:00 (Santiago)/GMT-04:00 (Atlantic Time (Canada))/GMT-03:30 (Newfoundland)/GMT-03:00 (Buenos Aires, Georgetown, Montevideo)/GMT-03:00 (Greenland)/ GMT-03:00 (Brasilia)/GMT-02:00 (Mid-Atlantic)/GMT-01:00 (Cape Verde Is.)/GMT-01:00 (Azores)/ GMT (Casablanca, Monrovia)/GMT (Coordinated Universal Time)/GMT (Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London)/GMT+01:00 (West Central Africa)/GMT+01:00 (Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna)/GMT+01:00 (Brussels, Copenhagen, Madrid, Paris)/ GMT+01:00 (Sarajevo, Skopje, Warsaw, Zagreb)/GMT+01:00 (Belgrade, Bratislava, Budapest, Ljubljana, Prague)/GMT+02:00 (Harare, Pretoria)/GMT+02:00 (Jerusalem)/GMT+02:00 (Athens, Istanbul, Minsk)/GMT+02:00 (Helsinki, Kyiv, Riga, Sofia, Tallinn, Vilnius)/GMT+02:00 (Cairo)/ GMT+02:00 (Bucharest)/GMT+03:00 (Nairobi)/GMT+03:00 (Kuwait, Riyadh)/GMT+04:00 (Moscow, St. Petersburg, Volgograd)/GMT+03:00 (Baghdad)/GMT+03:30 (Tehran)/GMT+04:00 (Abu Dhabi, Muscat)/GMT+04:00 (Baku, Tbilisi, Yerevan)/GMT+04:30 (Kabul)/GMT+05:00 (Islamabad, Karachi, Tashkent)/GMT+05:00 (Ekaterinburg)/GMT+05:30 (Chennai, Kolkata, Mumbai, New Delhi)/GMT+05:45 (Kathmandu)/GMT+06:00 (Sri Jayawardenepura)/GMT+06:00 (Astana, Dhaka)/ GMT+06:00 (Almaty, Novosibirsk)/GMT+06:30 (Rangoon)/GMT+07:00 (Bangkok, Hanoi, Jakarta)/ GMT+07:00 (Krasnoyarsk)/GMT+08:00 (Perth)/GMT+08:00 (Taipei)/GMT+08:00 (Kuala Lumpur, Singapore)/GMT+08:00 (Beijing, Chongqing, Hong Kong, Urumqi)/GMT+08:00 (Ulaan Baatar)/ GMT+09:00 (Osaka, Sapporo, Tokyo)/GMT+09:00 (Seoul)/GMT+09:00 (Irkutsk)/GMT+09:30 (Darwin)/ GMT+09:30 (Adelaide)/GMT+10:00 (Guam, Port Moresby)/GMT+10:00 (Brisbane)/GMT+10:00 (Yakutsk)/GMT+10:00 (Hobart)/GMT+10:00 (Canberra, Melbourne, Sydney)/GMT+11:00 (Magadan, Solomon Is., New Caledonia)/GMT+11:00 (Vladivostok)/GMT+12:00 (Fiji, Kamchatka, Marshall Is.)/ GMT+12:00 (Auckland, Wellington)/GMT+13:00 (Nuku alofa)>

*Range:* Select a time zone from the list time zones. If using a command line interface; watch up for typos.

**Example:** xConfiguration Time Zone: "GMT (Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London)"

### xConfiguration Time TimeFormat

Set the time format.

**Requires user role:** USER

**Value space:** <24H/12H>

*24H:* Set the time format to 24 hours.

*12H:* Set the time format to 12 hours (AM/PM).

**Example:** `xConfiguration Time TimeFormat: 24H`

### xConfiguration Time DateFormat

Set the date format.

**Requires user role:** USER

**Value space:** <DD\_MM\_YY/MM\_DD\_YY/YY\_MM\_DD>

*DD\_MM\_YY:* The date January 30th 2010 will be displayed: 30.01.10

*MM\_DD\_YY:* The date January 30th 2010 will be displayed: 01.30.10

*YY\_MM\_DD:* The date January 30th 2010 will be displayed: 10.01.30

**Example:** `xConfiguration Time DateFormat: DD_MM_YY`

## UserInterface configuration

### xConfiguration UserInterface Language

Select the language to be used in menus and messages on the screen and Touch controller. The default language is English.

**Requires user role:** USER

**Value space:** <English/ChineseSimplified/ChineseTraditional/Catalan/Czech/Danish/Dutch/Finnish/French/German/Hungarian/Italian/Japanese/Korean/Norwegian/Polish/PortugueseBrazilian/Russian/Spanish/SpanishLatin/Swedish/Turkish/Arabic/Hebrew>

*Range:* Select a language from the list.

**Example:** `xConfiguration UserInterface Language: English`

### xConfiguration UserInterface OSD EncryptionIndicator

Define for how long the encryption indicator (a padlock) will be shown on screen. The setting applies to both encrypted and non-encrypted calls, i.e. both to secure and non-secure conferences. The icon for encrypted calls is a locked padlock, and the icon for non-encrypted calls is a crossed out locked padlock.

**Requires user role:** ADMIN

**Value space:** <Auto/AlwaysOn/AlwaysOff>

*Auto:* If the Conference Encryption Mode setting is set to BestEffort and the call is encrypted, the encryption indicator is shown during the first seconds of a call. If the Conference Encryption Mode setting is set to BestEffort and the call is non-encrypted, the crossed out encryption indicator is shown during the entire call. If the Conference Encryption Mode setting is NOT set to BestEffort, the encryption indicator is not shown at all.

*AlwaysOn:* The encryption indicator is displayed on screen during the entire call. This applies to both encrypted and non-encrypted calls for all Conference Encryption Mode settings.

*AlwaysOff:* The encryption indicator is never displayed on screen. This applies to both encrypted and non-encrypted calls for all Conference Encryption Mode settings.

**Example:** `xConfiguration UserInterface OSD EncryptionIndicator: Auto`

### xConfiguration UserInterface OSD LanguageSelection

In cases where you want to prevent users from easily changing the language settings from the Settings menu, the language settings can be made available from within the Administrator Settings menu. The administrator settings can be password protected.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The language is set from the Administrator Settings menu.

*On:* The language is set from the Settings menu.

**Example:** `xConfiguration UserInterface OSD LanguageSelection: On`

### xConfiguration UserInterface OSD LoginRequired

Not applicable in this version.

### xConfiguration UserInterface OSD Output

Define on which monitor the on-screen information and indicators should be displayed.

**Requires user role:** ADMIN

**Value space:** <Auto/1/2/3>

*Auto:* The system will detect when a monitor is connected to a video output, and send the information and indicators to the first monitor you connect. If you have a multi-monitor setup, and all monitors are connected before switching on the system, the information and indicators will be sent to the video output with the lowest number, starting with Output Connector 1 (HDMI 1).

*Range 1-3:* The system will send the on-screen information and indicators to the specified output. Choose n to send the information and indicators to the system's Output Connector n.

**Example:** `xConfiguration UserInterface OSD Output: Auto`

### xConfiguration UserInterface Wallpaper

Select a background image (wallpaper) for the video screen when idle.

**Requires user role:** USER

**Value space:** <None/Custom>

*None:* There is no background image on the screen.

*Custom:* Use the custom wallpaper that is stored on the system as background image on the screen. As default, there is no custom wallpaper stored and the background will be black. You can upload a custom wallpaper to the system using the web interface. The following file formats are supported: BMP, GIF, JPEG, PNG. The maximum file size is 2 MByte.

**Example:** `xConfiguration UserInterface Wallpaper: None`

### xConfiguration UserInterface TouchPanel DefaultPanel

Define what (contact list, meeting list, or dial pad) the Touch controller will display on wake up.

**Requires user role:** USER

**Value space:** <None/LastUsed/ContactList/MeetingList/Dialpad>

*None:* None of the below options will appear as default on the Touch controller.

*LastUsed:* The last used (contact list, meeting list, or dial pad) will appear as default on the Touch controller.

*ContactList:* The contact list (favorites, directory and history) will appear as default on the Touch controller.

*MeetingList:* The list of scheduled meetings will appear as default on the Touch controller.

*DialPad:* The dial pad will appear as default on the Touch controller.

**Example:** `xConfiguration UserInterface TouchPanel DefaultPanel: None`

### xConfiguration UserInterface UserPreferences

Some user preferences (ringtone, volume, language, date and time, etc) can be made available from the Settings menu, or from the Settings > Administrator menu on the Touch controller. Accessing the Administrator menus requires that the user has admin privileges.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* The user preferences are available from the Settings > Administrator menu on the Touch controller, for users with admin privileges.

*On:* The user preferences are available from the Settings menu on the Touch controller.

**Example:** `xConfiguration UserInterface UserPreferences: On`

## Video configuration

### xConfiguration Video AllowWebSnapshots

Allow or disallow snapshots being taken of the local input sources, remote sites and presentation channel. If allowed, the web interface Call Control page will show snapshots both when idle and in a call.

NOTE: This feature is disabled by default, and must be enabled from the directly connected Touch controller, or via the codec's serial port (COM port).

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Capturing web snapshots is not allowed.

*On:* Web snapshots can be captured and displayed on the web interface.

**Example:** xConfiguration Video AllowWebSnapshots: Off

### xConfiguration Video CamCtrlPip CallSetup Mode

This setting is used to switch on self-view for a short while when setting up a call. The Video CamCtrlPip CallSetup Duration setting determines for how long it remains on. This applies when self-view in general is switched off.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* self-view is not shown automatically during call setup.

*On:* self-view is shown automatically during call setup.

**Example:** xConfiguration Video CamCtrlPip CallSetup Mode: Off

### xConfiguration Video CamCtrlPip CallSetup Duration

This setting only has an effect when the Video CamCtrlPip CallSetup Mode setting is switched On. In this case, the number of seconds set here determines for how long self-view is shown before it is automatically switched off.

**Requires user role:** ADMIN

**Value space:** <1..60>

*Range:* Choose for how long self-view remains on. The valid range is between 1 and 60 seconds.

**Example:** xConfiguration Video CamCtrlPip CallSetup Duration: 10

### xConfiguration Video DefaultPresentationSource

Not applicable for this product.

### xConfiguration Video Input Connector [1..5] Name

Enter a name for the video input connector.

**Requires user role:** ADMIN

**Value space:** <S: 0, 50>

*Format:* String with a maximum of 50 characters.

**Example:** xConfiguration Video Input Connector 1 Name: ""

### xConfiguration Video Input Connector [1..5] InputSourceType

Select which type of input source is connected to the video input.

**Requires user role:** ADMIN

**Value space:** <other/camera/PC/DVD/document\_camera>

*Other:* When none of the below options do match, set to Other.

*Camera:* Select Camera when you have a camera connected to the video input.

*PC:* Select PC when you have a PC connected to the video input.

*DVD:* Select DVD when you have a DVD player connected to the video input.

*Document\_Camera:* Select Document\_Camera when you have a document camera connected to the video input.

**Example:** xConfiguration Video Input Connector 2 InputSourceType: Camera

### xConfiguration Video Input Connector [1..5] Visibility

Define the visibility of the video input connector in the menus on the user interface.

**Requires user role:** ADMIN

*Never:* When the input source is not expected to be used as a presentation source, set to Never.

*Always:* When set to Always, the menu selection for the video input connector will always be visible on the graphical user interface.

*IfSignal:* When set to IfSignal, the menu selection for the video input connector will only be visible when something is connected to the video input.

**Example:** xConfiguration Video Input Connector 2 Visibility: IfSignal



### xConfiguration Video Input Connector [1..5] CameraControl Mode

Define the camera control mode when a camera is connected to the video input connector.

Note that camera control is not available for Connector 4 (DVI-I) and Connector 5 (S-video/Composite).

**Requires user role:** ADMIN

**Value space:** Connector 1, 2, 3: <Off/On> Connector 4,5: <Off>

*Off:* Disable camera control.

*On:* Enable camera control.

**Example:** `xConfiguration Video Input Connector 1 CameraControl Mode: On`

### xConfiguration Video Input Connector [1..5] CameraControl CameraId

The camera ID is used to identify all cameras that are controlled from the codec. Use the xStatus Camera API command to see the IDs of the different cameras.

**Requires user role:** ADMIN

**Value space:** Connector 1, 2, 3: <1/2/3/4/5/6/7> Connector 4,5: <1>

*Range:* Select the ID of the camera.

**Example:** `xConfiguration Video Input Connector 1 CameraControl CameraId: 1`

### xConfiguration Video Input Connector [1..5] Quality

When encoding and transmitting video there will be a trade-off between high resolution and high frame rate. For some video sources it is more important to transmit high frame rate than high resolution and vice versa.

**Requires user role:** ADMIN

**Value space:** <Motion/Sharpness>

*Motion:* Gives the highest possible frame rate. Used when there is a need for higher frame rates, typically when a large number of participants are present or when there is a lot of motion in the picture.

*Sharpness:* Gives the highest possible resolution. Used when you want the highest quality of detailed images and graphics.

**Example:** `xConfiguration Video Input Connector 1 Quality: Motion`

### xConfiguration Video Input Connector [1..5] OptimalDefinition Profile

This setting will only take effect when the Video Input Source Quality setting is set to Motion.

The optimal definition profile reflects the lighting conditions in the video conferencing room and the quality of the camera. The better lighting conditions and the better quality of the camera, the higher the profile. In good lighting conditions, the video encoder will provide better quality (higher resolution or frame rate) for a given call rate. Generally, the Normal or Medium profiles are recommended. However, when the lighting conditions are very good, the High profile can be set in order to increase the resolution for a given call rate.

Some typical resolutions used for different optimal definition profiles, call rates and transmit frame rates are shown in the table below. The resolution must be supported by both the calling and called systems. Use the Video Input Source OptimalDefinition Threshold60fps setting to decide when to use the 60 fps frame rate.

Typical resolutions used for different optimal definition profiles, call rates and frame rates								
	Frame rate	Optimal Definition Profile	Call rate					
			768 kbps	1152 kbps	1472 kbps	2560 kbps	4 Mbps*	6 Mbps*
H.265	30 fps	Normal	1280×720	1280×720	1280×720	1920×1080	1920×1080	1920×1080
		Medium	1280×720	1920×1080	1920×1080	1920×1080	1920×1080	1920×1080
		High	1920×1080	1920×1080	1920×1080	1920×1080	1920×1080	1920×1080
	60 fps	Normal	768×448	1024×576	1280×720	1280×720	1280×720	1280×720
		Medium	1024×576	1280×720	1280×720	1280×720	1280×720	1280×720
		High	1280×720	1280×720	1280×720	1280×720	1280×720	1280×720
H.264	30 fps	Normal	1024×576	1280×720	1280×720	1920×1080	1920×1080	1920×1080
		Medium	1280×720	1280×720	1280×720	1920×1080	1920×1080	1920×1080
		High	1280×720	1280×720	1920×1080	1920×1080	1920×1080	1920×1080
	60 fps	Normal	640×360	768×448	1024×576	1280×720	1280×720	1920×1080
		Medium	768×448	1024×576	1024×576	1280×720	1920×1080	1920×1080
		High	1024×576	1280×720	1280×720	1920×1080	1920×1080	1920×1080

\* H.265 is preferred over H.264, and the maximum bit rate for H.265 is 3 Mbps. When the user sets a higher bit rate, the codec will still use H.265 at 3 Mbps as long as all codecs involved supports H.265.

**Requires user role:** ADMIN

**Value space:** <Normal/Medium/High>

*Normal:* Use this profile for a normally to poorly lit environment. Resolutions will be set rather conservative.

*Medium:* Requires good and stable lighting conditions and a good quality video input. For some call rates this leads to higher resolution.

*High:* Requires nearly optimal video conferencing lighting conditions and a good quality video input in order to achieve a good overall experience. Rather high resolutions will be used.

**Example:** `xConfiguration Video Input Connector 1 OptimalDefinition Profile: Medium`

### xConfiguration Video Input Connector [1..5] OptimalDefinition Threshold60fps

For each video input, this setting tells the system the lowest resolution where it should transmit 60fps. So for all resolutions lower than this, the maximum transmitted frame rate would be 30fps, while above this resolution 60fps would also be possible, if the available bandwidth is adequate.

**Requires user role:** ADMIN

**Value space:** <512\_288/768\_448/1024\_576/1280\_720/1920\_1080/Never>

*512\_288:* Set the threshold to 512x288.

*768\_448:* Set the threshold to 768x448.

*1024\_576:* Set the threshold to 1024x576.

*1280\_720:* Set the threshold to 1280x720.

*1920\_1080:* Set the threshold to 1920x1080.

*Never:* Do not set a threshold for transmitting 60fps.

**Example:** xConfiguration Video Input Connector 1 OptimalDefinition Threshold60fps:  
1280\_720

### xConfiguration Video Input Connector [1..4] PresentationSelection

Define how the video system will behave when a presentation source is connected to the video input. Note that sharing the presentation with the far end always requires additional action (tap Start Presenting on the Touch controller).

**Requires user role:** ADMIN

**Value space:** <Manual/Automatic/OnConnect>

*Manual:* In manual mode, the contents of the video input will not be presented on the screen until you select it from the Touch controller.

*Automatic:* In automatic mode, the contents on the video input will be presented on screen automatically. If more than one source is set to Automatic, the last connected source will be used. If any content is active (presented) when a call is disconnected, the content will still be displayed locally.

*OnConnect:* When in on-connect mode, the content on the video input will be presented on screen when a cable is connected. Otherwise, the behavior is like when in manual mode.

**Example:** xConfiguration Video Input Connector 1 PresentationSelection: Manual

### xConfiguration Video Input Connector [1..4] RGBQuantizationRange

The devices connected to the video input should follow the rules for RGB video quantization range defined in CEA-861. Unfortunately some devices do not follow the standard and this configuration may be used to override the settings to get a perfect image with any source. The default value is set to Full because most sources expects full quantization range.

**Requires user role:** ADMIN

**Value space:** <Auto/Full/Limited>

*Auto:* RGB quantization range is automatically selected based on video format according to CEA-861-E. CE video formats will use limited quantization range levels. IT video formats will use full quantization range levels.

*Full:* Full quantization range. The R, G, B quantization range includes all code values (0 - 255). This is defined in CEA-861-E.

*Limited:* Limited Quantization Range. R, G, B quantization range that excludes some code values at the extremes (16 - 235). This is defined in CEA-861-E.

**Example:** xConfiguration Video Input Connector 1 RGBQuantizationRange: Auto

### xConfiguration Video Input Connector [4] DviType

The official DVI standard supports both digital and analog signals. In most cases the default AutoDetect setting can detect whether the signal is analog RGB or digital. However, in some rare cases when DVI-I cables are used (these cables can carry both the analog and digital signals) the auto detection fails. This setting makes it possible to override the AutoDetect and select the correct DVI video input.

**Requires user role:** ADMIN

**Value space:** <AutoDetect/Digital/AnalogRGB/AnalogYPbPr>

*AutoDetect:* Set to AutoDetect to automatically detect if the signal is analog RGB or digital.

*Digital:* Set to Digital to force the DVI video input to Digital when using DVI-I cables with both analog and digital pins and AutoDetect fails.

*AnalogRGB:* Set to AnalogRGB to force the DVI video input to AnalogRGB when using DVI-I cables with both analog and digital pins and AutoDetect fails.

*AnalogYPbPr:* Set to AnalogYPbPr to force the DVI video input to AnalogYPbPr, as the component (YPbPr) signal cannot be auto detected.

**Example:** xConfiguration Video Input Connector 4 DviType: AutoDetect

### xConfiguration Video Input Connector [5] SignalType

Connector 5 can be used for either S-Video or Composite video input format. Use this setting to configure which video format the BNC connector(s) are used for.

**Requires user role:** ADMIN

**Value space:** <Composite/YC>

*Composite:* Connector 5 is configured for composite video input. Only the BNC connector that is labeled "Y" is used.

*YC:* Connector 5 is configured for S-Video input. Both BNC connectors ("Y" and "C") are used.

**Example:** xConfiguration Video Input Connector 5 SignalType: Composite

### xConfiguration Video Layout DisableDisconnectedLocalOutputs

This setting is fixed to On.

**Requires user role:** ADMIN

**Value space:** <On>

*On:* The built-in layout engine does only set layout on local outputs having a monitor connected.

**Example:** xConfiguration Video Layout DisableDisconnectedLocalOutputs: On

### xConfiguration Video Layout LocalLayoutFamily

Select which video layout family to use locally.

**Requires user role:** ADMIN

**Value space:** <Auto/FullScreen/Equal/PresentationSmallSpeaker/PresentationLargeSpeaker/Prominent/Overlay/Single>

*Auto:* The default layout family, as given in the layout database provided by the system, will be used as the local layout.

*FullScreen:* Do not use this value.

*Equal:* The Equal layout family will be used as the local layout. All videos have equal size, as long as there is space enough on the screen.

*PresentationSmallSpeaker:* Do not use this value.

*PresentationLargeSpeaker:* Do not use this value.

*Prominent:* The Prominent layout family will be used as the local layout. The active speaker, or the presentation if present, will be a large picture, while the other participants will be small pictures. Transitions between active speakers are voice switched.

*Overlay:* The Overlay layout family will be used as the local layout. The active speaker, or the presentation if present, will be shown in full screen, while the other participants will be small pictures-in-picture (PiP). Transitions between active speakers are voice switched.

*Single:* The active speaker, or the presentation if present, will be shown in full screen. The other participants are not shown. Transitions between active speakers are voice switched.

**Example:** xConfiguration Video Layout LocalLayoutFamily: Auto

### xConfiguration Video Layout PresentationDefault View

Determine how the presentation will show on screen when you start sharing a presentation.

**Requires user role:** ADMIN

**Value space:** <Default/Minimized/Maximized>

*Default:* The presentation is a part of the layout.

*Minimized:* The presentation starts up in PIP mode.

*Maximized:* The presentation starts up in full screen mode.

**Example:** xConfiguration Video Layout PresentationDefault View: Default

### xConfiguration Video Layout RemoteLayoutFamily

Select which video layout family to be used for the remote participants.

**Requires user role:** ADMIN

**Value space:** <Auto/FullScreen/Equal/PresentationSmallSpeaker/PresentationLargeSpeaker/Prominent/Overlay/Single>

*Auto:* The default layout family, as given by the local layout database, will be used as the remote layout.

*FullScreen:* Do not use this value.

*Equal:* The Equal layout family will be used as the remote layout. All videos have equal size, as long as there is space enough on the screen.

*PresentationSmallSpeaker:* Do not use this value.

*PresentationLargeSpeaker:* Do not use this value.

*Prominent:* The Prominent layout family will be used as the remote layout. The active speaker, or the presentation if present, will be a large picture, while the other participants will be small pictures. Transitions between active speakers are voice switched.

*Overlay:* The Overlay layout family will be used as the remote layout. The active speaker, or the presentation if present, will be shown in full screen, while the other participants will be small pictures-in-picture (PiP). Transitions between active speakers are voice switched.

*Single:* The active speaker, or the presentation if present, will be shown in full screen. The other participants are not shown. Transitions between active speakers are voice switched.

**Example:** xConfiguration Video Layout RemoteLayoutFamily: Auto

### xConfiguration Video Layout Scaling

Define how the system shall adjust the aspect ratio for images or frames when there is a difference between the image and the frame it is to be placed in.

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* No adjustment of the aspect ratio.

*On:* Let the system automatically adjust aspect ratio.

**Example:** `xConfiguration Video Layout Scaling: On`

### xConfiguration Video Layout ScaleToFrame

Define what to do if the aspect ratio of a video input source doesn't match the aspect ratio of the corresponding image frame in a composition. For example if you have a 4:3 input source (like XGA) to be displayed on a 16:9 output (like HD720).

**Requires user role:** ADMIN

**Value space:** <Manual/MaintainAspectRatio/StretchToFit>

*Manual:* If the difference in aspect ratio between the video input source and the target image frame is less than the Video Layout ScaleToFrameThreshold setting (in percent), the image is stretched to fit. If not, the system will maintain the original aspect ratio.

*MaintainAspectRatio:* Maintain the aspect ratio of the input source, and fill in black in the rest of the frame (letter boxing or pillar boxing).

*StretchToFit:* Stretch (horizontally or vertically) the input source to fit into the image frame. NOTE: The general limitation is that you cannot upscale in one direction and at the same time downscale in the other direction. In such situations the codec will apply letterboxing.

**Example:** `xConfiguration Video Layout ScaleToFrame: MaintainAspectRatio`

### xConfiguration Video Layout ScaleToFrameThreshold

Only applicable if the Video Layout ScaleToFrame setting is set to manual. If the difference in aspect ratio between the video input source and the target image frame is less than the ScaleToFrameThreshold setting (in percent), the image is stretched to fit. If not, the system will maintain the original aspect ratio.

**Requires user role:** ADMIN

**Value space:** <0..100>

*Range:* Select a value from 0 to 100 percent.

**Example:** `xConfiguration Video Layout ScaleToFrameThreshold: 5`

### xConfiguration Video PIP ActiveSpeaker DefaultValue Position

Determine the position on screen of the active speaker picture-in-picture (PiP). The setting only takes effect when using a video layout where the active speaker is a PiP, i.e. the Overlay layout, or possibly a Custom layout (see the Video Layout LocalLayoutFamily setting). The setting takes effect from the next call onwards; if changed during a call, it will have no effect on the current call.

**Requires user role:** ADMIN

**Value space:** <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

*Current:* The position of the active speaker PiP will be kept unchanged when leaving a call.

*UpperLeft:* The active speaker PiP will appear in the upper left corner of the screen.

*UpperCenter:* The active speaker PiP will appear in the upper center position.

*UpperRight:* The active speaker PiP will appear in the upper right corner of the screen.

*CenterLeft:* The active speaker PiP will appear in the center left position.

*CenterRight:* The active speaker PiP will appear in the center right position.

*LowerLeft:* The active speaker PiP will appear in the lower left corner of the screen.

*LowerRight:* The active speaker PiP will appear in the lower right corner of the screen.

**Example:** `xConfiguration Video PIP ActiveSpeaker DefaultValue Position: Current`

### xConfiguration Video PIP Presentation DefaultValue Position

Determine the position on screen of the presentation picture-in-picture (PiP). The setting only takes effect when the presentation is explicitly minimized to a PiP, for example using the Touch controller. The setting takes effect from the next call onwards; if changed during a call, it will have no effect on the current call.

**Requires user role:** ADMIN

**Value space:** <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

*Current:* The position of the presentation PiP will be kept unchanged when leaving a call.

*UpperLeft:* The presentation PiP will appear in the upper left corner of the screen.

*UpperCenter:* The presentation PiP will appear in the upper center position.

*UpperRight:* The presentation PiP will appear in the upper right corner of the screen.

*CenterLeft:* The presentation PiP will appear in the center left position.

*CenterRight:* The presentation PiP will appear in the center right position.

*LowerLeft:* The presentation PiP will appear in the lower left corner of the screen.

*LowerRight:* The presentation PiP will appear in the lower right corner of the screen.

**Example:** `xConfiguration Video PIP Presentation DefaultValue Position: Current`

### xConfiguration Video SelfviewDefault Mode

Determine if the main video source (self-view) shall be displayed on screen after a call. The position and size of the self-view window is determined by the Video SelfviewDefault PIPPosition and the Video SelfviewDefault FullscreenMode settings respectively.

**Requires user role:** ADMIN

**Value space:** <Off/Current/On>

*Off:* self-view is switched off when leaving a call.

*Current:* self-view is left as is, i.e. if it was on during the call, it remains on after the call; if it was off during the call, it remains off after the call.

*On:* self-view is switched on when leaving a call.

**Example:** `xConfiguration Video SelfviewDefault Mode: Current`

### xConfiguration Video SelfviewDefault FullscreenMode

Determine if the main video source (self-view) shall be shown in full screen or as a small picture-in-picture (PiP) after a call. The setting only takes effect when self-view is switched on (see the Video SelfviewDefault Mode setting).

**Requires user role:** ADMIN

**Value space:** <Off/Current/On>

*Off:* self-view will be shown as a PiP.

*Current:* The size of the self-view picture will be kept unchanged when leaving a call, i.e. if it was a PiP during the call, it remains a PiP after the call; if it was fullscreen during the call, it remains fullscreen after the call.

*On:* The self-view picture will be shown in fullscreen.

**Example:** `xConfiguration Video SelfviewDefault FullscreenMode: Current`

### xConfiguration Video SelfviewDefault PIPPosition

Determine the position on screen of the small self-view picture-in-picture (PiP) after a call. The setting only takes effect when self-view is switched on (see the Video SelfviewDefault Mode setting) and fullscreen view is switched off (see the Video SelfviewDefault FullscreenMode setting).

**Requires user role:** ADMIN

**Value space:** <Current/UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight >

*Current:* The position of the self-view PiP will be kept unchanged when leaving a call.

*UpperLeft:* The self-view PiP will appear in the upper left corner of the screen.

*UpperCenter:* The self-view PiP will appear in the upper center position.

*UpperRight:* The self-view PiP will appear in the upper right corner of the screen.

*CenterLeft:* The self-view PiP will appear in the center left position.

*CenterRight:* The self-view PiP will appear in the center right position.

*LowerLeft:* The self-view PiP will appear in the lower left corner of the screen.

*LowerRight:* The self-view PiP will appear in the lower right corner of the screen.

**Example:** `xConfiguration Video SelfviewDefault PIPPosition: Current`

### xConfiguration Video SelfviewDefault OnMonitorRole

Determine which monitor/output to display the main video source (self-view) on after a call. The value reflects the monitor roles set for the different outputs in the Video Output Connector [n] MonitorRole setting.

The setting applies both when self-view is displayed in full screen, and when it is displayed as picture-in-picture (PiP), but only if the Video Monitors setting is set to Dual or Triple.

**Requires user role:** ADMIN

**Value space:** <First/Second/Third/Current>

*First:* The self-view picture will be shown on outputs with the Video Output Connector [n] MonitorRole set to First.

*Second:* The self-view picture will be shown on outputs with the Video Output Connector [n] MonitorRole set to Second.

*Third:* The self-view picture will be shown on outputs with the Video Output Connector [n] MonitorRole set to Third.

*Current:* When leaving a call, the self-view picture will be kept on the same output as it was during the call.

**Example:** `xConfiguration Video SelfviewDefault OnMonitorRole: Current`

### xConfiguration Video Monitors

Set the monitor layout mode.

**Requires user role:** ADMIN

**Value space:** <Auto/Single/Dual/DualPresentationOnly/Triple>

*Auto:* The number of monitors connected to the codec is automatically detected. The layout will be distributed on the monitors according to the Video Output Connector [n] MonitorRole settings.

*Single:* The same layout is shown on all monitors.

*Dual:* The layout is distributed on two monitors.

*DualPresentationOnly:* All participants in the call will be shown on the first monitor, while the presentation (if any) will be shown on the second monitor.

*Triple:* The layout is distributed on three monitors, so that each remote participant and the presentation will be shown on separate monitors.

**Example:** `xConfiguration Video Monitors: Auto`

### xConfiguration Video OSD LanguageSelection

This has been replaced with the UserInterface OSD LanguageSelection setting.

### xConfiguration Video OSD EncryptionIndicator

This has been replaced with the UserInterface OSD EncryptionIndicator setting.

### xConfiguration Video OSD Output

This has been replaced with the UserInterface OSD Output setting.

### xConfiguration Video OSD LoginRequired

This has been replaced with the UserInterface OSD LoginRequired setting.

### xConfiguration Video Output Connector [1..2] CEC Mode

This video output (HDMI) supports Consumer Electronics Control (CEC). When this setting is On (default is Off), the system will use CEC to set the monitor in standby when the system itself enters standby. Likewise the system will wake up the monitor when the system itself wakes up from standby. The monitor connected to the HDMI output must be CEC compatible and CEC must be configured on the monitor for this to happen.

Note that the different manufacturers uses different marketing names for CEC, for example Anynet+ (Samsung); Aquos Link (Sharp); BRAVIA Sync (Sony); HDMI-CEC (Hitachi); Kuro Link (Pioneer); CE-Link and Regza Link (Toshiba); RIHD (Onkyo); HDAVI Control, EZ-Sync, VIERA Link (Panasonic); EasyLink (Philips); and NetCommand for HDMI (Mitsubishi).

**Requires user role:** ADMIN

**Value space:** <Off/On>

*Off:* Disable CEC control

*On:* Enable CEC control

**Example:** `xConfiguration Video Output Connector 1 CEC Mode: Off`

### xConfiguration Video Output Connector [1..3] Location HorizontalOffset

HorizontalOffset and VerticalOffset settings are associated with each video output. These settings are used to signal the relative position of the displays that are connected to these outputs.

HorizontalOffset = 0 and VerticalOffset = 0 indicates that the display is positioned in center, both horizontally and vertically. A negative horizontal offset indicates that the monitor is left of center, and a positive horizontal offset indicates that the monitor is right of center. A negative vertical offset indicates that the monitor is below center, and a positive vertical offset indicates that the monitor is above center. The magnitude of the offset indicates how far the display is from center (relative to other displays).

Example: You have three displays side by side, with the left and right displays at equal distance from center. Then the following settings will apply: HorizontalOffset = 0 for the center display, HorizontalOffset = -1 for the left display, and HorizontalOffset = 1 for the right display.

Example: You have two displays, one in center and one below. Then the following settings will apply: VerticalOffset = 0 for the center display, Vertical Offset = -1 for the lower display.

The default values for the different outputs are:

Video Output Connector [1] Location: HorizontalOffset = -1, VerticalOffset = 0

Video Output Connector [2] Location: HorizontalOffset = 0, VerticalOffset = 0

Video Output Connector [3] Location: HorizontalOffset = 1, VerticalOffset = 0

**Requires user role:** ADMIN

**Value space:** <-100..100>

*Range:* The value must be between -100 and 100.

**Example:** `xConfiguration Video Output Connector 2 Location HorizontalOffset: -1`

### xConfiguration Video Output Connector [1..3] Location VerticalOffset

HorizontalOffset and VerticalOffset settings are associated with each video output. These settings are used to signal the relative position of the displays that are connected to these outputs.

HorizontalOffset = 0 and VerticalOffset = 0 indicates that the display is positioned in center, both horizontally and vertically. A negative horizontal offset indicates that the monitor is left of center, and a positive horizontal offset indicates that the monitor is right of center. A negative vertical offset indicates that the monitor is below center, and a positive vertical offset indicates that the monitor is above center. The magnitude of the offset indicates how far the display is from center (relative to other displays).

Example: You have three displays side by side, with the left and right displays at equal distance from center. Then the following settings will apply: HorizontalOffset = 0 for the center display, HorizontalOffset = -1 for the left display, and HorizontalOffset = 1 for the right display.

Example: You have two displays, one in center and one below. Then the following settings will apply: VerticalOffset = 0 for the center display, Vertical Offset = -1 for the lower display.

The default values for the different outputs are:

Video Output Connector [1] Location: HorizontalOffset = -1, VerticalOffset = 0

Video Output Connector [2] Location: HorizontalOffset = 0, VerticalOffset = 0

Video Output Connector [3] Location: HorizontalOffset = 1, VerticalOffset = 0

**Requires user role:** ADMIN

**Value space:** <-100..100>

*Range:* The value must be between -100 and 100.

**Example:** xConfiguration Video Output Connector 2 Location Vertical Offset: 0

### xConfiguration Video Output Connector [1..3] RGBQuantizationRange

Devices connected to an HDMI output should follow the rules for RGB video quantization range defined in CEA-861. Unfortunately some devices do not follow the standard and this configuration may be used to override the settings to get a perfect image with any display. The default value is set to Full because most HDMI displays expects full quantization range.

**Requires user role:** ADMIN

**Value space:** <Auto/Full/Limited>

*Auto:* RGB quantization range is automatically selected based on the RGB Quantization Range bits (Q0, Q1) in the AVI infoframe. If no AVI infoframe is available, RGB quantization range is selected based on video format according to CEA-861-E.

*Full:* Full quantization range. The R, G, B quantization range includes all code values (0 - 255). This is defined in CEA-861-E.

*Limited:* Limited Quantization Range. R, G, B quantization range that excludes some code values at the extremes (16 - 235). This is defined in CEA-861-E.

**Example:** xConfiguration Video Output Connector 1 RGBQuantizationRange: Full

### xConfiguration Video Output Connector [1..3] Resolution

Set the resolution and refresh rate for the connected screen.

**Requires user role:** ADMIN

**Value space:** <Auto/640\_480\_60/800\_600\_60/1024\_768\_60/1280\_1024\_60/1280\_720\_50/1280\_720\_60/1920\_1080\_50/1920\_1080\_60/1280\_768\_60/1360\_768\_60/1366\_768\_60/1600\_1200\_60/1680\_1050\_60/1920\_1200\_60>

*Auto:* The system will automatically try to set the optimal resolution based on negotiation with the connected monitor.

*640\_480\_60:* The resolution is 640 x 480, and the refresh rate is 60 Hz.

*800\_600\_60:* The resolution is 800 x 600, and the refresh rate is 60 Hz.

*1024\_768\_60:* The resolution is 1024 x 768, and the refresh rate is 60 Hz.

*1280\_1024\_60:* The resolution is 1280 x 1024, and the refresh rate is 60 Hz.

*1280\_720\_50:* The resolution is 1280 x 720, and the refresh rate is 50 Hz.

*1280\_720\_60:* The resolution is 1280 x 720, and the refresh rate is 60 Hz.

*1920\_1080\_50:* The resolution is 1920 x 1080, and the refresh rate is 50 Hz.

*1920\_1080\_60:* The resolution is 1920 x 1080, and the refresh rate is 60 Hz.

*1280\_768\_60:* The resolution is 1280 x 768, and the refresh rate is 60 Hz.

*1360\_768\_60:* The resolution is 1360 x 768, and the refresh rate is 60 Hz.

*1366\_768\_60:* The resolution is 1366 x 768, and the refresh rate is 60 Hz.

*1600\_1200\_60:* The resolution is 1600 x 1200, and the refresh rate is 60 Hz.

*1680\_1050\_60:* The resolution is 1680 x 1050, and the refresh rate is 60 Hz.

*1920\_1200\_60:* The resolution is 1920 x 1200, and the refresh rate is 60 Hz.

**Example:** xConfiguration Video Output Connector 2 Resolution: Auto

### xConfiguration Video Output Connector [1..3] MonitorRole

The monitor role describes which video stream will be shown on the monitor that is connected to the video output connector.

**Requires user role:** ADMIN

**Value space:** <Auto/First/Second/PresentationOnly/Third>

*Auto:* The system will detect when a monitor is connected and assign a monitor role to it. The first monitor connected will be assigned monitor role First. In a multi-monitor setup the next monitors will be assigned monitor role Second and Third.

*First/Second/Third:* Define the role of the monitor in a multi-monitor setup. In a single-monitor setup, there is no difference between First, Second and Third.

*PresentationOnly:* Show presentation video stream if active, and nothing else.

**Example:** xConfiguration Video Output Connector 1 MonitorRole: First

### xConfiguration Video Wallpaper

This has been replaced with the UserInterface Wallpaper setting.

## Experimental configuration

The Experimental settings are for testing only and should not be used unless agreed with Cisco. These settings are not documented and WILL change in later releases.



Chapter 4

*xCommand commands*

## Description of the xCommand commands

In this chapter, you can find a complete list of all xCommand type commands with parameters.

We recommend you visit our web site regularly for updated versions of the manual.

Go to: <http://www.cisco.com/go/sx-docs>

<b>Audio commands</b> .....	<b>78</b>	xCommand Audio SoundsAndAlerts Ringtone List .....	85
xCommand Audio Equalizer List.....	78	xCommand Audio SoundsAndAlerts Ringtone Play .....	86
xCommand Audio Equalizer Update.....	78	xCommand Audio Volume Decrease .....	86
xCommand Audio Microphones Mute.....	79	xCommand Audio Volume Increase .....	86
xCommand Audio Microphones Unmute .....	79	xCommand Audio Volume Mute.....	86
xCommand Audio LocalInput Add.....	79	xCommand Audio Volume Set .....	86
xCommand Audio LocalInput Update .....	80	xCommand Audio Volume SetToDefault .....	86
xCommand Audio LocalInput Remove.....	80	xCommand Audio Volume UnMute .....	86
xCommand Audio LocalInput AddConnector .....	80		
xCommand Audio LocalInput RemoveConnector.....	81	<b>Bookings commands</b> .....	<b>87</b>
xCommand Audio LocalOutput Add.....	81	xCommand Bookings List .....	87
xCommand Audio LocalOutput Update .....	82	xCommand Bookings Clear.....	88
xCommand Audio LocalOutput Remove.....	82		
xCommand Audio LocalOutput AddConnector .....	82	<b>Boot commands</b> .....	<b>88</b>
xCommand Audio LocalOutput RemoveConnector.....	82	xCommand Boot.....	88
xCommand Audio LocalOutput ConnectInput .....	83		
xCommand Audio LocalOutput UpdateInputGain .....	83	<b>Call commands</b> .....	<b>89</b>
xCommand Audio LocalOutput DisconnectInput .....	83	xCommand Call Accept.....	89
xCommand Audio RemoteOutput ConnectInput .....	83	xCommand Call Reject.....	89
xCommand Audio RemoteOutput UpdateInputGain .....	84	xCommand Call Disconnect.....	89
xCommand Audio RemoteOutput DisconnectInput .....	84	xCommand Call DisconnectAll.....	89
xCommand Audio Setup Clear.....	84	xCommand Call Hold.....	89
xCommand Audio Sound Play.....	84	xCommand Call Join .....	90
xCommand Audio Sound Stop.....	84	xCommand Call Resume.....	90
xCommand Audio VUMeter Start.....	85	xCommand Call UnattendedTransfer .....	90
xCommand Audio VUMeter Stop.....	85	xCommand Call HoldAll.....	90
xCommand Audio VUMeter StopAll .....	85	xCommand Call Ignore.....	90

<b>CallHistory commands</b> .....	<b>91</b>	<b>Dial commands</b> .....	<b>98</b>
xCommand CallHistory AcknowledgeAllMissedCalls .....	91	xCommand Dial .....	98
xCommand CallHistory AcknowledgeMissedCall .....	91		
xCommand CallHistory DeleteAll .....	91	<b>DTMFSend commands</b> .....	<b>99</b>
xCommand CallHistory DeleteEntry .....	91	xCommand DTMFSend .....	99
xCommand CallHistory Get .....	92		
xCommand CallHistory Recents .....	92	<b>FacilityService commands</b> .....	<b>99</b>
		xCommand FacilityService Dial.....	99
<b>CallLog commands</b> .....	<b>93</b>		
xCommand CallLog Clear .....	93	<b>FarEndControl commands</b> .....	<b>100</b>
xCommand CallLog Recent Delete .....	93	xCommand FarEndControl Camera Move .....	100
xCommand CallLog Outgoing Delete.....	93	xCommand FarEndControl Camera Stop.....	100
xCommand CallLog Received Delete .....	93	xCommand FarEndControl Preset Activate.....	100
xCommand CallLog Missed Delete.....	93	xCommand FarEndControl Preset Store.....	101
xCommand CallLog Missed Dismiss.....	93	xCommand FarEndControl Source Select.....	101
<b>CamCtrlPip commands</b> .....	<b>93</b>	<b>GPIO commands</b> .....	<b>101</b>
xCommand CamCtrlPip.....	93	xCommand GPIO ManualState Set .....	101
<b>Camera commands</b> .....	<b>94</b>	<b>HttpFeedback commands</b> .....	<b>102</b>
xCommand Camera PanTiltReset .....	94	xCommand HttpFeedback Register .....	102
xCommand Camera PositionReset .....	94	xCommand HttpFeedback Deregister .....	102
xCommand Camera PositionSet .....	94		
xCommand Camera Ramp .....	95	<b>Key commands</b> .....	<b>102</b>
xCommand Camera ReconfigureCameraChain.....	95	xCommand Key Click .....	102
xCommand Camera TriggerAutofocus.....	95	xCommand Key Press .....	102
xCommand Camera PositionActivateFromPreset.....	95	xCommand Key Release .....	102
xCommand Camera Preset Activate.....	96		
xCommand Camera Preset Edit.....	96	<b>Logging commands</b> .....	<b>103</b>
xCommand Camera Preset List .....	96	xCommand Logging ExtendedLogging Start.....	103
xCommand Camera Preset Remove.....	96	xCommand Logging ExtendedLogging Stop .....	103
xCommand Camera Preset Store .....	97		
		<b>Message commands</b> .....	<b>103</b>
<b>Conference commands</b> .....	<b>97</b>	xCommand Message Alert Display .....	103
xCommand Conference DoNotDisturb Activate .....	97	xCommand Message Alert Clear .....	103
xCommand Conference DoNotDisturb Deactivate .....	97	xCommand Message TextLine Display .....	104
xCommand Conference ActiveSpeaker Reset .....	97	xCommand Message TextLine Clear .....	104
xCommand Conference ActiveSpeaker Set .....	98	xCommand Message Prompt Display .....	104

xCommand Message Prompt Clear.....	105	<b>Standby commands.....</b>	<b>115</b>
xCommand Message Prompt Response .....	105	xCommand Standby Activate.....	115
xCommand Message Echo .....	105	xCommand Standby Deactivate.....	115
xCommand Message FarendMessage .....	105	xCommand Standby ResetTimer.....	115
<b>Phonebook commands.....</b>	<b>106</b>	<b>SystemUnit commands.....</b>	<b>115</b>
xCommand Phonebook Folder Add.....	106	xCommand SystemUnit OptionKey Add .....	115
xCommand Phonebook Folder Modify .....	106	xCommand SystemUnit OptionKey RemoveAll.....	115
xCommand Phonebook Folder Delete .....	106	xCommand SystemUnit AdminPassword Set.....	115
xCommand Phonebook Contact Add .....	107	xCommand SystemUnit Diagnostics Run.....	116
xCommand Phonebook Contact Modify.....	107	xCommand SystemUnit DateTime Set.....	116
xCommand Phonebook Contact Delete.....	108	xCommand SystemUnit DateTime Get.....	116
xCommand Phonebook ContactMethod Add .....	108	xCommand SystemUnit FactoryReset .....	116
xCommand Phonebook ContactMethod Modify.....	109	xCommand SystemUnit SoftwareUpgrade.....	117
xCommand Phonebook ContactMethod Delete .....	109	xCommand SystemUnit ConfigurationProfile Change.....	117
xCommand Phonebook Search .....	110	xCommand SystemUnit ConfigurationProfile Remove .....	117
<b>Presentation commands.....</b>	<b>111</b>	xCommand SystemUnit ConfigurationProfile SaveCurrentConfigurationAs .....	117
xCommand Presentation Start .....	111	xCommand SystemUnit ConfigurationProfile List.....	117
xCommand Presentation Stop .....	111	xCommand SystemUnit ConfigurationProfile CancelChange.....	117
<b>Preset commands.....</b>	<b>111</b>	xCommand SystemUnit Notifications RemoveAll .....	118
xCommand Preset Store.....	111	<b>UserInterface commands .....</b>	<b>118</b>
xCommand Preset Activate.....	111	xCommand UserInterface ScreenShot Get .....	118
xCommand Preset Clear .....	112	xCommand UserInterface ScreenShot List .....	118
<b>Provisioning commands .....</b>	<b>112</b>	xCommand UserInterface ScreenShot Remove .....	118
xCommand Provisioning StartUpgrade.....	112	xCommand UserInterface ScreenShot Store .....	119
xCommand Provisioning CompleteUpgrade.....	112	xCommand UserInterface OSD Close .....	119
xCommand Provisioning PostponeUpgrade .....	112	<b>UserManagement commands.....</b>	<b>119</b>
xCommand Provisioning CUCM CAPF OperationStart.....	113	xCommand UserManagement RemoteSupportUser Create .....	119
xCommand Provisioning CUCM CTL Delete.....	113	xCommand UserManagement RemoteSupportUser Delete.....	119
xCommand Provisioning CUCM ExtensionMobility Login.....	113	xCommand UserManagement RemoteSupportUser DisablePermanently .....	120
xCommand Provisioning CUCM ExtensionMobility Logout .....	113	xCommand UserManagement RemoteSupportUser GetState .....	120
<b>Security commands.....</b>	<b>114</b>	<b>Video commands.....</b>	<b>120</b>
xCommand Security FIPSMODE Activate .....	114	xCommand Video AutoPresentationStart Disable .....	120
xCommand Security Persistency.....	114	xCommand Video AutoPresentationStart Enable .....	120
		xCommand Video Input SetMainVideoSource.....	121

xCommand Video Input Source SetActiveConnector .....	121	xCommand Video Layout UnAssignCall .....	126
xCommand Video PictureLayoutSet .....	121	xCommand Video Layout UnAssignPresentation .....	126
xCommand Video Layout Add .....	121	xCommand Video Layout SetPresentationView .....	126
xCommand Video Layout Remove.....	122	xCommand Video Layout LoadDb .....	126
xCommand Video Layout RemoveAll.....	122	xCommand Video Layout Frame List .....	126
xCommand Video Layout Reset.....	122	xCommand Video Layout List .....	127
xCommand Video Layout Frame Add .....	122	xCommand Video OSD Close .....	127
xCommand Video Layout Frame Remove.....	123	xCommand Video PIP ActiveSpeaker Set.....	127
xCommand Video Layout Frame Update .....	123	xCommand Video PIP Presentation Set.....	127
xCommand Video Layout Assign .....	124	xCommand Video Selfview Set.....	128
xCommand Video Layout AssignLocalOutput .....	124	xCommand Video PIP Presentation Set.....	128
xCommand Video Layout AssignCall.....	125	xCommand Video PreviewFilmstrip Set.....	128
xCommand Video Layout AssignPresentation.....	125	<b>Experimental commands .....</b>	<b>129</b>
xCommand Video Layout UnAssign .....	125		
xCommand Video Layout UnAssignLocalOutput.....	125		

## Audio commands

### xCommand Audio Equalizer List

Shows the current equalizer settings for the codec.

**Requires user role:** ADMIN

**Parameters:**

EqualizerId: <1..8>

**Example:**

```
xCommand Audio Equalizer List EqualizerId: 1
*r AudioEqualizerListResult Equalizer 1 Section 1 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 1 Frequency: "100"
*r AudioEqualizerListResult Equalizer 1 Section 1 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 1 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 2 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 2 Frequency: "200"
*r AudioEqualizerListResult Equalizer 1 Section 2 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 2 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 3 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 3 Frequency: "500"
*r AudioEqualizerListResult Equalizer 1 Section 3 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 3 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 4 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 4 Frequency: "1000"
*r AudioEqualizerListResult Equalizer 1 Section 4 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 4 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 5 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 5 Frequency: "2000"
*r AudioEqualizerListResult Equalizer 1 Section 5 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 5 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 6 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 6 Frequency: "5000"
*r AudioEqualizerListResult Equalizer 1 Section 6 Q: "0"
*r AudioEqualizerListResult Equalizer 1 Section 6 Gain: "0"
** end
```

### xCommand Audio Equalizer Update

The system has eight user defined equalizers, each made up of six second order IIR sections. Each of the eight equalizers can be applied to one or more of the audio input and output connectors on the codec. Each IIR section can be modified independently.

There are five filter types, and the frequency response variations dependent on some of the parameter variations. The Q-value for low pass, high pass, low shelf and high shelf filters should be set to  $1/\sqrt{2}$  in order to get maximally flat responses. The Q-value (or Q-factor) is defined as  $Q=f_0/bw$ . Where  $f_0$ =resonance frequency in Hz; and  $bw$ =filter bandwidth in Hz.

To switch off one of the six equalizer sections; set the second order section to have a flat frequency response. This can be done by setting the filter type to "none" or by setting the filter type to "peaking" and the gain to "0" (zero).

We recommend using the TC Console tool, with the embedded equalizer GUI, to modify the equalizers. The TC Console software is found on the Developer Zone web page. Go to: <http://developer.cisco.com/web/telepresence-developer/tools/integrators/tc-console>.

**Requires user role:** ADMIN

**Parameters:**

EqualizerId(r): <1..8>

Section(r): <1..6>

FilterType(r): <highpass/highshelf/lowpass/lowshelf/none/peaking>

Frequency(r): <S: 0, 32>

Q(r): <S: 0, 32>

Gain(r): <S: 0, 32>

**Example:**

```
xCommand Audio Equalizer List EqualizerId: 1 Section: 1 FilterType:
Peaking Frequency: "100" Q: "4" Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 1 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 1 Frequency: "100"
*r AudioEqualizerListResult Equalizer 1 Section 1 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 1 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 2 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 2 Frequency: "200"
*r AudioEqualizerListResult Equalizer 1 Section 2 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 2 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 3 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 3 Frequency: "500"
*r AudioEqualizerListResult Equalizer 1 Section 3 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 3 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 4 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 4 Frequency: "1000"
```

```
*r AudioEqualizerListResult Equalizer 1 Section 4 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 4 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 5 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 5 Frequency: "2000"
*r AudioEqualizerListResult Equalizer 1 Section 5 Q: "4"
*r AudioEqualizerListResult Equalizer 1 Section 5 Gain: "0"
*r AudioEqualizerListResult Equalizer 1 Section 6 FilterType: "Peaking"
*r AudioEqualizerListResult Equalizer 1 Section 6 Frequency: "5000"
*r AudioEqualizerListResult Equalizer 1 Section 6 Q: "0"
*r AudioEqualizerListResult Equalizer 1 Section 6 Gain: "0"
** end
```

#### xCommand Audio Microphones Mute

Mute all microphones.

**Requires user role:** USER

**Example:**

```
xCommand Audio Microphones Mute
*r AudioMicrophonesMuteResult (status=OK):
** end
```

#### xCommand Audio Microphones Unmute

Unmute microphones.

**Requires user role:** USER

**Example:**

```
xCommand Audio Microphones Unmute
*r AudioMicrophonesUnmuteResult (status=OK):
** end
```

#### xCommand Audio LocalInput Add

Create a local input and generate the local input id. A local input is a mix of input connectors with the following settings: Name, MixerMode, AGC, Mute and Channels.

**InputId:** A unique identifier for the local input.

**Name:** Choose a name that describes the mix of input connectors.

**MixerMode Auto:** The microphone with the strongest speaker is active and the others are strongly attenuated.

**MixerMode Fixed:** The input connector signals are mixed together with equal gains.

**MixerMode GainShared:** The microphones are given a normalized gain factor relative to the strongest speaker before being mixed together.

**AGC:** Automatic Gain Control.

**Mute:** Mutes the mix of input connectors.

**Channels:** Set channels to 1 to mix the input connectors into a mono signal. To mix the input connectors into a stereo signal, set channels to 2.

**Requires user role:** ADMIN

**Parameters:**

```
InputId: <0..65534>
Name: <S: 0, 255>
MixerMode: <Auto/Fixed/GainShared>
AGC: <On/Off>
Mute: <On/Off>
Channels: <1..2>
```

**Example:**

```
xCommand Audio LocalInput Add
OK
*r AudioInputGroupAddResult (status=OK):
InputId: 2
** end
```

### xCommand Audio LocalInput Update

Update the settings of the local input given by the input ID.

InputId: A unique identifier for the local input.

Name: Choose a name that describes the mix of input connectors.

MixerMode Auto: The microphone with the strongest speaker is active and the others are strongly attenuated.

MixerMode Fixed: The input connector signals are mixed together with equal gains.

MixerMode GainShared: The microphones are given a normalized gain factor relative to the strongest speaker before being mixed together.

AGC: Automatic Gain Control.

Mute: Mutes the mix of input connectors.

Channels: Set channels to 1 to mix the input connectors into a mono signal. To mix the input connectors into a stereo signal, set channels to 2.

**Requires user role:** ADMIN

**Parameters:**

InputId(r): <0..65534>  
 Name(r): <S: 0, 255>  
 MixerMode(r): <Auto/Fixed/GainShared>  
 AGC(r): <On/Off>  
 Mute(r): <On/Off>  
 Channels(r): <1..2>

**Example:**

```
xCommand Audio LocalInput Update InputId: 2 Name: "Microphone" MixerMode:
GainShared AGC: Off Mute: Off Channels: 1
OK
*r AudioInputGroupUpdateResult (status=OK):
** end
```

### xCommand Audio LocalInput Remove

Remove the local input given by the input ID.

InputId: A unique identifier for the local input.

**Requires user role:** ADMIN

**Parameters:**

InputId(r): <0..65534>

**Example:**

```
xCommand Audio LocalInput Remove InputID: 2
OK
*r AudioInputGroupRemoveResult (status=OK):
** end
```

### xCommand Audio LocalInput AddConnector

Attach an input connector to the local input given by the input ID. A connector is defined by its type and ID.

InputId: A unique identifier for the local input.

ConnectorType: Select the connector type.

ConnectorId: Select a connector.

**Requires user role:** ADMIN

**Parameters:**

InputId(r): <0..65534>  
 ConnectorType(r): <HDMI/Line/Microphone>  
 ConnectorId(r): <1..8>

**Example:**

```
xCommand Audio LocalInput AddConnector InputId: 3 ConnectorType: Line
ConnectorId: 1
OK
*r AudioInputGroupAddConnectorResult (status=OK):
** end
```



### xCommand Audio LocalInput RemoveConnector

Detach an input connector from the local input given by the input ID. A connector is defined by its type and ID.

InputId: A unique identifier for the local input.

ConnectorType: Select the connector type.

ConnectorId: Select the connector.

**Requires user role:** ADMIN

#### Parameters:

InputId(r): <0..65534>

ConnectorType(r): <HDMI/Line/Microphone>

ConnectorId(r): <1..8>

#### Example:

```
xCommand Audio LocalInput RemoveConnector InputId: 3 ConnectorType: Line
ConnectorId: 1
OK
*r AudioInputGroupRemoveConnectorResult (status=OK):
** end
```

### xCommand Audio LocalOutput Add

Create a local output and generate the local output id. A local output is a mix of local input and remote input signals. All connectors attached to the local output receive the same signal.

OutputId: A unique identifier for the local output.

Name: Choose a name that describes the local output.

Loudspeaker: If one or more of the output connectors are connected to a loudspeaker, this signal should be a reference signal to the echo canceler. Hence set loudspeaker to On. NOTE: When microphone reinforcement is disabled there should only be one loudspeaker local output.

Channels: Set channels to 1 to mix the local and remote inputs into a mono signal. To mix the inputs into a stereo signal, set channels to 2.

**Requires user role:** ADMIN

#### Parameters:

OutputId: <0..65534>

Name: <S: 0, 255>

Loudspeaker: <On/Off>

Channels: <1..2>

#### Example:

```
xCommand Audio LocalOutput Add
OK
*r AudioOutputGroupAddResult (status=OK):
OutputId: 47
** end
```

### xCommand Audio LocalOutput Update

Update the settings of the local output given by the output ID.

OutputId: A unique identifier for the local output.

Name: Choose a name that describes the local output.

Loudspeaker: If one or more of the output connectors are connected to a loudspeaker, this signal should be a reference signal to the echo canceler. Hence set loudspeaker to On. NOTE: When microphone reinforcement is disabled there should only be one loudspeaker local output.

Channels: Set channels to 1 to mix the local and remote inputs into a mono signal. To mix the inputs into a stereo signal, set channels to 2.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>  
 Name(r): <S: 0, 255>  
 Loudspeaker(r): <On/Off>  
 Channels(r): <1..2>

**Example:**

```
xCommand Audio LocalOutput Update OutputId: 5 Name: "Loudspeaker"
Loudspeaker: On Channels: 2
OK
*r AudioOutputGroupUpdateResult (status=OK):
** end
```

### xCommand Audio LocalOutput Remove

Remove the local output given by the output ID.

OutputId: A unique identifier for the local output.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

**Example:**

```
xCommand Audio LocalOutput Remove OutputId: 6
OK
*r AudioOutputGroupRemoveResult (status=OK):
** end
```

### xCommand Audio LocalOutput AddConnector

Attach an output connector to the local output given by the output ID. A connector is defined by its type and ID.

OutputId: A unique identifier for the local output.

ConnectorType: Select the connector type.

ConnectorId: Select a connector.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>  
 ConnectorType(r): <HDMI/Line>  
 ConnectorId(r): <1..8>

**Example:**

```
xCommand Audio LocalOutput AddConnector OutputId:5 ConnectorType: Line
ConnectorId:1
OK
*r AudioOutputGroupAddConnectorResult (status=OK):
** end
```

### xCommand Audio LocalOutput RemoveConnector

Detach an output connector from the local output given by the output ID. A connector is defined by its type and ID.

OutputId: A unique identifier for the local output.

ConnectorType: Select the connector type.

ConnectorId: Select the connector.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>  
 ConnectorType(r): <HDMI/Line>  
 ConnectorId(r): <1..8>

**Example:**

```
xCommand Audio LocalOutput RemoveConnector OutputId:5 ConnectorType: Line
ConnectorId:1
OK
*r AudioOutputGroupRemoveConnectorResult (status=OK):
** end
```

### xCommand Audio LocalOutput ConnectInput

Connect a local or remote input to a local output by giving their IDs as parameters.

OutputId: A unique identifier for the local output.

InputId: A unique identifier for the local input.

InputGain: Set a gain on the input signal in the range from -54dB to 15dB. The value -54dB equals Off.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

InputId(r): <0..65534>

InputGain: <-54..15>

**Example:**

```
xCommand Audio LocalOutput ConnectInput OutputId:6 InputId:3
OK
*r AudioOutputGroupConnectInputResult (status=OK):
** end
```

### xCommand Audio LocalOutput UpdateInputGain

Update the gain of a local or remote input connected to a local output. The gain on the input signal is in the range from -54dB to 15dB. The value -54dB equals Off.

OutputId: A unique identifier for the local output.

InputId: A unique identifier for the local input.

InputGain: Set a gain on the input signal in the range from -54dB to 15dB. The value -54dB equals Off.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

InputId(r): <0..65534>

InputGain: <-54..15>

**Example:**

```
xCommand Audio LocalOutput UpdateInputGain OutputId:6 InputId:3
OK
*r AudioOutputGroupUpdateInputGainResult (status=OK):
** end
```

### xCommand Audio LocalOutput DisconnectInput

Disconnect a local or remote input from a local output.

OutputId: A unique identifier for the local output.

InputId: A unique identifier for the local or remote input.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

InputId(r): <0..65534>

**Example:**

```
xCommand Audio LocalOutput DisconnectInput OutputId:6 InputId:3
OK
*r AudioOutputGroupDisconnectInputResult (status=OK):
** end
```

### xCommand Audio RemoteOutput ConnectInput

Connect a local or remote input to a remote output with their IDs as parameters. When a call is made a remote input and remote output pair is created.

OutputId: A unique identifier for the local output.

InputId: A unique identifier for the local or remote input.

InputGain: Set a gain on the input signal in the range from -54dB to 15dB. The value -54dB equals Off.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

InputId(r): <0..65534>

InputGain: <-54..15>

**Example:**

```
xCommand Audio RemoteOutput ConnectInput OutputId:10 InputId:8
OK
*r AudioRemoteOutputGroupConnectInputResult (status=OK):
** end
```

### xCommand Audio RemoteOutput UpdateInputGain

Update the gain of a local or remote input connected to a remote output.

OutputId: A unique identifier for the local output.

InputId: A unique identifier for the local or remote input.

InputGain: Set a gain on the input signal in the range from -54dB to 15dB. The value -54dB equals Off.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

InputId(r): <0..65534>

InputGain: <-54..15>

**Example:**

```
xCommand Audio RemoteOutput UpdateInputGain OutputId:6 InputId:3
OK
*r AudioRemoteOutputGroupUpdateInputGainResult (status=OK):
** end
```

### xCommand Audio RemoteOutput DisconnectInput

Disconnect a local or remote input from a remote output with their IDs as parameters.

OutputId: A unique identifier for the local output.

InputId: A unique identifier for the local or remote input.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

InputId(r): <0..65534>

**Example:**

```
xCommand Audio RemoteOutput DisconnectInput OutputId:10 InputId:8
OK
*r AudioRemoteOutputGroupDisconnectInputResult (status=OK):
** end
```

### xCommand Audio Setup Clear

Remove all local inputs and local outputs.

**Requires user role:** ADMIN

**Example:**

```
xCommand Audio Setup Clear
*r AudioSetupClearResult (status=OK):
** end
```

### xCommand Audio Sound Play

Play a specified audio sound.

**Requires user role:** USER

**Parameters:**

Sound(r): <Bump/Busy/CallDisconnect/CallInitiate/CallWaiting/Dial/KeyInput/KeyTone/Nav/NavBack/Notification/OK/PresentationConnect/Ringing/SpecialInfo/TelephoneCall/VideoCall/Volume>

Loop: <On/Off>

**Example:**

```
xCommand Audio Sound Play Sound: Ringing
*r AudioSoundPlayResult (status=OK):
** end
```

### xCommand Audio Sound Stop

Stop playing audio sound.

**Requires user role:** USER

**Example:**

```
xCommand Audio Sound Stop
*r AudioSoundStopResult (status=OK):
** end
```

### xCommand Audio VUMeter Start

Start collecting VU meter information for the connector identified by the ConnectorId and ConnectorType parameters. Together these parameters identify the connector.

ConnectorId: The connector identifier is printed on the codec connector panel.

ConnectorType: Identifies whether it is an HDMI input connector, an audio line input connector or a microphone connector.

**Requires user role:** USER

**Parameters:**

ConnectorType(r): <HDMI/Line/Microphone>

ConnectorId(r): <1..8>

**Example:**

```
xCommand Audio VUMeter Start ConnectorType: Microphone ConnectorId: 1
*r AudioVumeterStartResult (status=OK):
** end
```

### xCommand Audio VUMeter Stop

Stop collecting VU meter information for the connector identified by the ConnectorId and ConnectorType parameters. Together these parameters uniquely identify the connector.

ConnectorId: The connector identifier is printed on the codec connector panel.

ConnectorType: Identifies whether it is an HDMI input connector, an audio line input connector or a microphone connector.

**Requires user role:** USER

**Parameters:**

ConnectorType(r): <HDMI/Line/Microphone>

ConnectorId(r): <1..8>

**Example:**

```
xCommand Audio VUMeter Stop ConnectorType: Microphone ConnectorId: 1
*r AudioVumeterStopResult (status=OK):
** end
```

### xCommand Audio VUMeter StopAll

Stop collecting VU meter information for all connectors.

**Requires user role:** USER

**Example:**

```
xCommand Audio VUMeter StopAll
*r AudioVumeterStopResult (status=OK):
** end
```

### xCommand Audio SoundsAndAlerts Ringtone List

Lists all available ringtones that can be configured using xConfiguration Audio SoundsAndAlerts RingTone.

**Requires user role:** USER

**Example:**

```
xCommand Audio SoundsAndAlerts Ringtone List
*r AudioRingtoneListResult Ringtone 1 Id: "Sunrise"
*r AudioRingtoneListResult Ringtone 2 Id: "Mischief"
*r AudioRingtoneListResult Ringtone 3 Id: "Ripples"
*r AudioRingtoneListResult Ringtone 4 Id: "Reflections"
*r AudioRingtoneListResult Ringtone 5 Id: "Vibes"
*r AudioRingtoneListResult Ringtone 6 Id: "Delight"
*r AudioRingtoneListResult Ringtone 7 Id: "Evolve"
*r AudioRingtoneListResult Ringtone 8 Id: "Playful"
*r AudioRingtoneListResult Ringtone 9 Id: "Ascent"
*r AudioRingtoneListResult Ringtone 10 Id: "Calculation"
*r AudioRingtoneListResult Ringtone 11 Id: "Mellow"
*r AudioRingtoneListResult Ringtone 12 Id: "Ringer"
** end
```

### xCommand Audio SoundsAndAlerts Ringtone Play

Play one of the available ringtones. To get a list of the available ringtones use the command xCommand Audio SoundsAndAlerts Ringtone List.

**Requires user role:** USER

**Parameters:**

RingTone(r): <S: 1, 100>

**Example:**

```
xCommand Audio SoundsAndAlerts Ringtone Play RingTone: Sunrise
```

```
OK
*r AudioRingtonePlayResult (status=OK):
** end
```

### xCommand Audio Volume Decrease

Decrease the volume on the endpoint.

**Requires user role:** USER

**Parameters:**

Steps: <1..10>

**Example:**

```
xCommand Audio Volume Decrease Steps:3
*r AudioVolumeDecreaseResult (status=OK):
** end
```

### xCommand Audio Volume Increase

Increase the volume on the endpoint.

**Requires user role:** USER

**Parameters:**

Steps: <1..10>

**Example:**

```
xCommand Audio Volume Increase Steps:3
*r AudioVolumeIncreaseResult (status=OK):
** end
```

### xCommand Audio Volume Mute

Mute the volume on the endpoint.

**Requires user role:** USER

**Example:**

```
xCommand Audio Volume Mute
*r AudioVolumeMuteResult (status=OK):
** end
```

### xCommand Audio Volume Set

Set the volume on the endpoint to a specified level.

**Requires user role:** USER

**Parameters:**

Level(r): <1..100>

**Example:**

```
xCommand Audio Volume Set Level:30
*r AudioVolumeSetResult (status=OK):
** end
```

### xCommand Audio Volume SetToDefault

Set the current volume level as the default for the endpoint.

**Requires user role:** USER

**Example:**

```
xCommand Audio Volume SetToDefault
*r AudioVolumeSetToDefaultResult (status=OK):
** end
```

### xCommand Audio Volume UnMute

Unmute the volume on the endpoint.

**Requires user role:** USER

**Example:**

```
xCommand Audio Volume SetToDefault
*r AudioVolumeSetToDefaultResult (status=OK):
** end
```

## Bookings commands

### xCommand Bookings List

List the stored bookings for the system. The list of booking details is received from the management system. All parameters are optional, and can be used to limit the search result.

If no parameters are used, past, present and future bookings are all listed. To avoid listing bookings from yesterday and before, use DayOffset = 0.

Days: Number of days to retrieve bookings from.

DayOffset: Which day to start the search from (today: 0, tomorrow: 1...).

Limit: Max number of bookings to list.

Offset: Offset number of bookings for this search.

**Requires user role:** USER

#### Parameters:

- Days: <1..365>
- DayOffset: <0..365>
- Limit: <1..65534>
- Offset: <0..65534>

#### Example:

```
Example 1 (One booking in list)
xCommand Bookings List
OK
*r Bookings ResultInfo TotalRows: 1
*r Bookings LastUpdated: "2011-09-02T11:19:01Z"
*r Bookings Booking 1 Id: "273"
*r Bookings Booking 1 Title: "Sales meeting"
*r Bookings Booking 1 Agenda: "Describe this command"
*r Bookings Booking 1 Privacy: Public
*r Bookings Booking 1 Organizer FirstName: "Ola"
*r Bookings Booking 1 Organizer LastName: "Normann"
*r Bookings Booking 1 Organizer Email: "ola.normann@domain.com"
*r Bookings Booking 1 Time StartTime: "2011-09-02T13:00:00Z"
*r Bookings Booking 1 Time StartTimeBuffer: 600
*r Bookings Booking 1 Time EndTime: "2011-09-02T13:30:00Z"
*r Bookings Booking 1 Time EndTimeBuffer: 0
*r Bookings Booking 1 MaximumMeetingExtension: 30
*r Bookings Booking 1 MeetingExtensionAvailability: Guaranteed
*r Bookings Booking 1 BookingStatus: OK
```

```
*r Bookings Booking 1 BookingStatusMessage: ""
*r Bookings Booking 1 Webex Enabled: True
*r Bookings Booking 1 Webex Url: "http://webex.url"
*r Bookings Booking 1 Webex MeetingNumber: "webexNumber@cisco.com"
*r Bookings Booking 1 Webex Password: ""
*r Bookings Booking 1 Webex HostKey: ""
*r Bookings Booking 1 Webex DialInNumbers DialInNumber 1 Type: TollFree
*r Bookings Booking 1 Webex DialInNumbers DialInNumber 1 Number: "+1 987
654321"
*r Bookings Booking 1 Webex DialInNumbers DialInNumber 2 Type: Toll
*r Bookings Booking 1 Webex DialInNumbers DialInNumber 2 Number: "+1 987
654322"
*r Bookings Booking 1 InteropBridge Number: ""
*r Bookings Booking 1 InteropBridge ConferenceId: ""
*r Bookings Booking 1 ManualCallIn Number: ""
*r Bookings Booking 1 ManualCallIn ConferenceId: ""
*r Bookings Booking 1 ManualCallIn ConferencePassword: ""
*r Bookings Booking 1 Encryption: BestEffort
*r Bookings Booking 1 Role: Slave
*r Bookings Booking 1 Recording: Disabled
*r Bookings Booking 1 DialInfo Calls Call 1 Number:
"91123456;conference-id=2100170569"
*r Bookings Booking 1 DialInfo Calls Call 1 Protocol: SIP
*r Bookings Booking 1 DialInfo Calls Call 1 CallRate: 3000
*r Bookings Booking 1 DialInfo Calls Call 1 CallType: Video
*r Bookings Booking 1 DialInfo ConnectMode: OBTP
** end
```

Example 2 (When no bookings have been received, or after all bookings have been removed by the command xCommand Bookings Clear)

```
xCommand Bookings List
OK
*r Bookings Error: "No bookings found."
*r Bookings ResultInfo TotalRows: 0
*r Bookings LastUpdated: Never
** end
```

### xCommand Bookings Clear

Clear the current stored list of bookings.

**Requires user role:** USER

**Example:**

```
xCommand Bookings Clear
** end
OK
```

## Boot commands

### xCommand Boot

Reboot system.

Action: As a default the system restarts after a reboot. By selecting Shutdown, the system will not restart.

**Requires user role:** USER

**Parameters:**

Action: <Restart/Shutdown>

**Example:**

```
xCommand Boot
*r BootResult (status=OK):
** end
OK
CUIL reboot request, restarting
Connection closed by foreign host.
```



## Call commands

### xCommand Call Accept

Accept an incoming call. If no CallId is specified, all incoming calls are accepted. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId. CallType parameter is not in use.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>  
 CallType: <Audio/Video> Not in use.

**Example:**

```
xCommand Call Accept CallId:19
OK
*r CallAcceptResult (status=OK):
** end
```

### xCommand Call Reject

Reject incoming call. If no call id is specified, all incoming calls are rejected. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>

**Example:**

```
xCommand Call Reject CallId:20
OK
*r CallRejectResult (status=OK):
** end
```

### xCommand Call Disconnect

Disconnect a call. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** USER

**Parameters:**

CallId(r): <0..65534>

**Example:**

```
xCommand Call Disconnect CallId:17
OK
*r DisconnectCallResult (status=OK):
** end
```

### xCommand Call DisconnectAll

Disconnect all active calls.

**Requires user role:** USER

**Example:**

```
xCommand Call DisconnectAll
OK
*r DisconnectAllResult (status=OK):
** end
```

### xCommand Call Hold

Put a call on hold. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** USER

**Parameters:**

CallId(r): <0..65534>  
 Reason: <Conference/Transfer/Other>

**Example:**

```
xCommand Call Hold CallId:19
OK
*r CallHoldResult (status=OK):
** end
```

### xCommand Call Join

Join all existing calls, active and on hold.

**Requires user role:** USER

**Parameters:**

CallId(r): <0..65534>

**Example:**

```
xCommand Call Join
OK
*r CallJoinResult (status=OK):
** end
```

### xCommand Call Resume

Resume a call that have been put on hold. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** USER

**Parameters:**

CallId(r): <0..65534>

**Example:**

```
xCommand Call Resume CallId:19
OK
*r CallResumeResult (status=OK):
** end
```

### xCommand Call UnattendedTransfer

Transfers an ongoing call to another participant. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId. Fully supported for SIP calls only.

**Requires user role:** USER

**Parameters:**

CallId(r): <0..65534>  
Number(r): <S: 0, 255>

**Example:**

```
xCommand Call UnattendedTransfer CallId: 2 Number: destination@example.com
OK
*r TransferUriResult (status=OK):
** end
```

### xCommand Call HoldAll

Puts all ongoing calls on hold.

**Requires user role:** USER

**Parameters:**

Reason(0): <Conference/Transfer/Other>

**Example:**

```
xCommand Call HoldAll
```

### xCommand Call Ignore

Turns off the ringtone for the incoming call. The call can still be answered.

**Requires user role:** USER

**Parameters:**

CallId(r): <0..65534>

**Example:**

```
xCommand Call Ignore CallId: 22
*r IgnoreResult (status=OK):
** end
```

## CallHistory commands

### xCommand CallHistory AcknowledgeAllMissedCalls

Turns off the missed calls indicator on the touch controller for all missed calls.

**Requires user role:** USER

**Example:**

```
xCommand CallHistory AcknowledgeAllMissedCalls
*r AcknowledgeAllMissedCallsResult (status=OK):
** end
```

### xCommand CallHistory AcknowledgeMissedCall

Turns off the missed calls indicator on the touch controller for the specified call.

CallHistoryId: CallHistoryId for the call in question.

AcknowledgeConsecutiveDuplicates: Includes all surrounding calls with duplicate information.

**Requires user role:** USER

**Parameters:**

CallHistoryId(r): <1..2147483647>  
AcknowledgeConsecutiveDuplicates: <False/True>

**Example:**

```
xCommand CallHistory AcknowledgeMissedCalls CallHistoryId: 5
*r AcknowledgeAllMissedCallsResult (status=OK):
** end
```

### xCommand CallHistory DeleteAll

Deletes all information on previous calls.

Filter: You can filter which calls to delete, either all, missed, placed or received calls.

**Requires user role:** USER

**Parameters:**

Filter: <All/Missed/Placed/Received>

**Example:**

```
xCommand CallHistory DeleteAll Filter: Missed
*r CallHistoryDeleteAllResult (status=OK):
** end
```

### xCommand CallHistory DeleteEntry

Deletes all information on the specified call.

CallHistoryId: CallHistoryId for the call in question.

AcknowledgeConsecutiveDuplicates: Includes all surrounding calls with duplicate information.

**Requires user role:** USER

**Parameters:**

CallHistoryId(r): <1..2147483647>  
AcknowledgeConsecutiveDuplicates: <False/True>

**Example:**

```
xCommand CallHistory DeleteEntry CallHistoryId: 5
*r CallHistoryDeleteResult (status=OK):
** end
```

### xCommand CallHistory Get

Retrieve all information on previous calls made on the video system.

Filter: You can filter which calls to retrieve; either all, missed, placed or received calls.

Offset: Sets the call from which to start.

Limit: Defines the amount of calls in the output.

DetailLevel: Sets the level of detail for the information on these calls.

SearchString: Allows you to set the command to apply to a specified display name or call back number.

CallHistoryId: CallHistoryId for the call in question.

**Requires user role:** USER

**Parameters:**

Filter: <All/Missed/Placed/Received/UnacknowledgedMissed>

Offset: <0..65534>

Limit: <0..65534>

DetailLevel: <Basic/Full>

SearchString: <S: 0, 255>

CallHistoryId: <0..65534>

**Example:**

```
xCommand CallHistory Get Filter: All Offset: 3 DetailLevel: Basic
*r CallHistoryGetResult Entry 0 CallHistoryId: 2
*r CallHistoryGetResult Entry 0 CallbackNumber: "sip:room1@company.com"
*r CallHistoryGetResult Entry 0 DisplayName: "display.name"
*r CallHistoryGetResult Entry 0 StartTime: "2013-04-09T10:56:36"
*r CallHistoryGetResult Entry 0 DaysAgo: 182
*r CallHistoryGetResult Entry 0 OccurrenceType: Received
*r CallHistoryGetResult Entry 0 IsAcknowledged: Acknowledged
*r CallHistoryGetResult Entry 1 CallHistoryId: 1
*r CallHistoryGetResult Entry 1 CallbackNumber: "sip:name@company.com"
*r CallHistoryGetResult Entry 1 DisplayName: "name"
*r CallHistoryGetResult Entry 1 StartTime: "2013-04-09T10:53:53"
*r CallHistoryGetResult Entry 1 DaysAgo: 182
*r CallHistoryGetResult Entry 1 OccurrenceType: Received
*r CallHistoryGetResult Entry 1 IsAcknowledged: Acknowledged
*r CallHistoryGetResult ResultInfo Offset: 3
*r CallHistoryGetResult ResultInfo Limit: 65534
** end
```

### xCommand CallHistory Recents

Retrieve aggregated information on previous calls made on the video system.

Filter: You can filter which calls to retrieve; either all, missed, placed or received calls.

Offset: Sets the call from which to start.

Limit: Defines the amount of calls in the output.

DetailLevel: Sets the level of detail for the information on these calls.

SearchString: Allows you to set the command to apply to a specified display name or call back number.

CallHistoryId: CallHistoryId for the call in question.

Order: Define the order in which the previous calls are presented.

**Requires user role:** USER

**Parameters:**

Filter: <All/Missed/Placed/Received/UnacknowledgedMissed>

Offset: <0..65534>

Limit: <0..65534>

DetailLevel: <Basic/Full>

SearchString: <S: 0, 255>

CallHistoryId: <0..65534>

Order: <OccurrenceTime/OccurrenceFrequency>

**Example:**

```
xCommand CallHistory Recents Filter: Missed Offset: 6 DetailLevel: Full
*r CallHistoryRecentsResult ResultInfo Offset: 6
*r CallHistoryRecentsResult ResultInfo Limit: 65534
** end
```

## CallLog commands

### xCommand CallLog Clear

Not applicable for this product.

### xCommand CallLog Recent Delete

Not applicable for this product.

### xCommand CallLog Outgoing Delete

Not applicable for this product.

### xCommand CallLog Received Delete

Not applicable for this product.

### xCommand CallLog Missed Delete

Not applicable for this product.

### xCommand CallLog Missed Dismiss

Not applicable for this product.

## CamCtrlPip commands

### xCommand CamCtrlPip

Show or hide the camera self-view in a small window (picture in picture).

Mode: Select whether the self-view picture in picture is on or off.

Duration: Set how long the self-view is shown for on screen.

**Requires user role:** USER

#### Parameters:

Mode(r): <On/Off>

Duration: <0..60>

#### Example:

```
xCommand CamCtrlPip Mode: On
*␣ CamCtrlPipResult (status=OK):
** end
```

## Camera commands

### xCommand Camera PanTiltReset

The camera is reset to its default values for pan and tilt. If the camera is daisy chained, the CameraId is given by its place in the chain.

**Requires user role:** USER

**Parameters:**

CameraId(r): <1..7>

**Example:**

```
xCommand Camera PanTiltReset CameraId:1
OK
*r PanTiltResetResult (status=OK):
** end
```

### xCommand Camera PositionReset

Reset the camera position the the default position.

**Requires user role:** USER

**Parameters:**

CameraId(r): <1..7>

**Example:**

```
xCommand Camera PositionReset CameraId:1
OK
*r CameraPositionResetResult (status=OK):
** end
```

### xCommand Camera PositionSet

Position the camera by defining the pan, tilt, zoom and focus parameters. If the camera is placed in a daisy chain you need to know the CameraId for the camera you want to address.

**Requires user role:** USER

**Parameters:**

CameraId(r): <1..7>

Pan: <-65535..65535>

Tilt: <-65535..65535>

Zoom: <0..65535>

Focus: <0..65535>

**Example:**

```
xCommand Camera PositionSet CameraId:1 Pan:200 Tilt:300
OK
*r CameraPositionSetResult (status=OK):
** end
```

### xCommand Camera Ramp

Move the camera in a specified direction. The camera moves at specified speed until a stop command is issued. In a daisy chain, you need to know the CameraId for the camera you want to address. Be aware that pan and tilt can be operated simultaneously, but no other combinations. In the latter case only the first operation specified is executed. For example, if you try to run both zoom and pan at the same time, only zoom is executed.

NOTE: You must run a stop command to stop the camera, see the example below.

CameraId: Give the camera id.

Pan: Move the camera to the Left or Right, followed by Stop.

PanSpeed: Set the pan speed.

Tilt: Move the camera Up or Down, followed by Stop.

TiltSpeed: Set the tilt speed.

Zoom: Zoom the camera In or Out, followed by Stop.

ZoomSpeed: Set the zoom speed.

Focus: Focus the camera Far or Near, followed by Stop.

**Requires user role:** USER

**Parameters:**

CameraId(r): <1..7>

Pan: <Left/Right/Stop>

PanSpeed: <1..15>

Tilt: <Down/Up/Stop>

TiltSpeed: <1..15>

Zoom: <In/Out/Stop>

ZoomSpeed: <1..15>

Focus: <Far/Near/Stop>

**Example:**

```
xCommand Camera Ramp CameraId:1 Pan:left PanSpeed:1
OK
*r RampResult (status=OK):
** end
xCommand Camera Ramp CameraId:1 Pan:stop
OK
*r RampResult (status=OK):
** end
```

### xCommand Camera ReconfigureCameraChain

Reinitialize the daisy chain of cameras and updates the CameraId parameter. The CameraId parameter holds information of which camera is sitting in what position in the camera chain.

**Requires user role:** USER

**Example:**

```
xCommand Camera ReconfigureCameraChain
*r ReconfigureCameraChainResult (status=OK):
** end
```

### xCommand Camera TriggerAutofocus

Trigger the auto-focus functionality. The camera must support auto-focus functionality. If the camera is daisy chained, the CameraId is given by its place in the chain.

**Requires user role:** USER

**Parameters:**

CameraId(r): <1..7>

**Example:**

```
xCommand Camera TriggerAutofocus CameraId:1
OK
*r TriggerAutofocusResult (status=OK):
** end
```

### xCommand Camera PositionActivateFromPreset

Selects pan, tilt, zoom and focus parameters for the given camera id from the selected preset.

CameraId: Give the camera id.

PresetId: Select preset 1 to 15.

**Requires user role:** USER

**Parameters:**

CameraId(r): <1..7>

PresetId(r): <1..15>

**Example:**

```
xCommand Camera PositionActivateFromPreset CameraId:1 PresetID:1
OK
*r PositionActivateFromPresetResult (status=OK):
** end
```

### xCommand Camera Preset Activate

Activate one of the stored camera preset.

Note: The xCommand Camera Preset commands applies to an individual camera. This is in contrast to the xCommand Preset commands where a single preset covers ALL connected cameras plus the Video Input switcher settings.

PresetId: The ID of the camera preset you want to activate.

**Requires user role:** USER

**Parameters:**

PresetId(r): <1..35>

**Example:**

```
xCommand Camera Preset Activate PresetId: 1
OK
*r CameraPresetActivateResult (status=OK)
** end
```

### xCommand Camera Preset Edit

Edit a stored camera preset. You can change the name of the camera preset and its position in the list that is returned by the xCommand Camera Preset List command.

Note: The xCommand Camera Preset commands applies to an individual camera. This is in contrast to the xCommand Preset commands where a single preset covers ALL connected cameras plus the Video Input switcher settings.

PresetId: The ID of the camera preset you want to edit.

ListPosition: The position in the list returned by the xCommand Camera Preset List command.

Name: The name of the camera preset. It will be used in the list returned by the xCommand Camera Preset List command.

**Requires user role:** USER

**Parameters:**

PresetId(r): <1..35>  
 ListPosition: <1..35>  
 Name: <S: 0, 255>

**Example:**

```
xCommand Camera Preset Edit PresetId: 1 ListPosition: 1 Name: ""
OK
*r CameraPresetEditResult (status=OK)
** end
```

### xCommand Camera Preset List

List information about available camera presets.

Note: The xCommand Camera Preset commands are used to store camera positions for individual cameras. This is in contrast to the xCommand Preset commands where a single preset stores/recalls ALL connected cameras plus the Video Input switcher settings. This makes it more usable for integrations where one wants to store multiple camera positions individually per camera rather than a complete camera position set.

PresetId: Filter on specified preset.

**Requires user role:** USER

**Parameters:**

PresetId: <1..35>

**Example:**

```
xCommand Camera Preset List PresetId: 1
OK
*r CameraPresetListResult (status=OK)
** end
```

### xCommand Camera Preset Remove

Remove a camera preset.

Note: The xCommand Camera Preset commands applies to an individual camera. This is in contrast to the xCommand Preset commands where a single preset covers ALL connected cameras plus the Video Input switcher settings.

PresetId: The ID of the camera preset you want to remove.

**Requires user role:** USER

**Parameters:**

PresetId(r): <1..35>

**Example:**

```
xCommand Camera Preset Remove PresetId: 1
OK
*r CameraPresetRemoveResult (status=OK)
** end
```



### xCommand Camera Preset Store

Store the current position of the chosen camera. The camera is identified by the CameraId parameter.

Note: The xCommand Camera Preset commands applies to an individual camera. This is in contrast to the xCommand Preset commands where a single preset covers ALL connected cameras plus the Video Input switcher settings. The xCommand Camera Preset commands are useful when you want to handle multiple camera positions individually per camera, rather than working with complete sets of camera positions.

PresetId: The ID of this camera preset. If not set explicitly, the codec will assign a preset ID automatically.

CameraId: Which camera to store the position of.

ListPosition: The new camera preset's position in the list returned by the xCommand Camera Preset List command.

Name: The name of the new camera preset. It will be used in the list returned by the xCommand Camera Preset List command.

**Requires user role:** USER

#### Parameters:

PresetId: <1..35>  
 CameraId (r): <1..7>  
 ListPosition: <1..35>  
 Name: <S: 0, 255>

#### Example:

```
xCommand Camera Preset Store PresetId: 1 CameraId: 1 ListPosition: 1 Name
""
OK
*r CameraPresetStoreResult (status=OK)
** end
```

## Conference commands

### xCommand Conference DoNotDisturb Activate

This command switches on the Do Not Disturb mode, and the Timeout parameter allows you to control when it is switched off again. It only takes effect when xConfiguration Conference DoNotDisturb Mode is set to Timed.

When Do Not Disturb is switched on, all incoming calls are rejected and registered as missed calls. The calling side receives a busy signal.

Timeout: The number of minutes before Do Not Disturb is switched off. If not set, Do Not Disturb times out after 1440 minutes (24 hours).

**Requires user role:** USER

#### Parameters:

Timeout: <0..1440>

#### Example:

```
xCommand Conference DoNotDisturb Activate
*r ActivateResult:
** end
```

### xCommand Conference DoNotDisturb Deactivate

This command switches off the Do Not Disturb mode. This command only takes effect when xConfiguration Conference DoNotDisturb Mode is set to Timed. When Do Not Disturb is switched off incoming calls come through as normal.

**Requires user role:** USER

#### Example:

```
xCommand Conference DoNotDisturb Deactivate
*r DeactivateResult:
** end
```

### xCommand Conference ActiveSpeaker Reset

Resets ActiveSpeaker. Normal voice switching is switched back on.

**Requires user role:** USER

#### Example:

```
xCommand Conference ActiveSpeaker Reset
*r ConferenceActiveSpeakerResetResult (status=OK):
** end
```

### xCommand Conference ActiveSpeaker Set

For manually setting the active speaker in a conference. Overrides normal voice switching.

Target: Identifies local or remote participant.

CallId: Identifies CallID for remote participant. Only relevant if Target is set to "remote".

**Requires user role:** USER

**Parameters:**

Target(r): <local/remote>

CallId: <0..65534>

**Example:**

Example 1

```
xCommand Conference ActiveSpeaker Set Target: local
*r ConferenceActiveSpeakerSetResult (status=OK):
** end
```

Example 2

```
xCommand Conference ActiveSpeaker Set Target: remote CallID: 3
*r ConferenceActiveSpeakerSetResult (status=OK):
** end
```

## Dial commands

### xCommand Dial

Dial out from the system. Returns information about the CallId and Conferenceld, which are required for some other commands.

Number: Enter the number or address.

Protocol: Select the SIP, H323 or H320 protocol.

CallRate: Set a call rate.

CallType: Select the audio or video call type.

BookingId: Any identifier that an external booking system (e.g. TMS, CTS-MAN) can use for its own references to match placed calls with the booking systems internal identifier for a meeting. This can be any string, e.g. a GUID. The booking Id is supplied in call logs, call events etc for the call.

DisplayName: The display name of the remote participant.

**Requires user role:** USER

**Parameters:**

Number(r): <S: 0, 255>

Protocol: <H320/H323/Sip>

CallRate: <64..6000>

CallType: <Audio/Video>

BookingId: <S: 0, 255>

Appearance: <1..999999999>

DisplayName: <S: 0, 255>

**Example:**

```
xCommand Dial Number:543210 Protocol:h323
OK
*r DialResult (status=OK):
CallId: 2
ConferenceId: 1
** end
```

## DTMFSend commands

### xCommand DTMFSend

Send DTMF tones to the far end.

CallId: The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

DTMFString: Enter the DTMF string.

**Requires user role:** USER

#### Parameters:

CallId: <0..65534>

DTMFString(r): <S: 0, 32>

#### Example:

```
xCommand DTMFSend CallId:2 DTMFString:1234
*r DTMFSendResult (status=OK):
** end
```

## FacilityService commands

### xCommand FacilityService Dial

Dial out from the system to a facility service. A maximum of five facility services can be defined; which one of these five to dial to is identified by the ServiceId (ref. xConfiguration Facility Service [ServiceId] Type/Name/Number/CallType). The command returns information about the CallId and ConferenceId.

ServiceId: The identifier of the facility service.

**Requires user role:** USER

#### Parameters:

ServiceId(r): <1..5>

#### Example:

```
xCommand FacilityService Dial ServiceId: 1
OK
*r FacilityServiceDialResult (status=OK):
  CallId: 2
  ConferenceId: 1
** end
```

## FarEndControl commands

### xCommand FarEndControl Camera Move

Move the far end camera (the remote camera). NOTE: The far end camera moves in the specified direction until the stop command (ref: xCommand FarEndControl Camera Stop) is issued

CallId: The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

Value: Select the action for how to move the camera.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>

Value(r): <Left/Right/Up/Down/ZoomIn/ZoomOut>

**Example:**

```
xCommand FarEndControl Camera Move CallId:3 Value:left
*r FECCMoveResult (status=OK):
** end
```

### xCommand FarEndControl Camera Stop

Stop the far end camera after the xCommand FarEndControl Camera Move has been issued.

CallId: The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>

**Example:**

```
xCommand FarEndControl Camera Stop CallId:3
*r FECCMoveResult (status=OK):
** end
```

### xCommand FarEndControl Preset Activate

While in a call, this command is used to activate a preset on the far end codec. The preset covers the far end codec's camera positions and input video switcher settings.

The preset must be stored on the far end codec beforehand, either by using the xCommand Preset Store command locally on the far end codec, or by using the xCommand FarEndControl Preset Store command from a remote codec.

Note: The far end codec's xConfiguration Conference FarEndControl Mode setting must be switched On for the FarEndControl commands to work.

CallId: The CallId is required to identify the far end codec only when in a Multipoint call. The CallId is returned when issuing the xCommand Dial command. During the call you can run the xStatus Call command to see the CallId.

PresetId: The PresetId must be retrieved from the far end codec since this is the ID of the preset that is stored on that codec.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>

PresetId(r): <1..15>

**Example:**

```
xCommand FarEndControl Preset Activate CallId:3 PresetId:1
*r FECCPresetActivateResult (status=OK):
** end
```

### xCommand FarEndControl Preset Store

While in a call, this command is used to store a preset on the far end codec. The preset covers the far end codec's camera positions and input video switcher settings.

Note: The far end codec's xConfiguration Conference FarEndControl Mode setting must be switched On for the FarEndControl commands to work.

CallId: The CallId is required to identify the far end codec only when in a Multipoint call. The CallId is returned when issuing the xCommand Dial command. During the call you can run the xStatus Call command to see the CallId.

PresetId: The PresetId must be retrieved from the far end codec since this is the ID of the preset that is stored on that codec.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>  
PresetId(r): <0..15>

**Example:**

```
xCommand FarEndControl Preset Store CallId:3 PresetId:1
*r FECCPresetStoreResult (status=OK):
** end
```

### xCommand FarEndControl Source Select

Select which video input source to use as the main source on the far end system.

CallId: The CallId is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

SourceId: Select a video input source on the far end.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>  
SourceId(r): <0..15>

**Example:**

```
xCommand FarEndControl Source Select CallId:3 SourceId:1
*r FECCSelectSourceResult (status=OK):
** end
```

## GPIO commands

### xCommand GPIO ManualState Set

Set the status of a GPIO pin that is configured to OutputManualState mode (ref. xConfiguration GPIO Pin [1..4] Mode).

**Requires user role:** USER

**Parameters:**

Pin1: <High/Low>  
Pin2: <High/Low>  
Pin3: <High/Low>  
Pin4: <High/Low>

**Example:**

```
xCommand GPIO ManualState Set Pin1: High
*r GpioStateSetResult (status=OK):
** end
```

## HttpFeedback commands

### xCommand HttpFeedback Register

Register the system to a HTTP(S) server to return XML feedback over HTTP(S) to specific URLs.

FeedbackSlot: You can have from 1 to 4 slots for feedback.

ServerUrl: Define the URL for the HTTP(S) server.

Expression[1..15]: What parts of the Status and Configuration XML documents to monitor are specified by XPath expressions. You can have from 1 to 15 XPath expressions.

**Requires user role:** USER

#### Parameters:

FeedbackSlot: <1..4>

ServerUrl(r): <S: 1, 2048>

Expression[1..15]: <S: 1, 255>

#### Example:

```
xCommand HttpFeedback Register FeedbackSlot:1 ServerUrl:10.47.19.41
Expression[1]:Status/Video Expression[2]:Status/Audio Expression[3]:Status/
Call Expression[4]:Status/Conference
OK
*r FeedbackRegisterResult (status=OK):
FeedbackSlot: 1
** end
```

### xCommand HttpFeedback Deregister

Deregister XML feedback over HTTP(S).

**Requires user role:** USER

#### Parameters:

FeedbackSlot(r): <1..4>

#### Example:

```
xCommand HttpFeedback Deregister FeedbackSlot:1
OK
*r FeedbackDeregisterResult (status=OK):
FeedbackSlot: 1
** end
```

## Key commands

### xCommand Key Click

Not applicable for this product.

### xCommand Key Press

Not applicable for this product.

### xCommand Key Release

Not applicable for this product.

## Logging commands

### xCommand Logging ExtendedLogging Start

Turns on the extended logging, which stores more information than regular logging in the log files. You can determine the duration in seconds. Note that extended logging uses more of your video system's resources, and should only be used when troubleshooting an issue.

**Requires user role:** USER

**Parameters:**

Duration: <1..600>

**Example:**

```
xCommand Logging ExtendedLogging Start Duration: 20
OK
*r ExtendedLoggingModeResult (status=OK):
```

### xCommand Logging ExtendedLogging Stop

Stops the logging started with xCommand SystemUnit Diagnostics ExtendedLogging Start.

**Requires user role:** USER

**Example:**

```
xCommand Logging ExtendedLogging Stop
OK
*r ExtendedLoggingModeResult (status=OK):
** end
```

## Message commands

### xCommand Message Alert Display

Display a message on screen, for a specified duration of time (in seconds). NOTE: If Duration is not set, the command must be followed by xCommand Message Alert Clear.

Use the xFeedback commands to monitor the feedback from the user. Read more about the xFeedback commands in the API introduction section in this guide.

Title: Enter a message title.

Text: Enter the message to be displayed. The <p> and <br> HTML tags will result in line breaks as normal; any other tags will appear as plain text.

Duration: Set how long (in seconds) the message is to be displayed on the screen. If set to 0 (zero) the message does not disappear until a xCommand Message Alert Clear message has been sent.

**Requires user role:** ADMIN

**Parameters:**

Title: <S: 0, 255>

Text(r): <S: 0, 255>

Duration: <0..3600>

**Example:**

```
xCommand Message Alert Display Title: "Message" Text: "The meeting will
end in 5 minutes." Duration: 20
OK
*r MessageAlertDisplayResult (status=OK):
** end
```

### xCommand Message Alert Clear

Remove the message which was displayed using the xCommand Message Alert Display command. This is required when the Duration parameter is not set.

**Requires user role:** ADMIN

**Example:**

```
xCommand Message Alert Clear
OK
*r MessageAlertClearResult (status=OK):
** end
```

### xCommand Message TextLine Display

Display a text line on screen. Optionally you can place the text line at a specified location and for a specified duration of time (in seconds). NOTE: If Duration is not set, the command must be followed by xCommand Message TextLine Clear.

Text: Enter the text line to be displayed. The <p> and <br> HTML tags will result in line breaks as normal; any other tags will appear as plain text.

X: Enter the X-coordinate (horizontal) on screen. X=0 is in the upper left corner.

Y: Enter the Y-coordinate (vertical) on screen. Y=0 is in the upper left corner.

Duration: Set how long (in seconds) the text line is to be displayed on the screen. If set to 0 (zero) the text line is displayed until a xCommand Message TextLine Clear command has been sent.

**Requires user role:** ADMIN

**Parameters:**

Text(r): <S: 0, 140>

X: <1..10000>

Y: <1..10000>

Duration: <0..3600>

**Example:**

```
xCommand Message TextLine Display Text: "The message to be displayed."
X:500 Y:2000 Duration: 20
OK
*r MessageTextLineDisplayResult (status=OK):
** end
```

### xCommand Message TextLine Clear

Clears the text line which was defined by the xCommand Message TextLine Display command.

**Requires user role:** ADMIN

**Example:**

```
xCommand Message TextLine Clear
OK
*r MessageTextLineClearResult (status=OK):
** end
```

### xCommand Message Prompt Display

Display a small window on screen with a title, text and up to five options for response from the user. The message is displayed on screen until the user gives a response, or until the system receives the following command xCommand Message Prompt Clear.

Use the xFeedback commands to monitor the feedback from the user. Read more about the xFeed-back commands in the API introduction section in this guide.

Title: Enter the title of the message.

Text: Enter the text line to be displayed. The <p> and <br> HTML tags will result in line breaks as normal; any other tags will appear as plain text.

FeedbackId: To identify the feedback enter a FeedbackId.

Option.1 to Option.5: Enter the text to appear on the feedback options.

**Requires user role:** ADMIN

**Parameters:**

Title: <S: 0, 255>

Text(r): <S: 0, 255>

FeedbackId: <S: 0, 255>

Option.1: <S: 0, 255>

Option.2: <S: 0, 255>

Option.3: <S: 0, 255>

Option.4: <S: 0, 255>

Option.5: <S: 0, 255>

**Example:**

```
xCommand Message Prompt Display Title: "Meeting extension" Text: "The
meeting is about to end. Do you want to extend the meeting?" Option.1:
"No" Option.2: "Yes, extend with 5 minutes" Option.3: "Yes, extend with 10
minutes"
OK
*r MessagePromptDisplayResult (status=OK):
** end
```



### xCommand Message Prompt Clear

Remove the window displayed using the xCommand Message Alert Display command.

Use the xFeedback commands to monitor the feedback from the user. Read more about the xFeedback commands in the API introduction section in this guide.

FeedbackId: The FeedbackId corresponds to the FeedbackId given by the xCommand Message Prompt Display command.

**Requires user role:** ADMIN

**Parameters:**

FeedbackId: <S: 0, 255>

**Example:**

```
xCommand Message Prompt Clear
OK
*r MessagePromptClearResult (status=OK):
** end
```

### xCommand Message Prompt Response

Give a response to the xCommand Message Prompt Display.

Use the xFeedback commands to monitor the feedback from the user. Read more about the xFeedback commands in the API introduction section in this guide.

FeedbackId: The FeedbackId corresponds to the FeedbackId given by the xCommand Message Prompt Display command.

OptionId: The OptionId corresponds to the OptionIds given as possible responses in the xCommand Message Prompt Display command.

**Requires user role:** USER

**Parameters:**

FeedbackId: <S: 0, 255>

OptionId(r): <1..5>

**Example:**

```
xCommand Message Prompt Response OptionId: 1
OK
*r MessagePromptResponseResult (status=OK):
** end
```

### xCommand Message Echo

Issuing the command makes the API raise a message-echo event. The command has no other impact on the codec. Usage can be to poll the codec from a control system or any external device/system to check for connectivity. To monitor the feedback use the xFeedback command. You can read more about the xFeedback command in the general API introduction section.

Text: Enter the text to be echoed.

**Requires user role:** ADMIN

**Parameters:**

Text: <S: 0, 255>

**Example:**

```
xCommand Message Echo Text:" MyEchoListner99"
*** end
* e Message Echo Text: "MyEchoListner99"
```

### xCommand Message FarendMessage

This command is used to send generic messages to the participants in a conference. Not in use in this software version.

CallId: The remote participant to whom the message needs to be sent.

Type: Type of the message.

Text: Enter the text line to be displayed.

**Requires user role:** USER

**Parameters:**

CallId: <0..65534>

Type(r): <S: 0, 255>

Text(r): <S: 1, 1450>

LocalEcho: <On/Off>

**Example:**

```
xCommand Message FarendMessage CallId: 3 Type: 3 Text: Hello
*r FarendMessageResult (status=Error):
Reason: Generic Message mode not enabled
** end
```

## Phonebook commands

### xCommand Phonebook Folder Add

Phonebook entries can be stored in folders. Use this command to add a folder to the local phonebook. The command returns the FolderId, which is a unique string that identifies the folder; typically the format is "localGroupId-n".

Name(r): The name of the folder.

ParentFolderId: The unique identifier for the parent folder. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Folder Add command was issued to make the parent folder.

**Requires user role:** USER

**Parameters:**

Name(r): <S: 0, 255>  
ParentFolderId: <S: 0, 255>

**Example:**

```
xCommand Phonebook Folder Add Name: "New York Office"
OK
*r PhonebookFolderAddResult (status=OK):
  Name: localGroupId-3
** end
```

### xCommand Phonebook Folder Modify

Modify an existing phonebook folder.

FolderId: The unique identifier for the folder. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Folder Add command was issued to make the folder.

Name(r): The name of the contact.

ParentFolderId: The unique identifier for the parent folder. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Folder Add command was issued to make the parent folder.

**Requires user role:** USER

**Parameters:**

FolderId(r): <S: 0, 255>  
Name: <S: 0, 255>  
ParentFolderId: <S: 0, 255>

**Example:**

```
xCommand Phonebook Folder Modify FolderId:localGroupId-3 Name: "New York
Head Office"
OK
*r PhonebookFolderModifyResult (status=OK):
** end
```

### xCommand Phonebook Folder Delete

Delete an existing folder from the local phonebook.

FolderId: The unique identifier for the folder. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Folder Add command was issued to make the folder.

**Requires user role:** USER

**Parameters:**

FolderId(r): <S: 0, 255>

**Example:**

```
xCommand Phonebook Folder Delete FolderId:localGroupId-3
OK
*r PhonebookFolderDeleteResult (status=OK):
** end
```

### xCommand Phonebook Contact Add

Add a new contact to the local phonebook. The command returns the ContactId, which is a unique string that identifies the contact; typically the format is "localContactId-n".

You can add several contact methods to a contact using the xCommand Phonebook ContactMethod Add command. Note that only the first contact method will appear in the Favorites list on the Cisco TelePresence Touch controller. All contact methods are available in the API and on the web interface.

Name: The name of the contact.

FolderId: The unique identifier for the folder that you want to store the contact in. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Folder Add command was issued to make the folder.

ImageUrl: Currently not in use.

Title: The title of the contact.

Number: The phone number or address of the contact.

Protocol: Select Auto, SIP, H323 or H320 protocol.

CallRate: Set a call rate.

CallType: Select a call type (audio or video).

Device: Select the device type.

Tag: Tag the contact as a Favorite, or untag an already tagged contact.

**Requires user role:** USER

**Parameters:**

- Name(r): <S: 0, 255>
- FolderId: <S: 0, 255>
- ImageUrl: <S: 0, 255>
- Title: <S: 0, 255>
- Number: <S: 0, 255>
- Protocol: <Auto/H320/H323/SIP>
- CallRate: <0..6000>
- CallType: <Audio/Video>
- Device: <Mobile/Other/Telephone/Video>
- Tag: <Untagged/Favorite>

**Example:**

```
xCommand Phonebook Contact Add Name: "John Doe" Number:12345
OK
*r PhonebookContactAddResult (status=OK):
Name: localContactId-1
** end
```

### xCommand Phonebook Contact Modify

Modify contact details of an existing contact in the local phonebook. The following parameters can be changed using this command: Name, FolderId, ImageURL and Title. You must use the xCommand Phonebook ContactMethod Modify command to change the other parameters: Number, Protocol, CallRate, CallType and Device.

ContactId: The unique identifier for the contact you want to modify. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Contact Add command was issued to make the contact.

Name: The name of the contact.

FolderId: A unique identifier for the folder. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Folder Add command was issued.

ImageUrl: Currently not in use.

Title: The title of the contact.

Tag: Tag the contact as a Favorite, or untag an already tagged contact.

**Requires user role:** USER

**Parameters:**

- ContactId(r): <S: 0, 255>
- Name: <S: 0, 255>
- FolderId: <S: 0, 255>
- ImageUrl: <S: 0, 255>
- Title: <S: 0, 255>
- Tag: <Untagged/Favorite>

**Example:**

```
xCommand Phonebook Contact Modify ContactId:localContactId-1 Name: "John
Doe - office"
OK
*r PhonebookContactModifyResult (status=OK):
** end
```

### xCommand Phonebook Contact Delete

Delete an existing contact from the local phonebook.

ContactId: The unique identifier for the contact. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Contact Add command was issued to make the contact.

**Requires user role:** USER

**Parameters:**

ContactId(r): <S: 0, 255>

**Example:**

```
xCommand Phonebook Contact Delete ContactId:localContactId-1
OK
*r PhonebookContactDeleteResult (status=OK):
** end
```

### xCommand Phonebook ContactMethod Add

Add contact details for an existing contact in the local phonebook. The command returns the ContactMethodId, which is a unique string that identifies the contact method; typically the format is "n".

You can add several contact methods to a contact. Note that only the first contact method will appear in the Favorites list on the Cisco TelePresence Touch controller. The first contact method may have been created when issuing the xCommand Phonebook Contact Add command to make the contact. All contact methods are available in the API and on the web interface.

ContactId: The unique identifier for the contact that you want to add a contact method to. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Contact Add command was issued to make the contact.

Device: Set which type of device to call to.

Number(r): The phone number or address of the contact.

Protocol: Select Auto, SIP, H323 or H320 protocol.

CallRate: Set a call rate.

CallType: Select a call type (audio or video).

**Requires user role:** USER

**Parameters:**

ContactId(r): <S: 0, 255>

Device: <Mobile/Other/Telephone/Video>

Number(r): <S: 0, 255>

Protocol: <Auto/H320/H323/SIP>

CallRate: <0..6000>

CallType: <Audio/Video>

**Example:**

```
xCommand Phonebook ContactMethod Add ContactId:localContactId-2
Number:54321 Protocol:H323
OK
*r PhonebookContactMethodAddResult (status=OK):
Name: 1
** end
```

### xCommand Phonebook ContactMethod Modify

Modify details about the contact method for an existing contact in the local phonebook.

ContactId: The unique identifier for the contact. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Contact Add command was issued to make the contact.

ContactMethodId: The unique identifier for the contact method you want to modify. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook ContactMethod Add or xCommand Phonebook Contact Add commands were issued to make the contact method.

Device: Set which type of device to call to.

Number: The phone number or address of the contact.

Protocol: Select Auto, SIP, H323 or H320 protocol.

CallRate: Set a call rate.

CallType: Select a call type (audio or video).

**Requires user role:** USER

**Parameters:**

ContactId(r): <S: 0, 255>

ContactMethodId(r): <S: 0, 255>

Device: <Mobile/Other/Telephone/Video>

Number: <S: 0, 255>

Protocol: <Auto, H320/H323/SIP>

CallRate: <0..6000>

CallType: <Audio/Video>

**Example:**

```
xCommand Phonebook ContactMethod Modify ContactMethodId:117
ContactId:localContactId-10 Number:"newnumber@cisco.com"
OK
```

### xCommand Phonebook ContactMethod Delete

Delete a contact method from an existing contact in the local phonebook.

ContactId: The unique identifier for the contact you want to change. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook Contact Add command was issued to make the contact.

ContactMethodId: The unique identifier for the contact method you want to delete. The identifier will be returned by an xCommand Phonebook Search command. It was also returned when the xCommand Phonebook ContactMethod Add command was issued to make the contact method.

**Requires user role:** USER

**Parameters:**

ContactId(r): <S: 0, 255>

ContactMethodId(r): <S: 0, 255>

**Example:**

```
xCommand Phonebook ContactMethod Delete ContactId:localContactId-2
ContactMethodId:1
OK
*! PhonebookContactMethodDeleteResult (status=OK):
** end
```

### xCommand Phonebook Search

The search command lets you search in both the local and corporate phone books. A search gives a ResultSet.

PhonebookId: The identifier of the phonebook server that will be used. See the xConfiguration Phonebook Server ID setting. Not necessary to use.

PhonebookType: Define whether to search the local phone book or the corporate phonebook.

SearchString: Search for entries containing this string (note that the entry does not have to begin with the string). If no FolderId is specified, all folders / phonebook directories will be searched. The SearchString parameter is optional for software version TC2.0 and later.

SearchField: Currently not in use.

Offset: Get records starting with this offset in a search. The default value is 0. Offset is used together with Limit to support paging.

FolderId: Search only in the specified folder. The FolderId (string) is listed in the ResultSet of a search result containing folders.

Limit: Limit the number of records in the result set to this number. For example, if the limit is set to 10, the ResultSet will contain only 10 entries (Contacts and Folders) even if the total number of hits is larger. The maximum limit is 1000.

Recursive: This parameter will only have effect when searching the local phone book. The setting determines whether a local phone book search should be limited to the given FolderId, or also recursively search in its subfolders. If not specified, the search will be recursive.

When issuing the command without specifying any parameters, all folders, contacts and contact methods in the local phone book will be returned.

Tag: Limits the search to either contacts that have been tagged as favorite or the untagged contacts.

**Requires user role:** USER

#### Parameters:

PhonebookId: <S: 0, 255>

PhonebookType: <Corporate/Local>

SearchString: <S: 0, 255>

SearchField: <Name/Number>

Offset: <0..65534>

FolderId: <S: 0, 255>

Limit: <0..65534>

Recursive: <False/True>

ContactType: <Any/Folder/Contact>

Tag: <Untagged/Favorite>

#### Example:

```
xCommand Phonebook Search PhonebookType:Corporate Limit:2
FolderId:"corporate _ 001"
OK
```

```
*r PhonebookSearchResult ResultSet ResultInfo TotalRows: 25
*r PhonebookSearchResult ResultSet Contact 1 Name: "John Doe (office)"
*r PhonebookSearchResult ResultSet Contact 1 ContactId: "localContactId-3"
*r PhonebookSearchResult ResultSet Contact 1 ContactMethod 1
ContactMethodId: "1"
*r PhonebookSearchResult ResultSet Contact 1 ContactMethod 1 Number:
"H323:John.Doe.Office@company.com"
*r PhonebookSearchResult ResultSet Contact 1 ContactMethod 1 Protocol:
H323
*r PhonebookSearchResult ResultSet Contact 1 ContactMethod 2
ContactMethodId: "2"
*r PhonebookSearchResult ResultSet Contact 1 ContactMethod 2 Number:
"SIP:John.Doe.Office@company.com"
*r PhonebookSearchResult ResultSet Contact 1 ContactMethod 2 Protocol: SIP
*r PhonebookSearchResult ResultSet Contact 2 Name: "John Doe (home)"
*r PhonebookSearchResult ResultSet Contact 2 ContactId: "localContactId-4"
*r PhonebookSearchResult ResultSet Contact 2 ContactMethod 1
ContactMethodId: "3"
*r PhonebookSearchResult ResultSet Contact 2 ContactMethod 1 Number:
"H323:John.Doe.Home@company.com"
*r PhonebookSearchResult ResultSet Contact 2 ContactMethod 1 Protocol:
H323
*r PhonebookSearchResult ResultSet Contact 2 ContactMethod 2
ContactMethodId: "4"
*r PhonebookSearchResult ResultSet Contact 2 ContactMethod 2 Number:
"SIP:John.Doe.Home@company.com"
*r PhonebookSearchResult ResultSet Contact 2 ContactMethod 2 Protocol: SIP
** end
```

## Presentation commands

### xCommand Presentation Start

Open a media stream from the selected presentation source.

PresentationSource: Select the video input source to be used for presentation.

SendingMode: Select whether the presentation is shown locally or locally and remotely.

**Requires user role:** USER

**Parameters:**

PresentationSource: <1..4>

ConnectorId: <1..5>

SendingMode: <LocalRemote/LocalOnly>

**Example:**

```
xCommand Presentation Start PresentationSource:2
OK
*r PresentationStartResult (status=OK):
** end
```

### xCommand Presentation Stop

Stop the media stream from the presentation source.

**Requires user role:** USER

**Example:**

```
xCommand Presentation Stop
OK
*r PresentationStopResult (status=OK):
** end
```

## Preset commands

### xCommand Preset Store

Store the connector selections for all video input sources and the current position for all cameras. Note that information about all video input sources and all camera positions are included in the same preset. The system may hold 15 predefined video input presets. These presets are available for far end control, i.e. they are referred in the PresetId parameter of the xCommand FarEndControl Preset Activate command. In contrast, the xCommand Camera Preset commands applies to individual cameras only. Those presets are not available for far end control.

PresetId: The ID of this preset.

Type: Currently it makes no difference if you select Camera or All. However, this may change in the future (other audio or video settings may be included in a preset). If you want to ensure that a preset only affects camera positions we recommend that you select Camera.

Description: Enter a description of the camera preset.

**Requires user role:** USER

**Parameters:**

PresetId(r): <1..15>

Type(r): <All/Camera>

Description: <S: 0, 255>

**Example:**

```
xCommand Preset Store PresetId:3 Type:Camera Description:"Left view"
OK
*r PresetStoreResult (status=OK):
** end
```

### xCommand Preset Activate

Activate one of the stored local presets.

PresetId: The ID of the preset you want to activate.

**Requires user role:** USER

**Parameters:**

PresetId(r): <1..15>

**Example:**

```
xCommand Preset Activate PresetId:3
OK
*r PresetActivateResult (status=OK):
** end
```

### xCommand Preset Clear

Delete a preset.

PresetId: The ID of the preset you want to delete.

**Requires user role:** USER

**Parameters:**

PresetId(r): <1..15>

**Example:**

```
xCommand Preset Clear PresetId:3
OK
*r PresetClearResult (status=OK):
** end
```

## Provisioning commands

### xCommand Provisioning StartUpgrade

The codec software can be upgraded from the provisioning server. When starting the upgrade the software is automatically downloaded and installed. The codec reboots to complete the software upgrade.

**Requires user role:** ADMIN

**Example:**

```
xCommand Provisioning StartUpgrade
*r StartUpgradeResult (status=OK):
** end
```

### xCommand Provisioning CompleteUpgrade

Starts installing the software upgrade if you wish to install it before it is set to do so.

**Requires user role:** USER

**Example:**

```
xCommand Provisioning CompleteUpgrade
*r CompleteUpgradeResult (status=OK):
** end
```

### xCommand Provisioning PostponeUpgrade

Postpones the installing of the software upgrade.

**Requires user role:** USER

**Parameters:**

SecondsToPostpone(r): <0..65534>

**Example:**

```
xCommand Provisioning PostponeUpgrade SecondsToPostpone: 60
*r PostponeUpgradeResult (status=OK):
** end
```



### xCommand Provisioning CUCM CAPF OperationStart

Starts a pending CAPF (Certificate Authority Proxy Function) operation toward the CUCM. When the CUCM administrator initiates an operation that the endpoint should perform (like installing, updating or deleting certificates), this command can be used to start the CAPF operation.

AuthString: Set the authentication string required for the CAPF operation.

**Requires user role:** USER

**Parameters:**

AuthString: <S: 4, 10>

**Example:**

```
xCommand Provisioning CUCM CAPF OperationStart AuthString: 123456
*r CAPFStartResult (status=OK):
** end
```

### xCommand Provisioning CUCM CTL Delete

Delete the stored CTL and ITL files (CTL: Certificate Trust List, ITL: Identity Trust List).

**Requires user role:** USER

**Example:**

```
xCommand Provisioning CUCM CTL Delete
*r DeleteResult (status=OK):
** end
```

### xCommand Provisioning CUCM ExtensionMobility Login

Login command for the Extension Mobility service. You login to the Extension Mobility service with a user name and pin. If there are multiple profiles available for that user, a separate event will be sent with the available profiles for the user. A new login command with the profile can then be submitted.

**Requires user role:** USER

**Parameters:**

UserId(r): <S: 1, 255>

Pin(r): <S: 1, 255>

Profile: <S: 1, 255>

**Example:**

```
xCommand Provisioning CUCM ExtensionMobility Login UserId: user1 Pin: 1234
*r NoResult (status=OK):
** end
```

```
*e ExtensionMobilityProfileSelection Profile 0 Name: "Profile 1 for user1"
*e ExtensionMobilityProfileSelection Profile 0 Id: "profile1+For+user1"
*e ExtensionMobilityProfileSelection Profile 1 Name: "Private"
*e ExtensionMobilityProfileSelection Profile 1 Id: "private"
```

```
xCommand Provisioning CUCM ExtensionMobility Login UserId: user1 Pin: 1234
Profile: private
*r NoResult (status=OK):
** end
```

```
*e ExtensionMobility Success: "True" ResponseCode: "Success"
```

### xCommand Provisioning CUCM ExtensionMobility Logout

This command will log you out of your Extension Mobility profile.

**Requires user role:** USER

**Example:**

```
xCommand Provisioning CUCM ExtensionMobility Logout
*r NoResult (status=OK):
** end
```

## Security commands

### xCommand Security FIPSMoDe Activate

Activate FIPS (140-2) mode. NOTE: Activating FIPS mode implies a reset to factory defaults.

While in FIPS mode, software upgrade is disabled and the following limitations apply: All calls are encrypted, unencrypted communication protocols like Telnet and HTTP cannot be used. IEEE802.1x and SNMP are disabled. The SIP Profile Type setting cannot be Microsoft. The remote support user is not available.

To exit FIPS mode, perform a factory reset.

Confirm: <Yes>

**Requires user role:** ADMIN

#### Parameters:

Confirm(r): <Yes>

#### Example:

```
xCommand Security FIPSMoDe Activate Confirm: "Yes"
OK
*r SecurityFIPSMoDeActivateConfirmResult (status=OK)
** end
```

### xCommand Security Persistency

Set the following features to persistent or non-persistent mode. In non-persistent mode the information gathered by the specified feature does not persist a reboot of the system. Persistent mode is the default. This command reboots the system.

Configuration: In non-persistent mode, all configurations are set back to default when the system reboots.

CallHistory: In non-persistent mode call history is deleted when the system reboots.

InternalLogging: In non-persistent mode eventlog is deleted when the system reboots.

LocalPhonebook: In non-persistent mode local phone book is deleted when the system reboots.

DHCP: In non-persistent mode all IP related information is deleted when the system reboots.

ConfirmAndReboot: Reboots the system.

**Requires user role:** ADMIN

#### Parameters:

Configurations(r): <NonPersistent/Persistent>

CallHistory(r): <NonPersistent/Persistent>

InternalLogging(r): <NonPersistent/Persistent>

LocalPhonebook(r): <NonPersistent/Persistent>

DHCP(r): <NonPersistent/Persistent>

ConfirmAndReboot(r): <Yes>

#### Example:

```
xCommand Security Persistency Configurations: Persistent CallHistory:
Persistent InternalLogging: Persistent LocalPhonebook: Persistent DHCP:
Persistent ConfirmAndReboot: Yes
*r Persistency (status=OK):
** end
```

## Standby commands

### xCommand Standby Activate

Set the system in standby mode, which turns off the video outputs and put the camera into sleep mode.

**Requires user role:** USER

**Example:**

```
xCommand Standby Activate
*r ActivateResult (status=OK):
** end
```

### xCommand Standby Deactivate

Bring the system out of standby mode.

**Requires user role:** USER

**Example:**

```
xCommand Standby Deactivate
*r DeactivateResult (status=OK):
** end
```

### xCommand Standby ResetTimer

Set a temporary standby delay (in minutes). If the system is in standby mode when the reset timer is set, the system is brought out of standby mode. When left idle for the given delay the system goes into standby mode. Setting the reset timer does not affect the Standby Delay in the Advanced configuration menu (or by xConfiguration Standby Delay). Next time this delay is the valid standby delay.

**Requires user role:** USER

**Parameters:**

Delay(r): <1..480>

**Example:**

```
xCommand Standby ResetTimer Delay:10
*r ResetResult (status=OK):
** end
```

## SystemUnit commands

### xCommand SystemUnit OptionKey Add

Add an option key to support additional features.

**Requires user role:** ADMIN

**Parameters:**

Key(r): <S: 16, 24>

**Example:**

```
xCommand SystemUnit OptionKey Add Key:*****
*r OptionKeyResult (status=OK):
** end
```

### xCommand SystemUnit OptionKey RemoveAll

Removes all Option keys.

**Requires user role:** ADMIN

**Parameters:**

Confirm(r): <Yes>

**Example:**

```
xCommand SystemUnit OptionKey RemoveAll Confirm: Yes
*r OptionKeyResult (status=OK):
** end
```

### xCommand SystemUnit AdminPassword Set

Set an administrator password to restrict access the codec. After a restart of the codec this password also applies to the web interface.

**Requires user role:** ADMIN

**Parameters:**

Password(r): <S: 0, 64>

**Example:**

```
xCommand SystemUnit AdminPassword Set Password:*****
*r AdminPasswordSetResult (status=OK):
** end
```

### xCommand SystemUnit Diagnostics Run

This command runs all self-diagnostics commands on the system.

**Requires user role:** ADMIN

**Parameters:**

ResultSet: <Alerts/All/None>

**Example:**

```
xCommand SystemUnit Diagnostics Run
*r DiagnosticsResult (status=OK):
** end
```

### xCommand SystemUnit DateTime Set

Set the date and time for the system, if not available from NTP (Network Time Protocol).

**Requires user role:** ADMIN

**Parameters:**

Year: <2008..2037>

Month: <1..12>

Day: <1..31>

Hour: <0..23>

Minute: <0..59>

Second: <0..59>

**Example:**

```
xCommand SystemUnit DateTime Set Year:2012 Month:7 Day:3 Hour:12 Minute:0
Second:0
*r DateTimeSetResult (status=OK):
** end
```

### xCommand SystemUnit DateTime Get

Read the time and date from the system.

**Requires user role:** USER

**Example:**

```
xCommand SystemUnit DateTime get
*r DateTimeGetResult (status=OK):
Year: 2012
Month: 7
Day: 3
Hour: 12
Minute: 0
Second: 0
** end
```

### xCommand SystemUnit FactoryReset

Reset the codec to factory default settings. The call logs are deleted and all system parameters are reset to default values. All files that have been uploaded to the codec are deleted. Option key(s) are not affected.

As a default the system restarts after the factory reset, but other behavior can be forced by selecting a different TrailingAction.

TrailingAction: Select Shutdown or NoAction to override the default behavior (Restart).

**Requires user role:** ADMIN

**Parameters:**

Confirm(r): <Yes>

TrailingAction: <NoAction/Restart/Shutdown>

**Example:**

```
xCommand SystemUnit FactoryReset Confirm: Yes
*r FactoryResetConfirmResult (status=OK):
** end
```

### xCommand SystemUnit SoftwareUpgrade

Initiate a software upgrade by fetching the software on a given URL. If the server requires username and password these parameters must be included.

**Requires user role:** ADMIN

**Parameters:**

URL(r): <S: 0, 255>  
 UserName: <S: 0, 255>  
 Password: <S: 0, 255>

**Example:**

```
xCommand SystemUnit SoftwareUpgrade URL: "ftp://<ftp_server_ip_address>/s52000tc4_0_0.pkg" UserName: testDownload Password: 1234
*r SystemUnitSoftwareUpgradeResult (status=OK):
** end
```

### xCommand SystemUnit ConfigurationProfile Change

Select a previously saved configuration profile. NOTE: Requires a restart of the codec.

**Requires user role:** ADMIN

**Parameters:**

Name(r): <S: 0, 255>

**Example:**

```
xCommand SystemUnit ConfigurationProfile Change Name:
"My _ ConfigurationProfile _1"
*r ConfigurationProfileChangeResult (status=OK):
  Warning: New configuration profile will be active after next boot.
** end
```

### xCommand SystemUnit ConfigurationProfile Remove

Delete a configuration profile that has been stored in the system.

**Requires user role:** ADMIN

**Parameters:**

Name(r): <S: 0, 255>

**Example:**

```
xCommand SystemUnit ConfigurationProfile Remove Name:
"My _ ConfigurationProfile _1"
*r ConfigurationProfileRemoveResult (status=OK):
** end
```

### xCommand SystemUnit ConfigurationProfile SaveCurrentConfigurationAs

Save the current system settings into a configuration profile. Assign a name to the new profile. The name is the unique identifier of the profile.

**Requires user role:** ADMIN

**Parameters:**

Name(r): <S: 0, 255>

**Example:**

```
xCommand SystemUnit ConfigurationProfile SaveCurrentConfigurationAs Name:
"My _ ConfigurationProfile _1"
*r ConfigurationProfileSaveCurrentConfigurationResult (status=OK):
** end
```

### xCommand SystemUnit ConfigurationProfile List

List configuration profiles that has been stored in the system.

**Requires user role:** ADMIN

**Example:**

```
xCommand SystemUnit ConfigurationProfile List
*r ConfigurationProfileListResult (status=OK):
  Profile: My _ ConfigurationProfile _1
  Profile: My _ ConfigurationProfile _2
** end
```

### xCommand SystemUnit ConfigurationProfile CancelChange

Cancel the "ConfigurationProfile Change" command, that would otherwise take effect after next system boot.

**Requires user role:** ADMIN

**Example:**

```
xCommand SystemUnit ConfigurationProfile CancelChange
*r ConfigurationProfileCancelChangeResult (status=OK):
** end
```

### xCommand SystemUnit Notifications RemoveAll

Clears the list of system notifications that are reported by xStatus SystemUnit Notifications Text/Type.

**Requires user role:** ADMIN

**Example:**

```
xCommand SystemUnit Notifications RemoveAll
*r NotificationsRemoveAllResult (status=OK):
** end
```

## UserInterface commands

### xCommand UserInterface ScreenShot Get

Not supported in this software version.

**Requires user role:** ADMIN

**Parameters:**

ScreenShotId(r): <1..35>

**Example:**

```
xCommand UserInterface ScreenShot Get ScreenShotId:5
** end
```

### xCommand UserInterface ScreenShot List

Not supported in this software version.

**Requires user role:** ADMIN

**Example:**

```
xCommand UserInterface ScreenShot List
** end
```

### xCommand UserInterface ScreenShot Remove

Not supported in this software version.

**Requires user role:** ADMIN

**Parameters:**

ScreenShotId(r): <1..35>

**Example:**

```
xCommand UserInterface ScreenShot Remove ScreenShotId:5
*r RemoveResult (status=OK):
** end
```

### xCommand UserInterface ScreenShot Store

Not supported in this software version.

**Requires user role:** ADMIN

**Parameters:**

Type(r): <TouchMenu/OSD>

Name: <S: 0, 35>

ScreenShotId(r): <1..35>

**Example:**

```
xCommand UserInterface ScreenShot Store Type:OSD Name:5 ScreenShotId:5
*r StoreResult (status=OK):
** end
```

### xCommand UserInterface OSD Close

Clear all messages and indicators from the monitor(s).

**Requires user role:** USER

**Parameters:**

Element(r): <Menu>

**Example:**

```
xCommand UserInterface OSD Close Element: Menu
*r OsdCloseElementResult (status=OK):
** end
```

## UserManagement commands

### xCommand UserManagement RemoteSupportUser Create

Create a remote support user passphrase that Technical Assistance Center (TAC) can use to access the system for troubleshooting. You can set duration for the validity of the passphrase. It expires in 7 days by default.

**Requires user role:** ADMIN

**Parameters:**

ExpiryDays: <1..31>

**Example:**

```
xCommand UserManagement RemoteSupportUser Create
*r UserCreate (status=OK):
  Username: remotesupport
  Expiry: 2014-03-04 13:24:15 UTC
  Passphrase: qhRewXZsS0pWRF7fLe7A1Vg6E8ejWKT0LhRGg24EcuEL8DM71kEm2x-
hwXQn0we9i4gno2yDa4KNie8P5Q0vKp86r0b4SAqahRknvMN1UzhzPk17yP1SGyDQYYxL-
bQR5f1ILLIoyS7Ccwpcaq1JbF2Nw38rvxEH15nh7/Nopp80Fgxnr2pSG+2VYmVcjsCYBP16a6
zkVh7NikFdnulXED7+DYV1wQnefZ0kGL5rEOTy+L0OPEfU7y8q7ioMo9n+vucVOv1vjtHv/
ngIbWDZGswQHWFm+t38ACUJDi4dCh053XCyNMa9sGRL06kjEDNci+CTxV+Gvqo7C203btsfsW/
A==
** end
```

### xCommand UserManagement RemoteSupportUser Delete

Delete the remote support user created with the command xCommand UserManagement RemoteSupportUser Create.

**Requires user role:** ADMIN

**Example:**

```
xCommand UserManagement RemoteSupportUser Delete
*r UserDelete (status=OK):
  Username: remotesupport
** end
```

### xCommand UserManagement RemoteSupportUser DisablePermanently

Disable the creation of new remote support users. To enable the remote support user again you must factory reset your system.

**Requires user role:** ADMIN

**Parameters:**

Confirm(r): <Yes>

**Example:**

```
xCommand UserManagement RemoteSupportUser DisablePermanently Confirm: Yes
*r RemoteSupportUserDisablePermanently (status=OK):
** end
```

### xCommand UserManagement RemoteSupportUser GetState

Retrieves the state of the generated remote support user, if one exists.

**Requires user role:** ADMIN

**Example:**

```
xCommand UserManagement RemoteSupportUser GetState
*r RemoteSupportUserState (status=OK):
  Expiry: (None)
  Passphrase: (None)
  Username: remotesupport
  Valid: False
** end
```

## Video commands

### xCommand Video AutoPresentationStart Disable

Not in use in this software version.

**Requires user role:** ADMIN

**Example:**

```
xCommand Video AutoPresentationStart Disable
OK
*r VideoAutoPresentationStartDisableResult (status=OK):
** end
```

### xCommand Video AutoPresentationStart Enable

Not in use in this software version.

**Requires user role:** ADMIN

**Example:**

```
xCommand Video AutoPresentationStart Enable
OK
*r VideoAutoPresentationStartEnableResult (status=OK):
** end
```



### xCommand Video Input SetMainVideoSource

Set which input source is the main video source. You can identify the source either by the identifier of the connector that it is connected to; or by the identifier of the source itself.

This command requires the use of one, and only one, of these parameters: ConnectorId or SourceId.

ConnectorId: The identifier (ID) of the connector. Connector [n] has ID n. Run the following API command to find the ID: xStatus Video Input Connector. The connector ID is also printed on the codec connector panel.

SourceId: The identifier (ID) of the input source. Input Source [n] has ID n. Run the following API command to find the ID: xStatus Video Input Source.

**Requires user role:** USER

**Parameters:**

ConnectorId: <1..5>  
SourceId: <1..4>

**Example:**

```
xCommand Video Input SetMainVideoSource ConnectorId: 1
*r MainVideoSetResult (status=OK):
** end
```

### xCommand Video Input Source SetActiveConnector

Input Connector 4 (DVI-I) and Connector 5 (S-Video/Composite) cannot be active simultaneously. Use this command to select which connector is active.

ConnectorId: The identifier (ID) of the connector. Connector [n] has ID n. Run the following API command to find the ID: xStatus Video Input Connector. The connector ID is also printed on the codec connector panel.

**Requires user role:** USER

**Parameters:**

ConnectorId: <4..5>

**Example:**

```
xCommand Video Input Source SetActiveConnector ConnectorId: 4
*r ConnectorSetResult (status=OK):
** end
```

### xCommand Video PictureLayoutSet

Select the screen layout mode.

Target: Select if the target is the local layout or the remote layout.

CallId: The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

LayoutFamily: Select a layout family.

CustomLayoutName: Enter a name for the layout.

**Requires user role:** USER

**Parameters:**

Target: <local/remote>  
CallId: <0..65534>  
LayoutFamily(r): <auto/custom/equal/fullscreen/overlay/presentationlargespeaker/presentationssmallspeaker/prominent/single/speaker\_full>  
CustomLayoutName: <S: 1, 128>

**Example:**

```
xCommand Video PictureLayoutSet Target: Local LayoutFamily: equal
*r SetPictureLayoutResult (status=OK):
** end
```

### xCommand Video Layout Add

Add a new empty video layout composition. Returns the LayoutId. When the command has been issued you can use the result, the LayoutId of the newly created layout, to add frames with different video sources to the layout.

**Requires user role:** ADMIN

**Parameters:**

LayoutId: <1..2147483647>

**Example:**

```
xCommand Video Layout Add
OK
*r VideoLayoutAddResult (status=OK):
  LayoutId: 1
** end
```

### xCommand Video Layout Remove

Remove an existing video layout.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>

**Example:**

```
xCommand Video Layout Remove LayoutId: 1
*r VideoLayoutRemoveResult (status=OK):
** end
```

### xCommand Video Layout RemoveAll

Remove all existing video layouts.

**Requires user role:** ADMIN

**Example:**

```
xCommand Video Layout RemoveAll
*r VideoLayoutRemoveAllResult (status=OK):
** end
```

### xCommand Video Layout Reset

Reset all layout compositions to factory default.

**Requires user role:** ADMIN

**Example:**

```
xCommand Video Layout Reset
*r VideoLayoutResetResult (status=OK):
** end
```

### xCommand Video Layout Frame Add

Add a Video frame to an existing layout. Returns the FrameId. Select size and position of the frame, and the video source to be shown in the frame.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

FrameId: A unique identifier of the frame.

PositionX: The top-left X position of the frame.

PositionY: The top-left Y position of the frame.

Width: The width of the frame.

Height: The height of the frame.

Layer: The stacking order of the frames (1-5). Must be unique per frame per layout. Layer 5 is on top.

Border: Select whether or not the frame should have a border.

VideoSourceType: Select the video source to be used as the content of the frame. The parameter arguments are explained below:

Graphic: Not in use.

LocalInput: Select one of the local input sources.

LocalMain: Select what is currently the main source on the local side.

LocalPresentation: Select what is currently the default presentation source on the local side.

MostSpeaking: Select the current loudest speaker in the conference.

OtherMain: Select another site in a call. This involves logic in the codec to ensure that a site does not see itself. You can add several frames with OtherMain. The source and the layout engine automatically populate the frame content with one of the other sites main video, making sure that you do not see the same site more than once, nor yourself.

otherMainRemote: Select another remote site in a call. This involves logic in the codec to ensure that a site does not see itself. You can add several frames with otherMainRemote. The source and the layout engine automatically populate the frame content with one of the other remote sites main video, making sure that you do not see the same site more than once, nor yourself.

OwnMain: Select that each site can see its own self-view.

Presentation: Select what is currently the presentation source (there is always only one active H.239 content in a conference).

RemoteMain: Select the main source of remote site. The CallId must then be specified in the VideoSourceId parameter.

RemotePresentation: Select the presentation source of remote site. The CallId must then be specified in the VideoSourceId parameter.

VideoFile: Not in use.

VideoSourceId: A unique identifier of the video source.

If the VideoSourceType is set to RemoteMain the VideoSourceId is the CallId of the remote site.

If the VideoSourceType is set to LocalInput the VideoSourceId is the video input SourceId.

Otherwise set to 1.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>  
 FrameId: <1..65535>  
 PositionX: <0..10000>  
 PositionY: <0..10000>  
 Width: <1..10000>  
 Height: <1..10000>  
 Layer: <1..5>  
 Border: <On/Off>  
 VideoSourceType: <graphic/localInput/localMain/localPresentation/mostSpeaking/mostSpeaking\_orderedByPartNumb/otherMain/otherMainRemote/ownMain/participantNumber/presentation/remoteMain/remotePresentation/videoFile>  
 VideoSourceId: <0..2147483647>

**Example:**

```
xCommand Video Layout Frame Add LayoutId:1 PositionX:100 PositionY:100
Width:9800 Height:9800 Layer:1 Border:off VideoSourceType:localInput
VideoSourceId:1
OK
*r VideoLayoutFrameAddResult (status=OK):
  FrameId: 1
** end
```

**xCommand Video Layout Frame Remove**

Remove a video frame from an existing layout.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

FrameId: A unique identifier of the frame, which was created when the xCommand Video Frame Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>  
 FrameId(r): <1..65535>

**Example:**

```
xCommand Video Layout Frame Remove LayoutId:1 FrameId:1
*r VideoLayoutFrameRemoveResult (status=OK):
** end
```

**xCommand Video Layout Frame Update**

Change the details of an existing frame in a video layout.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

FrameId: A unique identifier of the frame, which was created when the xCommand Video Frame Add command was issued.

PositionX: The top-left X position of the frame.

PositionY: The top-left Y position of the frame.

Width: The width of the frame.

Height: The height of the frame.

Layer: The stacking order of the frames (1-5). Must be unique per frame per layout. Layer 5 is on top.

Border: Select whether or not the frame should have a border.

VideoSourceType: Select the video source to be used as the content of the frame. The parameter arguments are explained below:

Graphic: Not in use.

LocalInput: Select one of the local input sources.

LocalMain: Select what is currently the main source on the local side.

LocalPresentation: Select what is currently the default presentation source on the local side.

MostSpeaking: Select the current loudest speaker in the conference.

OtherMain: Select another site in a call. This involves logic in the codec to ensure that a site does not see itself. You can add several frames with OtherMain. The source and the layout engine automatically populate the frame content with one of the other sites main video, making sure that you do not see the same site more than once, nor yourself.

otherMainRemote: Select another remote site in a call. This involves logic in the codec to ensure that a site does not see itself. You can add several frames with otherMainRemote. The source and the layout engine automatically populate the frame content with one of the other remote sites main video, making sure that you do not see the same site more than once, nor yourself.

OwnMain: Select that each site can see its own self-view.

Presentation: Select what is currently the presentation source (there is always only one active H.239 content in a conference).

RemoteMain: Select the main source of remote site. The CallId must then be specified in the VideoSourceId parameter.

RemotePresentation: Select the presentation source of remote site. The CallId must then be specified in the VideoSourceId parameter.

VideoFile: Not in use.

VideoSourceId: A unique identifier of the video source.

If the VideoSourceType is set to RemoteMain the VideoSourceId is the CallId of the remote site.

If the VideoSourceType is set to LocalInput the VideoSourceId is the video input SourceId.

Otherwise set to 1.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>  
 FrameId(r): <1..65535>  
 PositionX: <0..10000>  
 PositionY: <0..10000>  
 Width: <1..10000>  
 Height: <1..10000>  
 Layer: <1..5>  
 Border: <On/Off>  
 VideoSourceType: <graphic/localInput/localMain/localPresentation/mostSpeaking/mostSpeaking\_orderedByPartNumb/otherMain/otherMainRemote/ownMain/participantNumber/presentation/remoteMain/remotePresentation/videoFile>  
 VideoSourceId: <0..2147483647>

**Example:**

```
xCommand Video Layout Frame Update LayoutId:1 FrameId:1
PositionX:200 PositionY:200 Width:9600 Height:9600 Layer:1 Border:off
VideoSourceType:localInput VideoSourceId:1
OK
*r VideoLayoutFrameUpdateResult (status=OK):
** end
```

**xCommand Video Layout Assign**

Assign an existing layout to any local or remote output. The defined video composition appears on the specified local output or in the specified remote video stream.

CallId: A unique identifier for the call. The CallId is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

OutputId: A unique identifier for the local output, which was created when the xCommand Audio LocalOutput Add command was issued.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

CallId(r): <0..65534>  
 OutputId(r): <0..65534>  
 LayoutId(r): <1..2147483647>

**Example:**

```
xCommand Video Layout Assign CallId:1 OutputId:1 LayoutId:2
OK
*r VideoLayoutAssignResult (status=OK):
** end
```

**xCommand Video Layout AssignLocalOutput**

Assign an existing layout to a local output. The defined video composition appears on the specified local output.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

OutputId: A unique identifier for the local output, which was created when the xCommand Audio LocalOutput Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>  
 OutputId(r): <0..65534>

**Example:**

```
xCommand Video Layout AssignLocalOutput OutputId:1 LayoutId:2
OK
*r VideoLayoutAssignLocalOutputResult (status=OK):
** end
```

### xCommand Video Layout AssignCall

Assign the call layout (main stream) to the remote output. The defined video composition appears on the remote main video stream.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

CallId: A unique identifier for the call. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>

CallId: <0..65534>

**Example:**

```
xCommand Video Layout AssignCall LayoutId:2 CallId:1
OK
*r VideoLayoutAssignCallResult (status=OK):
** end
```

### xCommand Video Layout AssignPresentation

Assign the presentation layout (dual stream) to the remote output. The defined video composition appears on the remote dual video stream.

LayoutId: A unique identifier for the layout, which was created when the xCommand Video Layout Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

LayoutId(r): <1..2147483647>

**Example:**

```
xCommand Video Layout AssignPresentation LayoutId:2
OK
*r VideoLayoutAssignPresentationResult (status=OK):
** end
```

### xCommand Video Layout UnAssign

Remove the defined video layout, and go back to default.

CallId: A unique identifier for the call. The CallID is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

OutputId: A unique identifier for the local output, which was created when the xCommand Audio LocalOutput Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

CallId(r): <0..65534>

OutputId(r): <0..65534>

**Example:**

```
xCommand Video Layout UnAssign CallId: 1 OutputId: 1
*r VideoLayoutUnassignResult (status=OK):
** end
```

### xCommand Video Layout UnAssignLocalOutput

Remove the defined video layout, and go back to default.

OutputId: A unique identifier for the local output, which was created when the xCommand Audio LocalOutput Add command was issued.

**Requires user role:** ADMIN

**Parameters:**

OutputId(r): <0..65534>

**Example:**

```
xCommand Video Layout UnAssignLocalOutput OutputId:1
OK
*r VideoLayoutUnassignLocalOutputResult (status=OK):
** end
```

### xCommand Video Layout UnAssignCall

Remove the defined video layout, and go back to default.

CallId: A unique identifier for the call. The CallId is returned when the xCommand Dial command is run. During the call you can run the xStatus Call command to see the CallId.

**Requires user role:** ADMIN

**Parameters:**

CallId: <0..65534>

**Example:**

```
xCommand Video Layout UnAssignCall CallId:1
OK
*r VideoLayoutUnAssignCallResult (status=OK):
** end
```

### xCommand Video Layout UnAssignPresentation

Remove the defined video layout, and go back to default.

**Requires user role:** ADMIN

**Example:**

```
xCommand Video Layout UnAssignPresentation
OK
*r VideoLayoutUnAssignPresentationResult (status=OK):
** end
```

### xCommand Video Layout SetPresentationView

Set the presentation view mode.

View: Select Default when you want the presentation to be viewed with the default settings for the codec. Select Maximized when you want the presentation to be displayed in full screen. Select Minimized when you want the presentation to be displayed in a small picture on screen.

**Requires user role:** ADMIN

**Parameters:**

View(r): <Default/Maximized/Minimized>

**Example:**

```
xCommand Video Layout SetPresentationView View:Default
OK
*r VideoLayoutSetPresentationViewResult (status=OK):
** end
```

### xCommand Video Layout LoadDb

Loads and starts using the specified video layout database. The default video layout database is initially provided by the system. The custom database is generated by the Cisco TC Console tool and is made available to the codec from within the TC Console tool. The TC Console software is found at the Developer Zone web page. Go to: <http://developer.cisco.com/web/telepresence-developer/tools/integrators/tc-console>.

Custom: The system uses the custom video layout database which generated by the Cisco TC Console tool.

CustomAutoModes: The system uses the auto mode part of the custom video layout database.

Default: The system use the default video layout database which is provided by the system.

**Requires user role:** ADMIN

**Parameters:**

Type(r): <Custom/CustomAutoModes/Default>

**Example:**

```
xCommand Video Layout LoadDb Type: Default
*r VideoLayoutLoadDbResult (status=OK):
** end
```

### xCommand Video Layout Frame List

Lists the data related to all layout frames created by command 'xCommand Video Layout Frame Add' for a specific layout identified by 'LayoutId'

**Requires user role:** ADMIN

**Parameters:**

LayoutId: <1..2147483647>

**Example:**

```
xCommand Video Layout Frame List LayoutId: 1
OK
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 PositionX: 0
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 PositionY: 0
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 Width: 10000
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 Height: 10000
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 Layer: 1
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 Border: Off
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 VideoSourceType:
localInput
*r VideoLayoutFrameListResult LayoutId 1 FrameId 1 VideoSourceId: 1
** end
```

### xCommand Video Layout List

Lists all identification numbers for layouts created by command 'xCommand Video Layout Add'.

**Requires user role:** ADMIN

**Example:**

```
xCommand Video Layout List
OK
*r VideoLayoutListResult LayoutId: 1
*r VideoLayoutListResult LayoutId: 3
** end
```

### xCommand Video OSD Close

Closes all menus on the on-screen display.

Element: The on-screen menu.

**Requires user role:** ADMIN

**Parameters:**

Element(r): <Menu>

**Example:**

```
xCommand Video OSD Close Element: Menu
*r OsdCloseElementResult (status=OK):
** end
```

### xCommand Video PIP ActiveSpeaker Set

Sets position for the active speakers PiP (picture in picture).

Position: Predefined positions.

CenterLeft: The ActiveSpeaker PiP appears on the left side of the screen, in center.

CenterRight: The ActiveSpeaker PiP appears on the right side of the screen, in center.

LowerLeft: The ActiveSpeaker PiP appears in the lower left corner of the screen.

LowerRight: The ActiveSpeaker PiP appears in the lower right corner of the screen.

UpperCenter: The ActiveSpeaker PiP appears on top of the screen, in center.

UpperLeft: The ActiveSpeaker PiP appears in the upper left corner of the screen.

UpperRight: The ActiveSpeaker PiP appears in the upper right corner of the screen.

**Requires user role:** ADMIN

**Parameters:**

Position(r): <CenterLeft/CenterRight/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>

**Example:**

```
xCommand Video PIP ActiveSpeaker Set Position: UpperRight
*r ActiveSpeakerPipSetResult (status=OK):
** end
```

### xCommand Video PIP Presentation Set

Sets position for the presentation PiP (picture in picture).

Position: Predefined positions.

CenterLeft: The presentation PiP appears on the left side of the screen, in center.

CenterRight: The presentation PiP appears on the right side of the screen, in center.

LowerLeft: The presentation PiP appears in the lower left corner of the screen.

LowerRight: The presentation PiP appears in the lower right corner of the screen.

UpperCenter: The presentation PiP appears on top of the screen, in center.

UpperLeft: The presentation PiP appears in the upper left corner of the screen.

UpperRight: The presentation PiP appears in the upper right corner of the screen.

**Requires user role:** ADMIN

**Parameters:**

Position(r): <CenterLeft/CenterRight/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>

**Example:**

```
xCommand Video PIP Presentation Set Position: LowerLeft
*r PresentationPipSetResult (status=OK):
** end
```

### xCommand Video Selfview Set

Sets self-view on/off and specifies its size and position. If the parameter is not specified, current value is used.

Mode: Selfview on/off

FullscreenMode: Self-view in fullscreen or pip.

PIPPosition: Predefined PIP positions.

FullscreenMode: Choose between displaying the self-view in full screen or not.

PIPPosition: Select the position for the self-view image.

CenterLeft: The self-view PiP appears on the left side of the screen, in center.

CenterRight: The self-view PiP appears on the right side of the screen, in center.

LowerLeft: The self-view PiP appears in the lower left corner of the screen.

LowerRight: The self-view PiP appears in the lower right corner of the screen.

UpperCenter: The self-view PiP appears on top of the screen, in center.

UpperLeft: The self-view PiP appears in the upper left corner of the screen.

UpperRight: The self-view PiP appears in the upper right corner of the screen.

OnMonitorRole: Displays self-view on monitors with this role.

**Requires user role:** ADMIN

**Parameters:**

Mode: <On/Off>

FullscreenMode: <On/Off>

PIPPosition: <CenterLeft/CenterRight/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>

OnMonitorRole: <First/Fourth/Second/Third>

**Example:**

Example 1

```
xCommand Video Selfview Set Mode: On FullscreenMode: Off PIPPosition:
CenterLeft OnMonitorRole: First
```

OK

```
*r SelfviewSetResult (status=OK):
```

```
** end
```

Example 2

```
xCommand Video Selfview Set FullscreenMode: On OnMonitorRole: Second
```

OK

```
*r SelfviewSetResult (status=OK):
```

```
** end
```

### xCommand Video PIP Presentation Set

Sets position for the presentation PiP (picture in picture).

Position: Predefined positions.

CenterLeft: The presentation PiP appears on the left side of the screen, in center.

CenterRight: The presentation PiP appears on the right side of the screen, in center.

LowerLeft: The presentation PiP appears in the lower left corner of the screen.

LowerRight: The presentation PiP appears in the lower right corner of the screen.

UpperCenter: The presentation PiP appears on top of the screen, in center.

UpperLeft: The presentation PiP appears in the upper left corner of the screen.

UpperRight: The presentation PiP appears in the upper right corner of the screen.

**Requires user role:** ADMIN

**Parameters:**

Position(r): <CenterLeft/CenterRight/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>

**Example:**

```
xCommand Video PIP Presentation Set Position: LowerLeft
```

```
*r PresentationPipSetResult (status=OK):
```

```
** end
```

### xCommand Video PreviewFilmstrip Set

Moves the location of the filmstrip associated with the layouts used in presentation preview mode. Not in use in this software version.

LowerCenter: The preview appears on the bottom of the screen, in center.

LowerLeft: The preview appears in the lower left corner of the screen.

LowerRight: The preview appears in the lower right corner of the screen.

UpperCenter: The preview appears on top of the screen, in center.

UpperLeft: The preview appears in the upper left corner of the screen.

UpperRight: The preview appears in the upper right corner of the screen.

**Requires user role:** ADMIN

**Parameters:**

Position(r): <LowerCenter/LowerLeft/LowerRight/UpperCenter/UpperLeft/UpperRight>

**Example:**

```
xCommand Video PreviewFilmstrip Set Position: LowerCenter
```

```
*r PreviewFilmstripSetResult (status=OK):
```

```
** end
```



## Experimental commands

The Experimental commands are for testing only and should not be used unless agreed with Cisco. These commands are not documented and WILL change in later releases.

Chapter 5

*xStatus commands*

## Description of the xStatus commands

In this chapter, you can find all of the xStatus commands and the responses. Status type commands return information about the system and system processes. You can query all information or just some of it.

We recommend you visit our web site regularly for updated versions of the manual.

Go to: [▶http://www.cisco.com/go/sx-docs](http://www.cisco.com/go/sx-docs)

<b>Audio status.....</b>	<b>138</b>	xStatus Call [n] TransmitCallRate.....	142
xStatus Audio .....	138	xStatus Call [n] ReceiveCallRate.....	142
xStatus Audio Microphones Mute .....	138	xStatus Call [n] FacilityServiceId .....	142
xStatus Audio Volume .....	138	xStatus Call [n] Encryption Type .....	142
xStatus Audio VolumeMute .....	138	xStatus Call [n] PlacedOnHold.....	142
xStatus Audio Input LocalInput [n] Name .....	138	xStatus Call [n] Duration .....	143
xStatus Audio Input LocalInput [n] MixerMode.....	138	xStatus Call [n] SecurityStatus .....	143
xStatus Audio Input LocalInput [n] Mute.....	138	xStatus Call [n] AnswerState .....	143
xStatus Audio Input LocalInput [n] Channels.....	139	xStatus Call [n] ModifyState .....	143
xStatus Audio Input LocalInput [n] AGC .....	139	xStatus Call [n] DeviceType .....	143
xStatus Audio Input LocalInput [n] Connector.....	139		
xStatus Audio Input RemoteInput [n] CallId .....	139	<b>Camera status .....</b>	<b>144</b>
xStatus Audio Input Connectors Microphone [n] EcReferenceDelay .....	139	xStatus Camera.....	144
xStatus Audio Output LocalOutput [n] Name .....	139	xStatus Camera [n] Connected .....	144
xStatus Audio Output LocalOutput [n] Loudspeaker.....	140	xStatus Camera [n] HardwareId .....	144
xStatus Audio Output LocalOutput [n] Channels.....	140	xStatus Camera [n] Manufacturer.....	144
xStatus Audio Output LocalOutput [n] Connector.....	140	xStatus Camera [n] Model .....	144
xStatus Audio Output LocalOutput [n] Input [n] Gain.....	140	xStatus Camera [n] SoftwareId .....	144
xStatus Audio Output RemoteOutput [n] CallId .....	140	xStatus Camera [n] SerialNumber .....	144
xStatus Audio Output RemoteOutput [n] Input [n] Gain.....	140	xStatus Camera [n] IpAddress.....	144
		xStatus Camera [n] MacAddress.....	145
<b>Call status.....</b>	<b>141</b>	xStatus Camera [n] Position Pan .....	145
xStatus Call.....	141	xStatus Camera [n] Position Tilt.....	145
xStatus Call [n] Status.....	141	xStatus Camera [n] Position Zoom.....	145
xStatus Call [n] Direction .....	141	xStatus Camera [n] Position Focus.....	145
xStatus Call [n] Protocol .....	141	xStatus Camera [n] Capabilities Options.....	145
xStatus Call [n] CallType .....	141	xStatus Camera [n] Flip.....	145
xStatus Call [n] RemoteNumber .....	141	xStatus Camera [n] UpgradeStatus.....	146
xStatus Call [n] CallbackNumber .....	141	xStatus Camera [n] DownloadProgress .....	146
xStatus Call [n] DisplayName.....	142		

**Conference status** ..... 146

- xStatus Conference..... 146
- xStatus Conference Presentation Mode ..... 146
- xStatus Conference Presentation Protocol..... 146
- xStatus Conference Presentation Resolution Height..... 146
- xStatus Conference Presentation Resolution Width..... 147
- xStatus Conference Presentation SiteId ..... 147
- xStatus Conference Presentation LocalSource ..... 147
- xStatus Conference Presentation LocalSendingMode ..... 147
- xStatus Conference Presentation LastLocalSource ..... 147
- xStatus Conference Site [n] Capabilities FECC NumberOfPresets..... 147
- xStatus Conference Site [n] Capabilities FECC NumberOfSources..... 147
- xStatus Conference Site [n] Capabilities FECC Source [n] SourceId ..... 147
- xStatus Conference Site [n] Capabilities FECC Source [n] Name ..... 148
- xStatus Conference Site [n] Capabilities FECC Source [n] Options ..... 148
- xStatus Conference Site [n] Capabilities FECC Mode..... 148
- xStatus Conference Site [n] Capabilities Presentation..... 148
- xStatus Conference Site [n] MicrophonesMuted ..... 148
- xStatus Conference Site [n] Manufacturer ..... 148
- xStatus Conference Site [n] SoftwareID..... 148
- xStatus Conference Site [n] BlackScreenCause ..... 149
- xStatus Conference Site [n] ConferenceExtended ..... 149
- xStatus Conference Site [n] BookingId..... 149
- xStatus Conference Site [n] SecurityStatus ..... 149
- xStatus Conference Site [n] UnattendedTransfer..... 149
- xStatus Conference Site [n] AttendedTransfer..... 150
- xStatus Conference Site [n] Appearance ..... 150
- xStatus Conference Site [n] GCI..... 150
- xStatus Conference Site [n] CalText..... 150
- xStatus Conference Site [n] Hold ..... 150
- xStatus Conference Site [n] Preserved ..... 150
- xStatus Conference Line [n] Mode..... 150
- xStatus Conference Line [n] Appearance Status ..... 150
- xStatus Conference Line [n] Appearance URI..... 151
- xStatus Conference Line [n] Appearance GCI ..... 151
- xStatus Conference Multipoint Mode..... 151
- xStatus Conference DoNotDisturb..... 151

- xStatus Conference ActiveSpeaker Mode..... 151
- xStatus Conference ActiveSpeaker SiteId..... 151
- xStatus Conference SelectedCallProtocol..... 151

**Diagnostics status** ..... 152

- xStatus Diagnostics..... 152
- xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Jitter..... 152
- xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Jitter..... 152
- xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Jitter..... 152
- xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Jitter..... 152
- xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Jitter..... 152
- xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Jitter..... 152
- xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Packets ..... 152
- xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Packets..... 152
- xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Packets ..... 152
- xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Packets ..... 152
- xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Packets ..... 152
- xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Packets ..... 152
- xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Loss..... 153
- xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Loss..... 153
- xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Loss ..... 153
- xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Loss ..... 153
- xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Loss..... 153
- xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Loss ..... 153
- xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 LastIntervalLost..... 153
- xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 LastIntervalLost..... 153
- xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 LastIntervalLost..... 153
- xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 LastIntervalLost..... 153
- xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 LastIntervalLost..... 153
- xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 LastIntervalLost..... 153
- xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 LastIntervalReceived..... 154
- xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 LastIntervalReceived..... 154
- xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 LastIntervalReceived ..... 154
- xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 LastIntervalReceived..... 154
- xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 LastIntervalReceived..... 154
- xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 LastIntervalReceived ..... 154
- xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Drop ..... 154

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Drop .....	154	<b>H323 status</b> .....	<b>158</b>
xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Drop .....	154	xStatus H323 .....	158
xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Drop .....	154	xStatus H323 Gatekeeper Status .....	158
xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Drop .....	154	xStatus H323 Gatekeeper Address .....	158
xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Drop .....	154	xStatus H323 Gatekeeper Port .....	158
xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Bytes .....	155	xStatus H323 Gatekeeper Reason .....	158
xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Bytes .....	155	<b>HttpFeedback status</b> .....	<b>159</b>
xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Bytes .....	155	xStatus HttpFeedback .....	159
xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Bytes .....	155	xStatus HttpFeedback [1..4] URL .....	159
xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Bytes .....	155	xStatus HttpFeedback [1..4] Expression [1..15] .....	159
xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Bytes .....	155	<b>ICE status</b> .....	<b>159</b>
xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 ChannelRate .....	155	xStatus ICE Configured .....	159
xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 ChannelRate .....	155	xStatus ICE Defaultcandidate .....	159
xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 ChannelRate .....	155	xStatus ICE Turn IP .....	159
xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 ChannelRate .....	155	xStatus ICE Turn Hostname .....	160
xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 ChannelRate .....	155	xStatus ICE Turn Username .....	160
xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 ChannelRate .....	155	xStatus ICE Call Result .....	160
xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 MaxJitter .....	156	xStatus ICE Call Local Candidate .....	160
xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 MaxJitter .....	156	xStatus ICE Call Local IP .....	160
xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 MaxJitter .....	156	xStatus ICE Call Remote Candidate .....	160
xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 MaxJitter .....	156	xStatus ICE Call Remote IP .....	161
xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 MaxJitter .....	156	xStatus ICE Turn Discovermode .....	161
xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 MaxJitter .....	156	xStatus ICE Turn Bandwidth .....	161
<b>GPIO status</b> .....	<b>156</b>	<b>Logging status</b> .....	<b>162</b>
xStatus GPIO Pin [1..4] State .....	156	xStatus Logging ExtendedLogging Mode .....	162
<b>H320 status</b> .....	<b>157</b>	<b>MediaChannels status</b> .....	<b>162</b>
xStatus H320 .....	157	xStatus MediaChannels .....	162
xStatus H320 Gateway Status .....	157	xStatus MediaChannels Call [n] IncomingAudioChannel [n] Encryption Status .....	162
xStatus H320 Gateway Address .....	157	xStatus MediaChannels Call [n] IncomingAudioChannel [n] Audio Protocol .....	162
xStatus H320 Gateway Number .....	157	xStatus MediaChannels Call [n] IncomingAudioChannel [n] Audio Mute .....	163
xStatus H320 Gateway Mode .....	157	xStatus MediaChannels Call [n] IncomingAudioChannel [n] Audio Channels .....	163
xStatus H320 Gateway Reason .....	157	xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Local IpAddress .....	163
xStatus H320 Gateway Id .....	157		

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Local Port ..... 163

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Remote IpAddress ..... 163

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Remote Port..... 163

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTCP Local IpAddress ..... 164

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTCP Local Port ..... 164

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTCP Remote IpAddress..... 164

xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RCTP Remote Port ..... 164

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Encryption Status..... 164

xStatus MediaChannels Call [n] IncomingVideoChannel [n] ChannelRole ..... 164

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video Protocol ..... 165

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video FrameRate ..... 165

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video ResolutionX ..... 165

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video ResolutionY ..... 165

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Local IpAddress ..... 165

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Local Port..... 165

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Remote IpAddress ..... 166

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Remote Port..... 166

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTCP Local IpAddress ..... 166

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTCP Local Port ..... 166

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTCP Remote IpAddress..... 166

xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RCTP Remote Port ..... 166

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Encryption Status ..... 167

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Audio Protocol ..... 167

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Audio Channels ..... 167

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Local IpAddress..... 167

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Local Port ..... 167

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Remote IpAddress ..... 167

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Remote Port..... 168

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTCP Local IpAddress ..... 168

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTCP Local Port ..... 168

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTCP Remote IpAddress ..... 168

xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RCTP Remote Port..... 168

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Encryption Status ..... 168

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] ChannelRole ..... 169

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video Protocol ..... 169

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video FrameRate ..... 169

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video ResolutionX ..... 169

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video ResolutionY ..... 169

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Local IpAddress ..... 169

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Local Port ..... 170

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Remote IpAddress ..... 170

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Remote Port..... 170

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTCP Local IpAddress ..... 170

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTCP Local Port ..... 170

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTCP Remote IpAddress..... 170

xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RCTP Remote Port ..... 171

**Network status ..... 171**

xStatus Network ..... 171

xStatus Network 1 Ethernet MacAddress ..... 171

xStatus Network 1 Ethernet Speed ..... 171

xStatus Network 1 IPv4 Address ..... 171

xStatus Network 1 IPv4 SubnetMask ..... 172

xStatus Network 1 IPv4 Gateway ..... 172

xStatus Network 1 IPv4 DHCP TftpServerAddress ..... 172

xStatus Network 1 IPv4 DHCP TmsServer ..... 172

xStatus Network 1 IPv4 DHCP ProvisioningServer ..... 172

xStatus Network 1 IPv4 DHCP ProvisioningDomain ..... 172

xStatus Network 1 IPv4 DHCP TftpServer ..... 173

xStatus Network 1 IPv6 Address ..... 173

xStatus Network 1 IPv6 Gateway ..... 173

xStatus Network 1 VLAN Voice VlanId ..... 173

xStatus Network 1 CDP Platform ..... 173

xStatus Network 1 CDP Version ..... 173

xStatus Network 1 CDP Capabilities ..... 174

xStatus Network 1 CDP DeviceId ..... 174

xStatus Network 1 CDP PortId ..... 174

xStatus Network 1 CDP Duplex ..... 174

xStatus Network 1 CDP VTPMgmtDomain ..... 174

xStatus Network 1 CDP Address ..... 174

xStatus Network 1 CDP PrimaryMgmtAddress ..... 175

xStatus Network 1 CDP SysName ..... 175

xStatus Network 1 CDP SysObjectID.....	175	xStatus Provisioning CUCM CAPF ServerPort .....	179
xStatus Network 1 CDP VoIPApplianceVlanID .....	175	xStatus Provisioning CUCM CAPF LSC .....	180
xStatus Network 1 DNS Domain Name.....	175	xStatus Provisioning CUCM CAPF OperationState.....	180
xStatus Network 1 DNS Server [n] Address.....	175	xStatus Provisioning CUCM CAPF OperationResult .....	180
<b>NetworkServices status .....</b>	<b>176</b>	xStatus Provisioning CUCM ProvisionSecurity .....	181
xStatus NetworkServices.....	176	xStatus Provisioning CUCM UserId.....	181
xStatus NetworkServices NTP Address .....	176	xStatus Provisioning CUCM CTL State .....	181
xStatus NetworkServices NTP CurrentAddress .....	176	xStatus Provisioning CUCM ITL State .....	181
xStatus NetworkServices NTP Status .....	176	xStatus Provisioning CUCM ExtensionMobility Enabled .....	181
<b>Preset status.....</b>	<b>176</b>	xStatus Provisioning CUCM ExtensionMobility LoggedIn.....	181
xStatus Preset .....	176	xStatus Provisioning CUCM ExtensionMobility LastLoggedInUserId .....	181
xStatus Preset [1..15] Defined.....	176	xStatus Provisioning CUCM TVS Proxy [n] Server .....	182
xStatus Preset [1..15] Type .....	176	xStatus Provisioning CUCM TVS Proxy [n] IPv6Address .....	182
xStatus Preset [1..15] Description.....	176	xStatus Provisioning CUCM TVS Proxy [n] Port.....	182
<b>Provisioning status .....</b>	<b>177</b>	xStatus Provisioning CUCM TVS Proxy [n] Priority .....	182
xStatus Provisioning .....	177	<b>Security status.....</b>	<b>182</b>
xStatus Provisioning Status.....	177	xStatus Security .....	182
xStatus Provisioning Reason .....	177	xStatus Security FIPS Mode.....	182
xStatus Provisioning Server .....	177	xStatus Security Persistency Configurations .....	182
xStatus Provisioning NextRetry.....	177	xStatus Security Persistency CallHistory .....	182
xStatus Provisioning Software UpgradeStatus SessionId .....	177	xStatus Security Persistency InternalLogging.....	183
xStatus Provisioning Software UpgradeStatus LastChange.....	177	xStatus Security Persistency LocalPhonebook .....	183
xStatus Provisioning Software UpgradeStatus Status.....	178	xStatus Security Persistency DHCP.....	183
xStatus Provisioning Software UpgradeStatus Phase .....	178	xStatus Security Audit Server Port .....	183
xStatus Provisioning Software UpgradeStatus Message .....	178	<b>SIP status .....</b>	<b>184</b>
xStatus Provisioning Software UpgradeStatus VersionId .....	178	xStatus SIP .....	184
xStatus Provisioning Software UpgradeStatus URL .....	178	xStatus SIP Profile 1 Proxy [1] Status .....	184
xStatus Provisioning Software UpgradeStatus SecondsUntilUpgrade .....	178	xStatus SIP Profile 1 Proxy [1] Address.....	184
xStatus Provisioning Software Current VersionId .....	179	xStatus SIP Profile 1 Secure .....	184
xStatus Provisioning Software Current URL .....	179	xStatus SIP Profile 1 Verified .....	184
xStatus Provisioning Software Current CompletedAt.....	179	xStatus SIP Profile 1 Authentication.....	184
xStatus Provisioning CUCM CAPF Mode.....	179	xStatus SIP Profile 1 Mailbox MessagesWaiting.....	185
xStatus Provisioning CUCM CAPF ServerName.....	179	xStatus SIP Profile 1 CallForward Mode .....	185
		xStatus SIP Profile 1 CallForward URI.....	185

xStatus SIP Profile 1 CallForward DisplayName .....	185	xStatus SystemUnit State Subsystem Application.....	191
xStatus SIP Profile 1 Registration [n] Status.....	185	xStatus SystemUnit ContactInfo .....	191
xStatus SIP Profile 1 Registration [n] Reason.....	185	xStatus SystemUnit ContactName.....	191
xStatus SIP Profile 1 Registration [n] URI .....	185	xStatus SystemUnit Notifications Notification [n] Type .....	191
xStatus SIP Profile 1 DirectoryURI Primary URI .....	186	xStatus SystemUnit Notifications Notification [n] Text .....	191
<b>Standby status.....</b>	<b>186</b>	xStatus SystemUnit Diagnostics LastRun .....	192
xStatus Standby Active .....	186	xStatus SystemUnit Diagnostics Message [n] Type .....	192
<b>SystemUnit status.....</b>	<b>187</b>	xStatus SystemUnit Diagnostics Message [n] Level .....	192
xStatus SystemUnit .....	187	xStatus SystemUnit Diagnostics Message [n] Description .....	192
xStatus SystemUnit ProductType.....	187	xStatus SystemUnit Diagnostics Message [n] References .....	192
xStatus SystemUnit ProductId .....	187	<b>Time status .....</b>	<b>193</b>
xStatus SystemUnit ProductPlatform.....	187	xStatus Time.....	193
xStatus SystemUnit Uptime .....	187	xStatus Time ZoneOlson.....	193
xStatus SystemUnit Software Application .....	187	xStatus Time SystemTime.....	193
xStatus SystemUnit Software Version .....	187	<b>UserInterface status .....</b>	<b>193</b>
xStatus SystemUnit Software Name.....	187	xStatus UserInterface OSD Output .....	193
xStatus SystemUnit Software ReleaseDate .....	188	<b>Video status.....</b>	<b>194</b>
xStatus SystemUnit Software MaxVideoCalls .....	188	xStatus Video Input .....	194
xStatus SystemUnit Software MaxAudioCalls .....	188	xStatus Video Monitors .....	194
xStatus SystemUnit Software OptionKeys MultiSite.....	188	xStatus Video Input Connector [n] Connected.....	194
xStatus SystemUnit Software OptionKeys PremiumResolution.....	188	xStatus Video Input Connector [n] SignalState .....	194
xStatus SystemUnit Software OptionKeys Encryption.....	188	xStatus Video Input Connector [n] SourceId .....	194
xStatus SystemUnit Hardware Module SerialNumber .....	188	xStatus Video Input Connector [n] Type.....	194
xStatus SystemUnit Hardware Module CompatibilityLevel.....	189	xStatus Video Input LastConnectedSource.....	195
xStatus SystemUnit Hardware MainBoard SerialNumber .....	189	xStatus Video Input MainVideoSource.....	195
xStatus SystemUnit Hardware MainBoard Identifier.....	189	xStatus Video Input Source [n] ConnectorId .....	195
xStatus SystemUnit Hardware MonitoringSoftware.....	189	xStatus Video Input Source [n] Resolution Height.....	195
xStatus SystemUnit Hardware Temperature.....	189	xStatus Video Input Source [n] Resolution Width.....	195
xStatus SystemUnit Hardware TemperatureThreshold .....	189	xStatus Video Input Source [n] Resolution RefreshRate .....	195
xStatus SystemUnit Hardware UDI.....	190	xStatus Video Input Source [n] Resolution FormatType .....	195
xStatus SystemUnit State System .....	190	xStatus Video Input Source [n] Resolution FormatStatus .....	195
xStatus SystemUnit State MaxNumberOfCalls .....	190	xStatus Video Input Source [n] MediaChannelId .....	196
xStatus SystemUnit State MaxNumberOfActiveCalls .....	190	xStatus Video Output .....	196
xStatus SystemUnit State NumberOfActiveCalls.....	190	xStatus Video Output Connector [n] Connected.....	196
xStatus SystemUnit State NumberOfSuspendedCalls .....	190	xStatus Video Output Connector [n] MonitorRole .....	196
xStatus SystemUnit State NumberOfInProgressCalls .....	190		



xStatus Video Output Connector [n] Resolution Height .....	196	xStatus Video Layout Site [n] Output [n] Frame [n] VideoSourceContent .....	200
xStatus Video Output Connector [n] Resolution Width .....	196	xStatus Video Layout Site [n] Output [n] Frame [n] FrameContainerId .....	200
xStatus Video Output Connector [n] Resolution RefreshRate .....	197	xStatus Video Layout Site [n] Output [n] FrameContainer [n] PositionX .....	200
xStatus Video Output Connector [n] Type .....	197	xStatus Video Layout Site [n] Output [n] FrameContainer [n] PositionY .....	200
xStatus Video Layout .....	197	xStatus Video Layout Site [n] Output [n] FrameContainer [n] Width .....	200
xStatus Video Layout Mode .....	197	xStatus Video Layout Site [n] Output [n] FrameContainer [n] Height .....	200
xStatus Video Layout PresentationView .....	197	xStatus Video Layout Site [n] Output [n] FrameContainer [n] Content .....	200
xStatus Video Layout Site [n] Output [n] FamilyName .....	197	xStatus Video Selfview Mode .....	200
xStatus Video Layout Site [n] Output [n] FullFamilyName .....	197	xStatus Video Selfview FullscreenMode .....	201
xStatus Video Layout Site [n] Output [n] GraphicName .....	198	xStatus Video Selfview PIPPosition .....	201
xStatus Video Layout Site [n] Output [n] Frame [n] PositionX .....	198	xStatus Video Selfview OnMonitorRole .....	201
xStatus Video Layout Site [n] Output [n] Frame [n] PositionY .....	198	xStatus Video PIP ActiveSpeaker Position .....	201
xStatus Video Layout Site [n] Output [n] Frame [n] Width .....	198	xStatus Video PIP Presentation Position .....	201
xStatus Video Layout Site [n] Output [n] Frame [n] Height .....	198	xStatus Video OSD Output .....	201
xStatus Video Layout Site [n] Output [n] Frame [n] Layer .....	198	xStatus Video OSD Mode .....	201
xStatus Video Layout Site [n] Output [n] Frame [n] MediaChannelId .....	199	<b>Experimental status .....</b>	<b>202</b>
xStatus Video Layout Site [n] Output [n] Frame [n] VideoSourceType .....	199		
xStatus Video Layout Site [n] Output [n] Frame [n] VideoSourceId .....	199		
xStatus Video Layout Site [n] Output [n] Frame [n] InputNumber .....	199		
xStatus Video Layout Site [n] Output [n] Frame [n] Filename .....	199		

## Audio status

### xStatus Audio

Shows the top level overview of the audio status. The identities of the LocalInput, RemoteInput, LocalOutput and RemoteOutput are used when querying additional information.

### xStatus Audio Microphones Mute

Shows the microphones mute mode.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Audio Microphones Mute
*s Audio Microphones Mute: Off
** end
```

### xStatus Audio Volume

Shows the volume level (dB) of the loudspeaker output.

**Value space of the result returned:**

<0..100>

**Example:**

```
xStatus Audio Volume
*s Audio Volume: 70
** end
```

### xStatus Audio VolumeMute

Shows whether the endpoint volume is set to mute.

**Value space of the result returned:**

<Off/On>

**Example:**

```
xStatus Audio VolumeMute
*s Audio VolumeMute: Off
** end
```

### xStatus Audio Input LocalInput [n] Name

Shows the name of the local input. A local input is a mix of input connectors. You can run the command xStatus Audio Input LocalInput to find the identity [n] of the input.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Audio Input LocalInput 1 Name
*s Audio Input LocalInput 1 Name: "Microphone"
** end
```

### xStatus Audio Input LocalInput [n] MixerMode

Shows how the local input connectors have been mixed together. You can run the command xStatus Audio Input LocalInput to find the identity [n] of the input.

Auto: The microphone with the strongest speaker is active and the others are strongly attenuated.

Fixed: The input connector signals are mixed together with equal gains.

GainShared: The microphones are given a normalized gain factor relative to the strongest speaker before being mixed together.

**Value space of the result returned:**

<"Auto"/"Fixed"/"GainShared">

**Example:**

```
xStatus Audio Input LocalInput 1 MixerMode
*s Audio Input LocalInput 1 MixerMode: "Auto"
** end
```

### xStatus Audio Input LocalInput [n] Mute

Shows the mute mode for the local inputs. A local input is a mix of input connectors.

You can run the command xStatus Audio Input LocalInput to find the identity [n] of the input.

**Value space of the result returned:**

<"On"/"Off">

**Example:**

```
xStatus Audio Input LocalInput 1 Mute
*s Audio Input LocalInput 1 Mute: "Off"
** end
```

### xStatus Audio Input LocalInput [n] Channels

States if the local input channels are mixed into a mono signal (1) or stereo signal (2).  
You can run the command xStatus Audio Input LocalInput to find the identity [n] of the input.

**Value space of the result returned:**

<1..2>

**Example:**

```
xStatus Audio Input LocalInput 1 Channels
*s Audio Input LocalInput 1 Channels: 1
** end
```

### xStatus Audio Input LocalInput [n] AGC

Shows the AGC (Automatic Gain Control) mode on the local input.  
You can run the command xStatus Audio Input LocalInput to find the identity [n] of the input.

**Value space of the result returned:**

<"On"/"Off">

**Example:**

```
xStatus Audio Input LocalInput 1 AGC
*s Audio Input LocalInput 1 AGC: "On"
** end
```

### xStatus Audio Input LocalInput [n] Connector

Lists the connectors that are attached to the local input.  
You can run the command xStatus Audio Input LocalInput to find the identity [n] of the input.

**Value space of the result returned:**

<"Microphone.1"/.."Microphone.4"/"Line.1"/"Line.2"/"HDMI.2">

**Example:**

```
xStatus Audio Input LocalInput 1 Connector
*s Audio Input LocalInput 1 Connector: "Microphone.1"
** end
```

### xStatus Audio Input RemoteInput [n] CallId

Shows the CallId for the remote audio input.  
You can run the command xStatus Audio Input RemoteInput to find the identity [n] of the input.

**Value space of the result returned:**

<0..65534>

**Example:**

```
xStatus Audio Input RemoteInput 8 CallId
*s Audio Input RemoteInput 8 CallId: 28
** end
```

### xStatus Audio Input Connectors Microphone [n] EcReferenceDelay

Returns the detected latency for each loudspeaker to microphone path. The result is in milliseconds.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Audio Input Connectors Microphone 1 EcReferenceDelay
*s Audio Connectors Microphone 1 EcReferenceDelay: 120
** end
```

### xStatus Audio Output LocalOutput [n] Name

Shows the name of the local output.  
You can run the command xStatus Audio Output LocalOutput to find the identity [n] of the output.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Audio Output LocalOutput 4 Name
*s Audio Output LocalOutput 4 Name: "MyLocalOutput1"
** end
```

### xStatus Audio Output LocalOutput [n] Loudspeaker

Shows the Loudspeaker mode on the local output. If one or more of the output connectors that are attached to the local output are connected to a loudspeaker, then this signal should be a reference signal to the echo canceler and Loudspeaker should be set to On.

You can run the command xStatus Audio Output LocalOutput to find the identity [n] of the output.

**Value space of the result returned:**

<"On"/"Off">

**Example:**

```
xStatus Audio Output LocalOutput 4 Loudspeaker
*s Audio Output LocalOutput 4 Loudspeaker: "Off"
** end
```

### xStatus Audio Output LocalOutput [n] Channels

States if the local output channels are mixed into a mono signal (1) or stereo signal (2).

You can run the command xStatus Audio Output LocalOutput to find the identity [n] of the output.

**Value space of the result returned:**

<1..2>

**Example:**

```
xStatus Audio Output LocalOutput 4 Channels
*s Audio Output LocalOutput 4 Channels: "1"
** end
```

### xStatus Audio Output LocalOutput [n] Connector

Lists the connectors that are attached to the local output.

You can run the command xStatus Audio Output LocalOutput to find the identity [n] of the output.

**Value space of the result returned:**

<"Line.1"/"Line.2"/"HDMI.1"/"HDMI.2">

**Example:**

```
xStatus Audio Output LocalOutput 4 Connector
*s Audio Output LocalOutput 4 Connector: "Line.1"
** end
```

### xStatus Audio Output LocalOutput [n] Input [n] Gain

Shows the gain (dB) on the input, when it is connected to the local output. Range from -54 dB to 15 dB, where -54 dB equals Off.

You can run the command xStatus Audio Output LocalOutput to find the identity [n] of the output and input.

**Value space of the result returned:**

<-54..15>

**Example:**

```
xStatus Audio Output LocalOutput 4 Input 2 Gain
*s Audio Output LocalOutput 4 Input 2 Gain: 0
** end
```

### xStatus Audio Output RemoteOutput [n] CallId

Shows the CallId for the remote audio output.

You can run the command xStatus Audio Output RemoteOutput to find the identity [n] of the output.

**Value space of the result returned:**

<1..65534>

**Example:**

```
xStatus Audio Output RemoteOutput 9 CallId
*s Audio Output RemoteOutput 9 CallId: 28
** end
```

### xStatus Audio Output RemoteOutput [n] Input [n] Gain

Shows the gain (dB) on the input, when input is connected to the remote output. Range from -54 dB to 15 dB, where -54 dB equals Off.

You can run the command xStatus Audio Output RemoteOutput to find the identity [n] of the output and input.

**Value space of the result returned:**

<-54..15>

**Example:**

```
xStatus Audio Output RemoteOutput 9 Input 1 Gain
*s Audio Output RemoteOutput 9 Input 1 Gain: 0
** end
```

## Call status

### xStatus Call

Shows the top level overview of the call status. The call identity is used when query for additional information about the call.

### xStatus Call [n] Status

Shows the status of a call. You can run the command xStatus Call to find the call identity.

#### Value space of the result returned:

<Idle/Dialling/Ringing/Connecting/Connected/Disconnecting/OnHold/EarlyMedia/Preserved/RemotePreserved>

#### Example:

```
xStatus Call 27 Status
*s Call 27 Status: Connected
** end
```

### xStatus Call [n] Direction

States the direction of the call initiation. You can run the command xStatus Call to find the call identity.

#### Value space of the result returned:

<Incoming/Outgoing>

#### Example:

```
xStatus Call 27 Direction
*s Call 27 Direction: Outgoing
** end
```

### xStatus Call [n] Protocol

Shows the call protocol of the incoming or outgoing call. You can run the command xStatus Call to find the call identity.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus Call 27 Protocol
*s Call 27 Protocol: "h323"
** end
```

### xStatus Call [n] CallType

Shows the call type of the incoming or outgoing call. You can run the command xStatus Call to find the call identity.

#### Value space of the result returned:

<Video/Audio/AudioCanEscalate/ForwardAllCall/Unknown>

#### Example:

```
xStatus Call 27 CallType
*s Call 27 CallType: Video
** end
```

### xStatus Call [n] RemoteNumber

Shows the remote (far end) number or URI of an incoming or outgoing call. You can run the command xStatus Call to find the call identity.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus Call 27 RemoteNumber
*s Call 27 RemoteNumber: "5585232"
** end
```

### xStatus Call [n] CallbackNumber

Shows the remote (far end) number or URI of an incoming or outgoing call, including the call protocol, for call back. You can run the command xStatus Call to find the call identity.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus Call 27 CallbackNumber
*s Call 27 CallbackNumber: "h323:firstname.lastname@company.com"
** end
```

### xStatus Call [n] DisplayName

Shows the name of the remote (far end) participant in an incoming or outgoing call. You can run the command xStatus Call to find the call identity.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Call 27 DisplayName
*s Call 27 DisplayName: "firstname.lastname@company.com"
** end
```

### xStatus Call [n] TransmitCallRate

Shows the transmit bandwidth in the call in kilobits per second (kbps). You can run the command xStatus Call to find the call identity.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Call 27 TransmitCallRate
*s Call 27 TransmitCallRate: 768
** end
```

### xStatus Call [n] ReceiveCallRate

Shows the receive bandwidth in the call in kilobits per second (kbps). You can run the command xStatus Call to find the call identity.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Call 27 ReceiveCallRate
*s Call 27 ReceiveCallRate: 4000
** end
```

### xStatus Call [n] FacilityServiceId

When calling a facility service, the facility service id is shown. Otherwise the value 0 is returned.

**Value space of the result returned:**

<0..5>

**Example:**

```
xStatus Call FacilityServiceId
*s Call 3 FacilityServiceId: 1
** end
```

### xStatus Call [n] Encryption Type

Shows the encryption type of the call. You can run the command xStatus Call to find the call identity.

**Value space of the result returned:**

<"None"/"Aes-128">

**Example:**

```
xStatus Call 27 Encryption Type
*s Call 27 Encryption Type: "None"
** end
```

### xStatus Call [n] PlacedOnHold

Shows the placed on hold status of the call. You can run the command xStatus Call to find the call identity.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Call 27 PlacedOnHold
*s Call 27 PlacedOnHold: False
** end
```

### xStatus Call [n] Duration

Shows the duration of a call (in seconds). You can run the command xStatus Call to find the call identity.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Call 27 Duration
*s Call 27 Duration: 2354
** end
```

### xStatus Call [n] SecurityStatus

Security status of a call represents the least of the security statuses of all the endpoints involved in a CUCM call.

**Value space of the result returned:**

<Invalid/Unknown/NotAuthenticated/Authenticated>

### xStatus Call [n] AnswerState

Indicates if a call is answered, ignored or has been automatically answered by a system.

**Value space of the result returned:**

<Unanswered/Ignored/Autoanswered/Answered>

**Example:**

```
xStatus Call AnswerState
*s Call 5 AnswerState: Answered
** end
```

### xStatus Call [n] ModifyState

Shows the current state of a pending Call Modify operation. Not in use in this software version.

OutgoingModify: a request CallEscalate to Video is pending.

IncomingModify: a peer has requested to escalate the call to Video.

Idle: No Call Modify operation is pending.

**Value space of the result returned:**

<Idle/Outgoing/Incoming>

**Example:**

```
xStatus Call ModifyState
*s Call 11 ModifyState: Idle
** end
```

### xStatus Call [n] DeviceType

Indicates whether the remote system is a single endpoint or an MCU. Some Cisco endpoints (EX90, C40, C60, C90, SX20, SX80, MX200 G2, MX300 G2) have built-in MCU capabilities.

**Value space of the result returned:**

<Endpoint/MCU>

**Example:**

```
xStatus Call DeviceType
*s Call 4 DeviceType: Endpoint
** end
```

## Camera status

### xStatus Camera

Shows the top level overview of the camera status.

### xStatus Camera [n] Connected

Shows if the camera is connected or not.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Camera 1 Connected
*s Camera 1 Connected: True
** end
```

### xStatus Camera [n] HardwareID

Shows the hardware identity of the camera.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 HardwareID
*s Camera 1 HardwareID: "50000000"
** end
```

### xStatus Camera [n] Manufacturer

Shows the manufacturer of the camera.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 Manufacturer
*s Camera 1 Manufacturer: "TANDBERG"
** end
```

### xStatus Camera [n] Model

Shows the camera model.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 Model
*s Camera 1 Model: "PrecisionHD 1080p 12X"
** end
```

### xStatus Camera [n] SoftwareID

Shows the software identity of the camera.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 SoftwareID
*s Camera 1 SoftwareID: "S01718-4.0FINAL [ID:40063] 2010-10-20"
** end
```

### xStatus Camera [n] SerialNumber

Shows the camera serial number.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 SerialNumber
*s Camera 1 SerialNumber: "B1AB26B00010"
** end
```

### xStatus Camera [n] IpAddress

Shows the camera IP address.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 IpAddress
*s Camera 1 IpAddress: ""
** end
```



### xStatus Camera [n] MacAddress

Shows the MAC (Media Access Control) address for the camera.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 MacAddress
*s Camera 1 MacAddress: ""
** end
```

### xStatus Camera [n] Position Pan

Shows the current pan (move left and right) position of the camera. The value range depends on camera type.

**Value space of the result returned:**

<-65535..65535>

**Example:**

```
xStatus Camera 1 Position Pan
*s Camera 1 Position Pan: 412
** end
```

### xStatus Camera [n] Position Tilt

Shows the current tilt (move up and down) position of the camera. The value range depends on camera type.

**Value space of the result returned:**

<-65535..65535>

**Example:**

```
xStatus Camera 1 Position Tilt
*s Camera 1 Position Tilt: 106
** end
```

### xStatus Camera [n] Position Zoom

Shows the current zoom (zoom in and out) position of the camera. The value range depends on camera type.

**Value space of the result returned:**

<0..65535>

**Example:**

```
xStatus Camera 1 Position Zoom
*s Camera 1 Position Zoom: 828
** end
```

### xStatus Camera [n] Position Focus

Shows the current focus position of the camera. The value range depends on camera type.

**Value space of the result returned:**

<0..65535>

**Example:**

```
xStatus Camera 1 Position Focus
*s Camera 1 Position Focus: 4597
** end
```

### xStatus Camera [n] Capabilities Options

Shows the camera capabilities (ptzf = pan, tilt, zoom, focus).

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Camera 1 Capabilities Options
*s Camera 1 Capabilities Options: "ptzf"
** end
```

### xStatus Camera [n] Flip

In Flip mode (vertical flip) the image can be flipped upside down.

**Value space of the result returned:**

<"Auto"/"On"/"Off">

**Example:**

```
xStatus Camera 1 Flip
*s Camera 1 Flip: "Off"
** end
```

### xStatus Camera [n] UpgradeStatus

Returns the status of the camera software upgrade.

None: No upgrade going on at the moment.

Downloading: Downloading the upgrade.

Installing: Installing the upgrade.

Rebooting: Rebooting the system to take the upgrade in use.

**Value space of the result returned:**

<None/Downloading/Installing/Rebooting>

**Example:**

```
xStatus Camera 1 UpgradeStatus
*s Camera 1 UpgradeStatus: None
** end
```

### xStatus Camera [n] DownloadProgress

Indicates how many percent of the new camera software upgrade has been downloaded. Result -1 indicates that the information is not available for that camera type.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Camera 1 DownloadProgress
*s Camera 1 DownloadProgress: 0
** end
```

## Conference status

### xStatus Conference

Shows the top level overview of the conference status. The identity of the Conference Site can only be read during a call.

### xStatus Conference Presentation Mode

Shows the status of the secondary video stream.

**Value space of the result returned:**

<Off/Sending/Receiving>

**Example:**

```
xStatus Conference Presentation Mode
*s Conference Presentation Mode: Off
** end
```

### xStatus Conference Presentation Protocol

Shows the video protocol used when transmitting the presentation.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Presentation Protocol
*s Conference Presentation Protocol: "H264"
** end
```

### xStatus Conference Presentation Resolution Height

Shows the height of the the presentation.

**Value space of the result returned:**

<0..3000>

**Example:**

```
xStatus Conference Presentation Resolution Height
*s Conference Presentation Resolution Height: 0
** end
```

#### xStatus Conference Presentation Resolution Width

Shows the width of the the presentation.

**Value space of the result returned:**

<0..4000>

**Example:**

```
xStatus Conference Presentation Resolution Width
*s Conference Presentation Resolution Width: 0
** end
```

#### xStatus Conference Presentation SiteId

Shows the identity of the system that sends the presentation.

**Value space of the result returned:**

<0..65535>

**Example:**

```
xStatus Conference Presentation SiteId
*s Conference Presentation SiteId: 0
** end
```

#### xStatus Conference Presentation LocalSource

Shows the local video input source that is used when the presentation is sent from the local site.

**Value space of the result returned:**

<1..5>

**Example:**

```
xStatus Conference Presentation LocalSource
*s Conference Presentation LocalSource: 0
** end
```

#### xStatus Conference Presentation LocalSendingMode

Shows whether the presentations are set to be shown locally and sent to remote side, only shown locally or not shown at all.

**Value space of the result returned:**

<Off/LocalRemote/LocalOnly>

**Example:**

```
xStatus Conference Presentation LocalSendingMode
*s Conference Presentation LocalSendingMode: Off
** end
```

#### xStatus Conference Presentation LastLocalSource

Identifies the last used local presentation source.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Conference Presentation LastLocalSource
*s Conference Presentation LastLocalSource: 2
** end
```

#### xStatus Conference Site [n] Capabilities FECC NumberOfPresets

Shows the number of presets available for the input sources at a far end site.

**Value space of the result returned:**

<1..15>

**Example:**

```
xStatus Conference Site 2 Capabilities FECC NumberOfPresets
*s Conference Site 2 Capabilities FECC NumberOfPresets: 15
** end
```

#### xStatus Conference Site [n] Capabilities FECC NumberOfSources

Shows the number of input sources that can be connected at a far end site.

**Value space of the result returned:**

<1..5>

**Example:**

```
xStatus Conference Site 2 Capabilities FECC NumberOfSources
*s Conference Site 2 Capabilities FECC NumberOfSources: 5
** end
```

#### xStatus Conference Site [n] Capabilities FECC Source [n] SourceId

Shows the ID of an input source that can be connected at a far end site.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Conference Site 2 Capabilities FECC Source 1 SourceId
*s Conference Site 2 Capabilities FECC Source 1 SourceId: 6
** end
```

### xStatus Conference Site [n] Capabilities FECC Source [n] Name

Shows the name of an input source that can be connected at a far end site.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Site 2 Capabilities FECC Source 1 Name
*s Conference Site 2 Capabilities FECC Source 1 Name: "Main camera"
** end
```

### xStatus Conference Site [n] Capabilities FECC Source [n] Options

Shows available options for an input source that can be connected at a far end site (for a camera: p=pan; t=tilt; z=zoom; f=focus).

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Site 2 Capabilities FECC Source 1 Options
*s Conference Site 2 Capabilities FECC Source 1 Options: "ptzff"
** end
```

### xStatus Conference Site [n] Capabilities FECC Mode

Shows whether or not you have permission to control the input sources at a far end site.

On: Far end input source control is permitted.

Off: Far end input source control is not permitted.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Conference Site 2 Capabilities FECC Mode
*s Conference Site 2 Capabilities FECC Mode: On
** end
```

### xStatus Conference Site [n] Capabilities Presentation

Lists the presentation capabilities for other participants in the conference.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Conference Site 2 Capabilities Presentation
*s Conference Site 2 Capabilities Presentation: True
** end
```

### xStatus Conference Site [n] MicrophonesMuted

Lists the audio mute status for other participants in the conference.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Conference Site 2 MicrophonesMuted
*s Conference Site 2 MicrophonesMuted: True
** end
```

### xStatus Conference Site [n] Manufacturer

Shows the manufacturer of the video system at a far end site.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Site 2 Manufacturer
*s Conference Site 2 Manufacturer: "Cisco"
** end
```

### xStatus Conference Site [n] SoftwareID

Shows the ID of the software running of the video system at a far end site.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Site 2 SoftwareID
*s Conference Site 2 SoftwareID: "TC5"
** end
```

### xStatus Conference Site [n] BlackScreenCause

Shows the reason why the screen is black while in a CTMS (Cisco TelePresence Multipoint Switch) managed conference.

FirstParticipant: You are the first and only participant in the meeting.

LastParticipant: You are the only remaining participant in the meeting.

NoResources: The conference started with insufficient resources.

EarlyJoin: The scheduled conference has not started yet.

HostNotJoined: The conference is waiting for the host to join.

SecurityIssues: The video is blocked due to security issues.

NoVideo: It is a conference without video.

WebexOnly: It is a Webex only conference.

#### Value space of the result returned:

<None/Other/FirstParticipant/LastParticipant/NoResources/EarlyJoin/HostNotJoined/SecurityIssues/NoVideo/WebexOnly>

#### Example:

```
xStatus Conference Site 2 BlackScreenCause
*s Conference Site 17 BlackScreenCause: None
** end
```

### xStatus Conference Site [n] ConferenceExtended

Shows the status of conference extension (only relevant for conferences scheduled from CTS-MAN (Cisco TelePresence Manager); they can be extended only once).

Unsupported: Conference extension is not supported.

NotExtended: The conference is not (yet) extended.

Extended: The conference has been extended, and is currently in the extended phase.

#### Value space of the result returned:

<Unsupported/NotExtended/Extended>

#### Example:

```
xStatus Conference Site 2 ConferenceExtended
*s Conference Site 2 ConferenceExtended: NotExtended
** end
```

### xStatus Conference Site [n] BookingId

Shows the booking ID of a conference (if assigned). The booking ID can be used for easy identification of a call or conference.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus Conference Site 2 BookingId
*s Conference Site 33 BookingId: "MyConference"
** end
```

### xStatus Conference Site [n] SecurityStatus

Security status of a call represents the least of the security statuses of all the endpoints involved in a CUCM call.

Invalid: Initial status.

Unknown: In the absence of the Call-Info header, that CUCM uses to pass this status to the phone, the phone assumes a value of Unknown.

NotAuthenticated: The current connected call is not signaling authenticated. This call is not secure.

Authenticated: The current connected call is signaling authenticated. This is not a fully secured call.

Encrypted: Encrypted indicates the current connected call is signaling/media encrypted. This call is secure.

#### Value space of the result returned:

<Invalid/Unknown/Authenticated/NotAuthenticated/Encrypted>

#### Example:

```
xStatus Conference Site SecurityStatus
*s Conference Site 21 SecurityStatus: Unknown
** end
```

### xStatus Conference Site [n] UnattendedTransfer

Indicates whether Unattended Transfer is available for the call.

#### Value space of the result returned:

<True/False>

#### Example:

```
xStatus Conference Site UnattendedTransfer
*s Conference Site 14 UnattendedTransfer: True
** end
```

### xStatus Conference Site [n] AttendedTransfer

Indicates whether Attended Transfer is available for the call.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Conference Site AttendedTransfer
*s Conference Site 14 AttendedTransfer: True
** end
```

### xStatus Conference Site [n] Appearance

Returns identification for the shared line appearance in the call.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Conference Site Appearance
*s Conference Site 14 Appearance: 0
** end
```

### xStatus Conference Site [n] GCI

Returns Global Call Identification (GCI) of the call. The GCI is used to identify whether the call is remote or local and it is provided by CUCM.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Site GCI
*s Conference Site 14 GCI: ""
** end
```

### xStatus Conference Site [n] CalText

Returns the Confidential Access Level (CAL) of the session sent by vendors that support AS-SIP.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Site CalText
*s Conference Site 14 CalText: ""
** end
```

### xStatus Conference Site [n] Hold

Indicates whether the far-end site can be placed on hold or not.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Conference Site Hold
*s Conference Site 2 Hold: True
** end
```

### xStatus Conference Site [n] Preserved

Indicates if the far end site is having connection issues, and has been preserved to avoid invoking features that can break the call.

**Value space of the result returned:**

<Off/Local/Remote>

**Example:**

```
xStatus Conference Site Preserved
*s Conference Site 3 Preserved: Off
** end
```

### xStatus Conference Line [n] Mode

Indicates whether the system is configured as private or shared line on CUCM.

**Value space of the result returned:**

<Shared/Private>

**Example:**

```
xStatus Conference Line Mode
*s Conference Line 1 Mode: Private
** end
```

### xStatus Conference Line [n] Appearance Status

Returns the status of the shared line call.

**Value space of the result returned:**

<Idle/Private/Trying/Progressing/Alerting/Active/Held/HeldPrivate/Unknown>

**Example:**

```
xStatus Conference Line 1 Appearance Status
*s Conference Line 1 Appearance 5464 Status: Held
** end
```

### xStatus Conference Line [n] Appearance URI

Returns the URI of the shared line call. Not visible for a private call.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Line 1 Appearance URI
*s Conference Line 1 Appearance 5464 URI: "12345@cisco.com"
** end
```

### xStatus Conference Line [n] Appearance GCI

Returns Global Call Identification (GCI) of the shared line call. The GCI is used to identify whether the call is remote or local and it is provided by CUCM.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Conference Line 1 Appearance GCI
*s Conference Line 1 Appearance 5464 GCI: "1-161386"
** end
```

### xStatus Conference Multipoint Mode

Shows how the Multipoint video conferences are handled. See xConfiguration Conference Multipoint Mode for more information.

**Value space of the result returned:**

<Off/MultiSite/Auto/CUCMMediaResourceGroupList>

**Example:**

```
xStatus Conference Multipoint Mode
*s Conference Multipoint Mode: "MultiSite"
** end
```

### xStatus Conference DoNotDisturb

Shows whether DoNotDisturb mode is switched on or not.

**Value space of the result returned:**

<Active/Inactive>

**Example:**

```
xStatus Conference DoNotDisturb
*s Conference DoNotDisturb: Inactive
** end
```

### xStatus Conference ActiveSpeaker Mode

Shows whether the ActiveSpeaker mode is switched on or not.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Conference ActiveSpeaker Mode
*s Conference ActiveSpeaker Mode: Off
** end
```

### xStatus Conference ActiveSpeaker SiteId

Returns the SiteId (CallId) of the current active speaker.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Conference ActiveSpeaker SiteId
*s Conference ActiveSpeaker SiteId: 0
** end
```

### xStatus Conference SelectedCallProtocol

Indicates which call protocol is used as default.

**Value space of the result returned:**

<H323/SIP/H320>

**Example:**

```
xStatus Conference SelectedCallProtocol
*s Conference SelectedCallProtocol: SIP
** end
```

## Diagnostics status

### xStatus Diagnostics

Shows the top level overview of the diagnostics. The example shows the status for an ongoing call. The identities of the call and channels are used when querying additional information.

**xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Jitter**

**xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Jitter**

**xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Jitter**

**xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Jitter**

**xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Jitter**

**xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Jitter**

Shows the jitter at the present moment in the incoming/outgoing channel, as specified by RFC 3550.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
Jitter
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1 Jitter:
0
** end
```

**xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Packets**

**xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Packets**

**xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Packets**

**xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Packets**

**xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Packets**

**xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Packets**

Shows the number of packets received/sent in the incoming/outgoing channels.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
Packets
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1 Packets:
405
** end
```



xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Loss

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Loss

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Loss

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Loss

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Loss

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Loss

Shows the number of packets lost in the incoming/outgoing channels.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
Loss
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1 Loss: 96
** end
```

xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1  
LastIntervalLost

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1  
LastIntervalLost

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1  
LastIntervalLost

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1  
LastIntervalLost

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1  
LastIntervalLost

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1  
LastIntervalLost

Shows the number of packets lost during the last interval for the incoming/outgoing channels.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels IncomingDataChannel 327 Netstat 1
LastIntervalLost
*s Diagnostics Call 27 Channels IncomingDataChannel 327 Netstat 1
LastIntervalLost: 0
** end
```

xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 LastIntervalReceived

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 LastIntervalReceived

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 LastIntervalReceived

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 LastIntervalReceived

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 LastIntervalReceived

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 LastIntervalReceived

Shows the number of packets received during the last interval for the incoming/outgoing channels.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels IncomingDataChannel 327 Netstat 1
LastIntervalReceived
*s Diagnostics Call 27 Channels IncomingDataChannel 327 Netstat 1
LastIntervalReceived: 84
** end
```

xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Drop

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Drop

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Drop

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Drop

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Drop

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Drop

Shows the number of packets dropped in the incoming/outgoing channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
Drop
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1 Drop: 0
** end
```

xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 Bytes

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 Bytes

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 Bytes

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 Bytes

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 Bytes

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 Bytes

Shows the number of bytes received/sent in the incoming/outgoing channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
Bytes
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1 Bytes:
129920
** end
```

xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 ChannelRate

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 ChannelRate

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 ChannelRate

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 ChannelRate

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 ChannelRate

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 ChannelRate

Shows the bandwidth for the incoming/outgoing channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
ChannelRate
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
ChannelRate: 128000
** end
```

xStatus Diagnostics Call [n] Channels IncomingAudioChannel [n] Netstat 1 MaxJitter

xStatus Diagnostics Call [n] Channels IncomingVideoChannel [n] Netstat 1 MaxJitter

xStatus Diagnostics Call [n] Channels IncomingDataChannel [n] Netstat 1 MaxJitter

xStatus Diagnostics Call [n] Channels OutgoingAudioChannel [n] Netstat 1 MaxJitter

xStatus Diagnostics Call [n] Channels OutgoingVideoChannel [n] Netstat 1 MaxJitter

xStatus Diagnostics Call [n] Channels OutgoingDataChannel [n] Netstat 1 MaxJitter

Shows the maximum jitter that has been measured during last time interval (5 seconds).

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
MaxJitter
*s Diagnostics Call 27 Channels OutgoingDataChannel 327 Netstat 1
MaxJitter: 0
** end
```

## GPIO status

### xStatus GPIO Pin [1..4] State

NOTE: This command is not supported on Codec C40.

Shows the current state of each GPIO pin. The default state is High (+12V). When activated the state is Low (0V).

**Value space of the result returned:**

<High/Low>

**Example:**

```
xStatus GPIO Pin 1 State
*s GPIO Pin 1 State: High
** end
```

## H320 status

### xStatus H320

Shows the top level overview of the H320 status.

### xStatus H320 Gateway Status

Returns the state of the H320 Gateway, if the codec is paired with an ISDN Link.

**Value space of the result returned:**

<OK/OKWithWarning/Error/Inactive/Warning>

**Example:**

```
xStatus H320 Gateway status
*s H320 Gateway Status: Error
** end
```

### xStatus H320 Gateway Address

Returns the IPv4 address of the ISDN Gateway, if the endpoint is paired to one.

**Value space of the result returned:**

<OK/OKWithWarning/Error/Inactive>

**Example:**

```
xStatus H320 Gateway Status
*s H320 Gateway Status: Inactive
** end
```

### xStatus H320 Gateway Number

Returns the IPv6 address of the ISDN Gateway if the endpoint is paired to one.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus H320 Gateway Number
*s H320 Gateway Number: ""
** end
```

### xStatus H320 Gateway Mode

Returns information on the type of calls the ISDN Gateway is configured for, if the codec is paired with an ISDN Link.

**Value space of the result returned:**

<Unknown/PRI/BRI/External/G703>

**Example:**

```
xStatus H320 Gateway Mode
*s H320 Gateway Mode: Unknown
** end
```

### xStatus H320 Gateway Reason

Shows the reason for rejected Gateway registration. Only available if the codec is connected to an ISDN Link.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus H320 Gateway Reason
*s H320 Gateway Reason: ""
** end
```

### xStatus H320 Gateway Id

Returns the unique identification of the H320 Gateway, if the codec is paired with an ISDN Link. .

**Value space of the result returned:**

<String>

**Example:**

```
xStatus H320 Gateway Id
*s H320 Gateway Id: "00:50:60:0B:EF:11"
** end
```

## H323 status

### xStatus H323

Shows the top level overview of the H323 status.

### xStatus H323 Gatekeeper Status

Shows the gatekeeper registration status.

#### Value space of the result returned:

<Required/Discovering/Discovered/Authenticating/Authenticated/Registering/Registered/  
Inactive/Rejected>

#### Example:

```
xStatus H323 Gatekeeper Status
*s H323 Gatekeeper Status: Registered
** end
```

### xStatus H323 Gatekeeper Address

Displays the IP address of the gatekeeper where the system is registered.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus H323 Gatekeeper Address
*s H323 Gatekeeper Address: "192.0.1.20"
** end
```

### xStatus H323 Gatekeeper Port

Shows the port which is used when connecting to on the gatekeeper.

#### Value space of the result returned:

<Integer>

#### Example:

```
xStatus H323 Gatekeeper Port
*s H323 Gatekeeper Port: 1719
** end
```

### xStatus H323 Gatekeeper Reason

Shows the reason for rejected registration.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus H323 Gatekeeper Reason
*s H323 Gatekeeper Reason: ""
** end
```

## HttpFeedback status

### xStatus HttpFeedback

Shows the top level overview of the HTTP status.

### xStatus HttpFeedback [1..4] URL

Shows the URL (Uniform Resource Locator) of the HTTP server. There can be up to three HTTP servers, specified by the URL.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus HttpFeedback 1 URL
*s HttpFeedback 1 URL: "http://tms.company.com/tms/public/feedback/code.
asp"
** end
```

### xStatus HttpFeedback [1..4] Expression [1..15]

Shows the feedback from the HTTP server. There can be up to 15 expressions for each URL. See the xCommand HttpFeedback commands for more information.

#### Value space of the result returned:

<String>

## ICE status

### xStatus ICE Configured

Shows the ICE configuration status. ICE (Interactive Connectivity Establishment, RFC 5245) is a NAT traversal solution that the endpoints can use to discover the optimized media path. Thus the shortest route for audio and video is always secured between the endpoints.

#### Value space of the result returned:

<On/Off>

#### Example:

```
xStatus ICE Configured
*s ICE Configured: "Off"
** end
```

### xStatus ICE Defaultcandidate

Returns the default candidate where the endpoint initially receives media.

#### Value space of the result returned:

<Host/Rfx/Relay>

#### Example:

```
xStatus ICE Defaultcandidate
*s ICE Defaultcandidate: "Host"
** end
```

### xStatus ICE Turn IP

Returns the IP address of the TURN server that is currently in use.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus ICE Turn IP
*s ICE Turn IP: "192.0.1.20"
** end
```

### xStatus ICE Turn Hostname

Returns the hostname, or IP address, that is configured as the TURN server.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus ICE Turn Hostname
*s ICE Turn Hostname: "callway.medianetworkservices.com"
** end
```

### xStatus ICE Turn Username

Returns the user name used for accessing the TURN server.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus ICE Turn Username
*s ICE Turn Username: "username"
** end
```

### xStatus ICE Call Result

Shows the state of the ICE routing in the present call.

Succeeded: The ICE routing is in use.

Failed: The ICE routing has failed.

Unsupported: ICE routing is not supported.

Mangled: ICE cannot route the media, because a server, such as VCS, is set to handle it.

**Value space of the result returned:**

<Succeeded/Failed/Unsupported/Mangled>

**Example:**

```
xStatus ICE Call Result
*s ICE Call 0 Result: "Unsupported"
** end
```

### xStatus ICE Call Local Candidate

Returns the network interface type the local system is using to send media.

HOST: The endpoint sends media from its own IP address.

PRFLX: The endpoint sends media from its public IP address as seen by the remote Peer.

SRFLX: The endpoint sends media from its public IP address as seen by the TURN server.

RELAY: The endpoint sends media from the IP address and port allocated on the TURN server, and is used as a fallback until ICE has concluded.

**Value space of the result returned:**

<HOST/PRFLX/SRFLX/RELAY>

**Example:**

```
xStatus ICE Call Local Candidate
*s ICE Call 1 Local Candidate: "HOST"
** end
```

### xStatus ICE Call Local IP

Returns the IP address the local system is using for media routing in the present call.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus ICE Call Local IP
*s ICE Call 1 Local IP: "192.0.1.20"
** end
```

### xStatus ICE Call Remote Candidate

Returns the network interface type the remote system is using to send media.

HOST: The far-end receives media on its own IP address.

PRFLX: The far-end receives media on its public IP address as seen by the remote Peer.

SRFLX: The far-end receives media on its public IP address as seen by the TURN server.

RELAY: The far-end receives media on the IP address and port allocated on the TURN server, and is used as a fallback until ICE has concluded.

**Value space of the result returned:**

<HOST/PRFLX/SRFLX/RELAY>

**Example:**

```
xStatus ICE Call Remote Candidate
*s ICE Call 1 Remote Candidate: "SRFLX"
** end
```



### xStatus ICE Call Remote IP

Returns the IP address the remote system is using for media routing in the present call.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus ICE Call Remote IP
*s ICE Call 1 Remote IP: "192.0.1.20"
** end
```

### xStatus ICE Turn Discovermode

Returns the result of the turn server test, if xConfiguration SIP Profile[1] Turn DiscoverMode is set to On.

Verified: The server was reached, and the user name and password were received.

NotVerified: Configuration has been received, but neither server or credentials has been verified.

Failed: The server was not reached.

Off: Turn discovery mode is set to Off.

#### Value space of the result returned:

<Verified/NotVerified/Failed/Off>

#### Example:

```
xStatus ICE Turn Discovermode
*s ICE Turn Discovermode: "Verified"
** end
```

### xStatus ICE Turn Bandwidth

Returns the bandwidth available for the turn server right after xConfiguration SIP Profile 1 Turn BandwidthProbe is set to On.

Probing failed: Could not obtain information on bandwidth.

Probe Aborted: The probing was canceled because a call started.

Probe Connected: The probing has started.

Probe progress: Shows the bandwidth at this stage of the test.

Probe stopped with loss: The probing finished, because packet loss was detected. The loss is shown in kbps.

Probe Completed: The probing completed. The bandwidth result shown in kbps.

#### Value space of the result returned:

<"Probing failed"/"Probe Aborted"/"Probe Connected"/"Probe progress"/"Probe stopped with loss: kbps"/"Probe Completed: kbps">

#### Example:

```
xStatus ICE Turn Bandwidth
*s ICE Turn Bandwidth: "Probe Completed: 6000kbps"
** end
```

## Logging status

### xStatus Logging ExtendedLogging Mode

Indicates whether extended logging of diagnostics is turned on or off.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Logging ExtendedLogging Mode
*s Logging ExtendedLogging Mode: Off
** end
```

## MediaChannels status

### xStatus MediaChannels

Shows the top level overview of the media channel status. The example shows the status for an ongoing call. The identities of the call and channels are used when querying additional information.

### xStatus MediaChannels Call [n] IncomingAudioChannel [n] Encryption Status

Shows the encryption status on the incoming channel.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Encryption Status
*s MediaChannels Call 27 IncomingAudioChannel 327 Encryption Status: Off
** end
```

### xStatus MediaChannels Call [n] IncomingAudioChannel [n] Audio Protocol

Shows the audio algorithm for the incoming audio channel.

AACLD: The AAC-LD is an MPEG-4 Low Delay Audio Coder audio compression format.

G722: The G.722 algorithm is an ITU standard.

G7221: The G.722.1 algorithm is a licensed royalty-free ITU-T standard.

G711Mu: The G.711 Mu-law compression algorithm is used in North America and Japan.

G711A: The G.711 A-law compression algorithm is used in Europe and the rest of the world.

G729: The G.729 algorithm is an ITU standard.

G729AB: The G.729 annex A and B is an ITU standard.

Opus: Opus is a lossy audio compression format.

**Value space of the result returned:**

<AACLD/G722/G7221/G711Mu/G711A/G729/G729AB/Opus>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Audio Protocol
*s MediaChannels Call 27 IncomingAudioChannel 327 Audio Protocol: AACLD
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Audio Mute**

Audio mute status of incoming audio.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Audio Mute
*s MediaChannels Call 27 IncomingAudioChannel 327 Audio Mute: True
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Audio Channels**

Shows the number of incoming audio channels.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Audio Channels
*s MediaChannels Call 27 IncomingAudioChannel 327 Audio Channels: 1
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Local IpAddress**

Shows the local IP address of the Real-time Transport Protocol (RTP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP
Local IpAddress
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP Local
IpAddress: "192.168.24.190"
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Local Port**

Shows the local UDP port number of the Real-time Transport Protocol (RTP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP
Local Port
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP Local
Port: 16404
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Protocol (RTP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP
Remote IpAddress
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Protocol (RTP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP
Remote Port
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTP Remote
Port: 50932
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTCP Local IpAddress**

Shows the local IP address of the Real-time Transport Control Protocol (RTCP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP
Local IpAddress
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP Local
IpAddress: "192.168.24.190"
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTCP Local Port**

Shows the local UDP port number of the Real-time Transport Control Protocol (RTCP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP
Local Port
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP Local
Port: 16405
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RTCP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Control Protocol(RTCP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP
Remote IpAddress
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] IncomingAudioChannel [n] Transport RCTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Control Protocol(RTCP) port for the incoming audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP
Remote Port
*s MediaChannels Call 27 IncomingAudioChannel 327 Transport RTCP Remote
Port: 50933
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Encryption Status**

Shows the encryption status on the incoming channel.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Encryption Status
*s MediaChannels Call 27 IncomingVideoChannel 330 Encryption Status: Off
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] ChannelRole**

Shows if the incoming channel is the main video channel or presentation channel.

**Value space of the result returned:**

<Main/Presentation>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 ChannelRole
*s MediaChannels Call 27 IncomingVideoChannel 330 ChannelRole: Main
** end
```

#### xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video Protocol

Shows the video algorithm for the incoming video channel.

HEVC: The H.265 algorithm is an ITU-T standard for video compression.

H264: The H.264 algorithm is an ITU-T standard for video compression.

H263pp: The H.263pp algorithm is an ITU-T standard for video compression.

H263: The H.263 algorithm is an ITU-T standard for video compression.

H261: The H.261 algorithm is an ITU-T standard for video compression.

**Value space of the result returned:**

<H264/H263pp/H263/H261/HEVC>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Video Protocol
*s MediaChannels Call 27 IncomingVideoChannel 330 Video Protocol: H264
** end
```

#### xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video FrameRate

Shows the video frame rate of the incoming channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Video FrameRate
*s MediaChannels Call 27 IncomingVideoChannel 330 Video FrameRate: 25
** end
```

#### xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video ResolutionX

Shows the width (resolution in direction X) of the incoming video.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Video ResolutionX
*s MediaChannels Call 27 IncomingVideoChannel 330 Video ResolutionX: 768
** end
```

#### xStatus MediaChannels Call [n] IncomingVideoChannel [n] Video ResolutionY

Shows the height (resolution in direction Y) of the incoming video.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Video ResolutionY
*s MediaChannels Call 27 IncomingVideoChannel 330 Video ResolutionY: 448
** end
```

#### xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Local IpAddress

Shows the local IP address of the Real-time Transport Protocol (RTP) port for the incoming video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP
Local IpAddress
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP Local
IpAddress: "192.168.24.190"
** end
```

#### xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Local Port

Shows the local UDP port number of the Real-time Transport Protocol (RTP) port for the incoming video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP
Local Port
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP Local
Port: 16404
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Protocol (RTP) port for the incoming video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP
Remote IpAddress
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Protocol (RTP) port for the incoming video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP
Remote Port
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTP Remote
Port: 50932
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTCP Local IpAddress**

Shows the local IP address of the Real-time Transport Control Protocol (RTCP) port for the incoming video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP
Local IpAddress
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP Local
IpAddress: "192.168.24.190"
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTCP Local Port**

Shows the local UDP port number of the Real-time Transport Control Protocol (RTCP) port for the incoming video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP
Local Port
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP Local
Port: 16405
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RTCP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Control Protocol (RTCP) port for the incoming video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP
Remote IpAddress
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] IncomingVideoChannel [n] Transport RCTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Control Protocol (RTCP) port for the incoming video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP
Remote Port
*s MediaChannels Call 27 IncomingVideoChannel 330 Transport RTCP Remote
Port: 50933
** end
```

### xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Encryption Status

Shows the encryption status on the outgoing channel.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Encryption Status
*s MediaChannels Call 27 OutgoingAudioChannel 328 Encryption Status: Off
** end
```

### xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Audio Protocol

Shows the audio algorithm for the outgoing audio channel.

AACLD: The AAC-LD is an MPEG-4 Low Delay Audio Coder audio compression format.

G722: The G.722 algorithm is an ITU standard.

G7221: The G.722.1 algorithm is a licensed royalty-free ITU-T standard.

G711Mu: The G.711 Mu-law compression algorithm is used in North America and Japan.

G711A: The G.711 A-law compression algorithm is used in Europe and the rest of the world.

G729: The G.729 algorithm is an ITU standard.

G729AB: The G.729 annex A and B is an ITU standard.

Opus: Opus is a lossy audio compression format.

**Value space of the result returned:**

<AACLD/G722/G7221/G711Mu/G711A/G729/G729AB/Opus>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Audio Protocol
*s MediaChannels Call 27 OutgoingAudioChannel 328 Audio Protocol: AACLD
** end
```

### xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Audio Channels

Shows the number of outgoing audio channels.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Audio Channels
*s MediaChannels Call 27 OutgoingAudioChannel 328 Audio Channels: 1
** end
```

### xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Local IpAddress

Shows the local IP address of the Real-time Transport Protocol (RTP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP
Local IpAddress
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP Local
IpAddress: "192.168.24.190"
** end
```

### xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Local Port

Shows the local UDP port number of the Real-time Transport Protocol (RTP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP
Local Port
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP Local
Port: 16404
** end
```

### xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Remote IpAddress

Shows the remote IP address of the Real-time Transport Protocol (RTP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP
Remote IpAddress
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Protocol (RTP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP
Remote Port
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTP Remote
Port: 50932
** end
```

**xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTCP Local IpAddress**

Shows the local IP address of the Real-time Transport Control Protocol (RTCP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP
Local IpAddress
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP Local
IpAddress: "192.168.24.190"
** end
```

**xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTCP Local Port**

Shows the local UDP port number of the Real-time Transport Control Protocol (RTCP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP
Local Port
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP Local
Port: 16405
** end
```

**xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RTCP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Control Protocol(RTCP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP
Remote IpAddress
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] OutgoingAudioChannel [n] Transport RCTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Control Protocol(RTCP) port for the outgoing audio in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP
Remote Port
*s MediaChannels Call 27 OutgoingAudioChannel 328 Transport RTCP Remote
Port: 50933
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Encryption Status**

Shows the encryption status on the outgoing channel.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Encryption Status
*s MediaChannels Call 27 OutgoingVideoChannel 331 Encryption Status: Off
** end
```



**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] ChannelRole**

Shows if the outgoing channel is the main video channel or presentation channel.

**Value space of the result returned:**

<Main/Presentation>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 ChannelRole
*s MediaChannels Call 27 OutgoingVideoChannel 331 ChannelRole: Main
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video Protocol**

Shows the video algorithm for the outgoing video channel.

HEVC: The H.265 algorithm is an ITU-T standard for video compression.

H264: The H.264 algorithm is an ITU-T standard for video compression.

H263pp: The H.263pp algorithm is an ITU-T standard for video compression.

H263: The H.263 algorithm is an ITU-T standard for video compression.

H261: The H.261 algorithm is an ITU-T standard for video compression.

**Value space of the result returned:**

<H264/H263pp/H263/H261/HEVC>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Video Protocol
*s MediaChannels Call 27 OutgoingVideoChannel 331 Video Protocol: "H264"
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video FrameRate**

Shows the video frame rate of the outgoing channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Video FrameRate
*s MediaChannels Call 27 OutgoingVideoChannel 331 Video FrameRate: 30
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video ResolutionX**

Shows the width (resolution in direction X) of the outgoing video.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Video ResolutionX
*s MediaChannels Call 27 OutgoingVideoChannel 331 Video ResolutionX: 768
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Video ResolutionY**

Shows the height (resolution in direction Y) of the outgoing video.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Video ResolutionY
*s MediaChannels Call 27 OutgoingVideoChannel 331 Video ResolutionY: 448
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Local IpAddress**

Shows the local IP address of the Real-time Transport Protocol (RTP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP
Local IpAddress
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP Local
IpAddress: "192.168.24.190"
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Local Port**

Shows the local UDP port number of the Real-time Transport Protocol (RTP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP
Local Port
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP Local
Port: 16404
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Protocol (RTP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP
Remote IpAddress
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP Remote
IpAddress: "192.168.136.130"
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTP Remote Port**

Shows the remote UDP port number of the Real-time Transport Protocol (RTP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP
Remote Port
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTP Remote
Port: 50932
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTCP Local IpAddress**

Shows the local IP address of the Real-time Transport Control Protocol (RTCP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP
Local IpAddress
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP Local
IpAddress: "192.168.24.190"
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTCP Local Port**

Shows the local UDP port number of the Real-time Transport Control Protocol (RTCP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP
Local Port
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP Local
Port: 16405
** end
```

**xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RTCP Remote IpAddress**

Shows the remote IP address of the Real-time Transport Control Protocol (RTCP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP
Remote IpAddress
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP Remote
IpAddress: "192.168.136.130"
** end
```

### xStatus MediaChannels Call [n] OutgoingVideoChannel [n] Transport RCTP Remote Port

Shows the remote UDP port number of the Real-time Transport Control Protocol (RTCP) port for the outgoing video in the media channel.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP
Remote Port
*s MediaChannels Call 27 OutgoingVideoChannel 331 Transport RTCP Remote
Port: 50933
** end
```

## Network status

### xStatus Network

Shows the top level overview of the network status.

### xStatus Network 1 Ethernet MacAddress

Shows the MAC (Media Access Control) address for the Ethernet interface.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 Ethernet MacAddress
*s Network 1 Ethernet MacAddress: "00:50:60:02:FD:C7"
** end
```

### xStatus Network 1 Ethernet Speed

Shows the Ethernet speed in Mbps. The speed can be in full-duplex or half-duplex.

**Value space of the result returned:**

<"10half"/"10full"/"100half"/"100full"/"1000full">

**Example:**

```
xStatus Network 1 Ethernet Speed
*s Network 1 Ethernet Speed: "100full"
** end
```

### xStatus Network 1 IPv4 Address

Shows the IPv4 address that uniquely identifies this system.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 Address
*s Network 1 IPv4 Address: "192.0.2.149"
** end
```

### xStatus Network 1 IPv4 SubnetMask

Shows the subnet mask which determines which subnet an IPv4 address belongs to.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 SubnetMask
*s Network 1 IPv4 SubnetMask: "255.255.255.0"
** end
```

### xStatus Network 1 IPv4 Gateway

Shows the address of the IPv4 gateway.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 Gateway
*s Network 1 IPv4 Gateway: "192.0.2.10"
** end
```

### xStatus Network 1 IPv4 DHCP TftpServerAddress

Returns the IP address of the TFTP server (provisioning server) as assigned by DHCP, provided that the DHCP server supports option 150. This status is used only when xConfiguration Provisioning Mode is CUCM.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 DHCP TftpServerAddress
*s Network 1 IPv4 DHCP TftpServerAddress: "192.0.2.0"
** end
```

### xStatus Network 1 IPv4 DHCP TmsServer

Returns the IP address of the TMS server (provisioning server) as assigned by DHCP, provided that the DHCP server supports option 242. This status is used only when xConfiguration Provisioning Mode is TMS.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 DHCP TmsServer
*s Network 1 IPv4 DHCP TmsServer: "192.0.2.0"
** end
```

### xStatus Network 1 IPv4 DHCP ProvisioningServer

Returns the IP address of the VCS provisioning server as assigned by DHCP, provided the provisioning server address is defined as a vendor encapsulated option in the DHCP server. This status is used only when xConfiguration Provisioning Mode is VCS.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 DHCP ProvisioningServer
*s Network 1 IPv4 DHCP ProvisioningServer: "192.0.2.0"
** end
```

### xStatus Network 1 IPv4 DHCP ProvisioningDomain

Returns the SIP domain of the VCS provisioning server as assigned by DHCP, provided the provisioning server address is defined as a vendor encapsulated option in the DHCP server. This status is used only when xConfiguration Provisioning Mode is VCS.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 DHCP ProvisioningDomain
*s Network 1 IPv4 DHCP ProvisioningDomain: "1234@company.com"
** end
```

### xStatus Network 1 IPv4 DHCP TftpServer

Returns the IP address or DNS name of the TFTP server (provisioning server) as assigned by DHCP, provided the DHCP server sets the option 66. This status is used only when xConfiguration Provisioning Mode is CUCM.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv4 DHCP TftpServer
*s Network 1 IPv4 DHCP TftpServerAddress: "192.0.2.0"
*s Network 1 IPv4 DHCP TftpServer: "1234@company.com"
** end
```

### xStatus Network 1 IPv6 Address

Shows the IPv6 address that uniquely identifies this system.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv6 Address
*s Network 1 IPv6 Address: ""
** end
```

### xStatus Network 1 IPv6 Gateway

Shows the address of the IPv6 gateway.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network 1 IPv6 Gateway
*s Network 1 IPv6 Gateway: ""
** end
```

### xStatus Network 1 VLAN Voice VlanId

The feedback shows the VLAN Voice ID; or Off if the VLAN Voice Mode is not enabled.

**Value space of the result returned:**

<"Off"/"1".."4094">

**Example:**

```
xStatus Network 1 VLAN Voice VlanId
*s Network 1 VLAN Voice VlanId: "Off"
** end
```

### xStatus Network 1 CDP Platform

Returns the hardware platform name of the switch connected to the endpoint.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP Platform
*s Network 1 CDP Platform: "cisco WS-C3750X-48P"
** end
```

### xStatus Network 1 CDP Version

Returns information about the software release version the switch is running.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP Version
*s Network 1 CDP Version: "Cisco IOS Software, C3750E Software (C3750E-UNIVERSALK9-M), Version 15.0(1)SE2, RELEASE SOFTWARE (fc3)*Technical Support: http://www.cisco.com/techsupport*Copyright (c) 1986-2011 by Cisco Systems, Inc.*Compiled Thu 22-Dec-11 00:05 by prod_rel_team"
** end
```

### xStatus Network 1 CDP Capabilities

Describes the functional capability for the switch in form of a device type. See documentation for CDP protocol for more information.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP Capabilities
*s Network 1 CDP Capabilities: "0x0029"
** end
```

### xStatus Network 1 CDP DeviceId

Identifies the name of the switch in form of a character string.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP DeviceId
*s Network 1 CDP DeviceId: "123456.company.com"
** end
```

### xStatus Network 1 CDP PortID

Returns the identification the switch uses of the port the endpoint is connected to.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP PortID
*s Network 1 CDP PortID: "GigabitEthernet1/0/23"
** end
```

### xStatus Network 1 CDP Duplex

Indicates the status (duplex configuration) of the CDP broadcast interface. Used by network operators to diagnose connectivity problems between adjacent network elements.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP Duplex
*s Network 1 CDP Duplex: "Full"
** end
```

### xStatus Network 1 CDP VTPMgmtDomain

Returns the switch's configured VTP management domain name-string.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP VTPMgmtDomain
*s Network 1 CDP VTPMgmtDomain: "anyplace"
** end
```

### xStatus Network 1 CDP Address

Returns the first network address of both receiving and sending devices.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP Address
*s Network 1 CDP Address: "192.0.1.20"
** end
```

### xStatus Network 1 CDP PrimaryMgmtAddress

Returns the management address used to configure and monitor the switch the endpoint is connected to.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP PrimaryMgmtAddress
*s Network 1 CDP PrimaryMgmtAddress: "10.1.1.2"
** end
```

### xStatus Network 1 CDP SysName

Returns the SysName as configured in the switch the endpoint is connected to.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP SysName
*s Network 1 CDP SysName: ""
** end
```

### xStatus Network 1 CDP SysObjectID

Returns the SysObjectID as configured in the switch the endpoint is connected to.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP SysObjectID
*s Network 1 CDP SysObjectID: ""
** end
```

### xStatus Network 1 CDP VoIPApplianceVlanID

Identifies the VLAN used for VoIP traffic from the endpoint to the switch. For more information see documentation of the IEEE 802.1Q protocol.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network CDP VoIPApplianceVlanID
*s Network 1 CDP VoIPApplianceVlanID: "300"
** end
```

### xStatus Network 1 DNS Domain Name

Shows the domain name.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network DNS Domain Name
*s Network 1 DNS Domain Name: "company.com"
** end
```

### xStatus Network 1 DNS Server [n] Address

Shows the IP address of the DNS server.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Network DNS Server 1 Address
*s Network 1 DNS Server 1 Address: "192.0.2.60"
** end
```

## NetworkServices status

### xStatus NetworkServices

Shows the top level overview of the network services status.

### xStatus NetworkServices NTP Address

Returns the address of the NTP server(s) the codec is using.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus NetworkServices NTP Address
*s NetworkServices NTP Address: "12.104.193.12 64.104.222.16 144.254.15.121"
** end
```

### xStatus NetworkServices NTP CurrentAddress

Returns the address of the NTP server that is currently in use.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus NetworkServices NTP CurrentAddress
*s NetworkServices NTP CurrentAddress: "123.254.15.121"
** end
```

### xStatus NetworkServices NTP Status

Returns the status of the endpoints synchronizing with the NTP server.

Unknown: State of the synchronization is unknown.

Synced: The system is in sync with the NTP server

Discarded: The NTP result has been discarded.

**Value space of the result returned:**

<Unknown/Synced/Discarded>

**Example:**

```
xStatus NetworkServices NTP Status
*s NetworkServices NTP Status: Synced
** end
```

## Preset status

### xStatus Preset

Shows the top level overview of the camera presets status.

### xStatus Preset [1..15] Defined

Shows if a camera preset is stored at this position.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Preset 1 Defined
*s Preset 1 Defined: True
** end
```

### xStatus Preset [1..15] Type

Shows the camera preset type.

**Value space of the result returned:**

<All/Camera>

**Example:**

```
xStatus Preset 1 Type
*s Preset 1 Type: All
** end
```

### xStatus Preset [1..15] Description

Lists the configured name for the specific preset.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Preset 1 Description
*s Preset 1 Description: "Zoom in"
** end
```



## Provisioning status

### xStatus Provisioning

Shows the top level overview of the provisioning status.

### xStatus Provisioning Status

Shows the status of the provisioning.

Failed: The provisioning failed.

AuthenticationFailed: The authentication failed.

Provisioned: The endpoint is provisioned.

Idle: The provisioning is not active.

NeedConfig: The endpoint needs to be configured.

ConfigError: An error occurred during configuration.

**Value space of the result returned:**

<Failed/AuthenticationFailed/Provisioned/Idle/NeedConfig/ConfigError>

**Example:**

```
xStatus Provisioning Status
*s Provisioning Status: Provisioned
** end
```

### xStatus Provisioning Reason

Shows the cause when provisioning has failed.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Reason
*s Provisioning Reason: ""
** end
```

### xStatus Provisioning Server

Identifies the server the system is provisioned to. This address may either be defined in the xConfiguration ExternalManager Address setting, or provided by DHCP.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Server
*s Provisioning Server: "192.0.2.0"
** end
```

### xStatus Provisioning NextRetry

If provisioning has failed, returns the date and time for the next automatic provisioning attempt.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning NextRetry
*s Provisioning NextRetry: "2014-04-30T14:02:22Z"
** end
```

### xStatus Provisioning Software UpgradeStatus SessionId

Shows the ID of the session for the software upgrade.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software UpgradeStatus SessionId
*s Provisioning Software UpgradeStatus SessionId: ""
** end
```

### xStatus Provisioning Software UpgradeStatus LastChange

Shows the date and time for the latest software upgrade.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software UpgradeStatus LastChange
*s Provisioning Software UpgradeStatus LastChange: "2011-06-07T07:20:03Z"
** end
```

### xStatus Provisioning Software UpgradeStatus Status

Shows the status of the software upgrade.

**Value space of the result returned:**

<None/InProgress/Failed/InstallationFailed/Succeeded>

**Example:**

```
xStatus Provisioning Software UpgradeStatus Status
*s Provisioning Software UpgradeStatus Status: None
** end
```

### xStatus Provisioning Software UpgradeStatus Phase

Shows the phase of the software upgrade.

**Value space of the result returned:**

<None/DownloadPending/FormingHierarchy/Downloading/DownloadPaused/DownloadDone/Seeding/AboutToInstallUpgrade/Postponed/PeripheralsReady/UpgradingPeripherals/Installing/InstallingPeripherals>

**Example:**

```
xStatus Provisioning Software UpgradeStatus Phase
*s Provisioning Software UpgradeStatus Phase: None
** end
```

### xStatus Provisioning Software UpgradeStatus Message

Shows the system message for the software upgrade.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software UpgradeStatus Message
*s Provisioning Software UpgradeStatus Message: ""
** end
```

### xStatus Provisioning Software UpgradeStatus VersionId

Shows the version ID of the software currently being uploaded and installed.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software UpgradeStatus VersionId
*s Provisioning Software UpgradeStatus VersionId: "s52000tc5_1_0.pkg"
** end
```

### xStatus Provisioning Software UpgradeStatus URL

Shows the URL that the new software currently is being uploaded and installed from.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software UpgradeStatus URL
*s Provisioning Software UpgradeStatus URL: "http://.../s52000tc5_1_0.pkg"
** end
```

### xStatus Provisioning Software UpgradeStatus SecondsUntilUpgrade

Indicates how many seconds remain before the software upgrade is automatically installed. The upgrade installation can be started manually by issuing the command xCommand Provisioning CompleteUpgrade or postponed with the command xCommand Provisioning PostponeUpgrade.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Provisioning Software UpgradeStatus SecondsUntilUpgrade
*s Provisioning Software UpgradeStatus SecondsUntilUpgrade: 0
** end
```

### xStatus Provisioning Software Current VersionId

Shows the version ID of the current software.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software Current VersionId
*s Provisioning Software Current VersionId: "s52000tc5_1_0.pkg"
** end
```

### xStatus Provisioning Software Current URL

Shows the URL that the current software was uploaded from.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software Current URL
*s Provisioning Software Current URL: "http://.../s52000tc5_1_0.pkg"
** end
```

### xStatus Provisioning Software Current CompletedAt

Shows date and time for when the current software upgrade was completed.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning Software Current CompletedAt
*s Provisioning Software Current CompletedAt: "2011-06-07T07:20:03Z"
** end
```

### xStatus Provisioning CUCM CAPF Mode

Shows the authentication mode required for a pending CAPF operation, if any.

IgnoreAuth: No pending or ongoing CAPF operation.

NullAuth: Pending or ongoing CAPF operation that does not require authentication.

StringAuth: Pending or ongoing CAPF operation that requires string authentication.

LSCAuth: Pending or ongoing CAPF operation that requires authentication by Locally Significant Certificate.

MICAuth: Pending or ongoing CAPF operation that requires authentication by Manufacturer Installed Certificate.

**Value space of the result returned:**

<IgnoreAuth/NullAuth/StringAuth/LSCAuth/MICAuth>

**Example:**

```
xStatus Provisioning CUCM CAPF Mode
*s Provisioning CUCM CAPF Mode: IgnoreAuth
** end
```

### xStatus Provisioning CUCM CAPF ServerName

Shows the CAPF server name. This can be a hostname, a FQDN or an IP address.

**Value space of the result returned:**

<IgnoreAuth/NullAuth/StringAuth/LSCAuth/MICAuth>

**Example:**

```
xStatus Provisioning CUCM CAPF ServerName
*s Provisioning CUCM CAPF ServerName: "192.168.0.1"
** end
```

### xStatus Provisioning CUCM CAPF ServerPort

Shows the port number to be used for CAPF operations.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Provisioning CUCM CAPF ServerPort
*s Provisioning CUCM CAPF ServerPort: 3804
** end
```

### xStatus Provisioning CUCM CAPF LSC

Shows whether a Locally Significant Certificate (LSC) is installed or not.

**Value space of the result returned:**

<NotInstalled/Installed>

**Example:**

```
xStatus Provisioning CUCM CAPF LSC
*s Provisioning CUCM CAPF LSC: NotInstalled
** end
```

### xStatus Provisioning CUCM CAPF OperationState

Shows the state of the current CAPF operation, if any.

Pending: A CAPF operation is pending.

NonPending: There is no CAPF operation in process.

InProgress: A CAPF operation is in progress.

Failed: The CAPF operation has failed.

**Value space of the result returned:**

<Pending/NonPending/InProgress/Failed>

**Example:**

```
xStatus Provisioning CUCM CAPF OperationState
*s Provisioning CUCM CAPF OperationState: NonPending
** end
```

### xStatus Provisioning CUCM CAPF OperationResult

Shows the result of the last CAPF operation.

NotSet: No CAPF operation has been executed yet.

CAPFUnknown: Unknown CAPF failure.

CAPFInvalidAuthStrLen: Invalid length of authentication string (should be 4-10 digits).

CAPFInvalidInitReason: Invalid init reason specified.

CAPFInvalidAuthMode: Invalid authentication mode.

CAPFNotNone: Last CAPF session is still running.

CAPFNullCInt: Invalid client.

CAPFNullCIntcontext: Invalid client context.

CAPFInvalidUsageStartSession: Session is in wrong state.

CAPFNullSessionData: Session context data is empty.

CAPFInvalidSession: Invalid CAPF session.

CAPFNullParameters: Invalid server parameters.

CAPFNoStat: Empty status.

CAPFTimeout: The operation has timed out.

CAPFConnLost: Connection to the CAPF server has been lost.

CAPFAbort: CAPF operation has been terminated.

CAPFKeyGenFailed: Key generation has failed.

CAPFConnectFailed: Failed to connect to CAPF server.

CAPFFenceError: Unknown internal CAPF failure.

CAPFServerBusy: CAPF server is busy.

CAPFAuthRejected: Authentication has been rejected.

CAPFInvalidParms: Invalid parameters.

CAPFCancelled: CAPF operation has been canceled.

CAPFFailed: CAPF operation has failed.

CAPFSuccess: CAPF operation has succeeded.

CAPFLSCUpdated: Locally Significant Certificate (LSC) has been updated. CAPF operation has succeeded.

**Value space of the result returned:**

<NotSet/CAPFUnknown/CAPFInvalidAuthStrLen/CAPFInvalidInitReason/CAPFInvalidAuthMode/  
CAPFNotNone/CAPFNullCInt/CAPFNullCIntcontext/CAPFInvalidUsageStartSession/  
CAPFNullSessiondata/CAPFInvalidSession/CAPFNullParameters/CAPFNoStat/CAPFTimeout/  
CAPFConnLost/CAPFAbort/CAPFKeyGenFailed/CAPFConnectFailed/CAPFFenceError/  
CAPFServerBusy/CAPFAuthRejected/CAPFInvalidParms/CAPFCancelled/CAPFFailed/  
CAPFSuccess/CAPFLSCUpdated>

**Example:**

```
xStatus Provisioning CUCM CAPF OperationResult
```

```
*s Provisioning CUCM CAPF OperationResult: NotSet
** end
```

### xStatus Provisioning CUCM ProvisionSecurity

Shows the provisioned configuration file type.

None: The provisioned configuration file is plain text or the endpoint has not been provisioned.

Signed: The provisioned configuration file is signed.

Encrypted: The provisioned configuration file is signed and encrypted.

**Value space of the result returned:**

<None/Signed/Encrypted>

**Example:**

```
xStatus Provisioning CUCM ProvisionSecurity
*s Provisioning CUCM ProvisionSecurity: None
** end
```

### xStatus Provisioning CUCM UserId

Returns the current UCM user id for this device. When the Extension Mobility service is in use, this command returns the signed in UserId.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning CUCM UserId
*s Provisioning CUCM UserId: ""
** end
```

### xStatus Provisioning CUCM CTL State

Shows whether the Certificate Trust List (CTL) file is installed or not.

**Value space of the result returned:**

<NotInstalled/Installed>

**Example:**

```
xStatus Provisioning CUCM CTL State
*s Provisioning CUCM CTL State: Installed
** end
```

### xStatus Provisioning CUCM ITL State

Shows whether the Identity Trust List (ITL) file is installed or not.

**Value space of the result returned:**

<NotInstalled/Installed>

**Example:**

```
xStatus Provisioning CUCM ITL State
*s Provisioning CUCM ITL State: Installed
** end
```

### xStatus Provisioning CUCM ExtensionMobility Enabled

Indicates if Extension Mobility is enabled for the UCM registered device.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Provisioning CUCM ExtensionMobility Enabled
*s Provisioning CUCM ExtensionMobility Enabled: False
** end
```

### xStatus Provisioning CUCM ExtensionMobility LoggedIn

Indicates whether you are logged in to Extension Mobility or not.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Provisioning CUCM ExtensionMobility LoggedIn
*s Provisioning CUCM ExtensionMobility LoggedIn: False
** end
```

### xStatus Provisioning CUCM ExtensionMobility LastLoggedInUserId

Returns the user id last logged in to the system. Only in use if UCM Extension Mobility is enabled, and UCM is configured to remember the last logged in user on an endpoint.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning CUCM ExtensionMobility LastLoggedInUserId
*s Provisioning CUCM ExtensionMobility LastLoggedInUserId: "User 1"
** end
```

### xStatus Provisioning CUCM TVS Proxy [n] Server

Returns the address of the TVS server in form of a hostname, FQDN or IPv4 address.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning CUCM TVS Proxy 1 Server
*s Provisioning CUCM TVS Proxy 1 Server: "192.0.2.0"
** end
```

### xStatus Provisioning CUCM TVS Proxy [n] IPv6Address

Returns the address of the TVS server in form of a hostname, FQDN or IPv6 address.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Provisioning CUCM TVS Proxy 1 IPv6Address
*s Provisioning CUCM TVS Proxy 1 IPv6Address: ""
** end
```

### xStatus Provisioning CUCM TVS Proxy [n] Port

Returns the number of the port the TVS is running on.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Provisioning CUCM TVS Proxy 1 Port
*s Provisioning CUCM TVS Proxy 1 Port: 2445
** end
```

### xStatus Provisioning CUCM TVS Proxy [n] Priority

Returns the Priority of the TVS proxy in use. Lowest priority proxy is preferred.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Provisioning CUCM TVS Proxy 1 Priority
*s Provisioning CUCM TVS Proxy 1 Priority: 0
** end
```

## Security status

### xStatus Security

Shows the top level overview of the security status.

### xStatus Security FIPS Mode

Shows the FIPS mode status.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Security FIPS Mode
*s Security FIPS Mode: Off
** end
```

### xStatus Security Persistency Configurations

Shows whether the systems all configurations are set to persistent or non-persistent mode. Persistent is the default mode.

**Value space of the result returned:**

<NonPersistent/Persistent>

**Example:**

```
xStatus Security Persistency Configurations
*s Security Persistency Configurations: Persistent
** end
```

### xStatus Security Persistency CallHistory

Shows whether call history logging is set to persistent or non-persistent mode. Persistent is the default mode.

**Value space of the result returned:**

<NonPersistent/Persistent>

**Example:**

```
xStatus Security Persistency CallHistory
*s Security Persistency CallHistory: Persistent
** end
```

### xStatus Security Persistency InternalLogging

Shows whether internal logging is set to persistent or non-persistent mode. Persistent is the default mode.

**Value space of the result returned:**

<NonPersistent/Persistent>

**Example:**

```
xStatus Security Persistency InternalLogging
*s Security Persistency InternalLogging: Persistent
** end
```

### xStatus Security Persistency LocalPhonebook

Shows whether local phone book is set to persistent or non-persistent mode. Persistent is the default mode.

**Value space of the result returned:**

<NonPersistent/Persistent>

**Example:**

```
xStatus Security Persistency LocalPhonebook
*s Security Persistency LocalPhonebook: Persistent
** end
```

### xStatus Security Persistency DHCP

Shows whether DHCP logging is set to persistent or non-persistent mode. Persistent is the default mode.

**Value space of the result returned:**

<NonPersistent/Persistent>

**Example:**

```
xStatus Security Persistency DHCP
*s Security Persistency DHCP: Persistent
** end
```

### xStatus Security Audit Server Port

Returns information on which syslog server port the audit logs are configured to be sent to.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Security Audit Server Port
*s Security Audit Server Port: 514
** end
```

## SIP status

### xStatus SIP

Shows the top level overview of the SIP status.

### xStatus SIP Profile 1 Proxy [1] Status

Shows the status of the communication between the endpoint and the SIP Proxy server.

Active: The communication between the endpoint and the SIP Proxy is active.

DNSFailed: The attempt to establish communication to the DNS server failed.

Off: There is no communication between the endpoint and the SIP Proxy.

Timeout: The attempt to establish communication to the SIP Proxy timed out.

UnableTCP: The system is unable to use TCP as the transport method.

UnableTLS: The system is unable to use TLS as the transport method.

Unknown: The status of the communication is not known.

AuthenticationFailed: Wrong user name or password.

#### Value space of the result returned:

<Active/DNSFailed/Off/Timeout/UnableTCP/UnableTLS/Unknown/AuthenticationFailed>

#### Example:

```
xStatus SIP Profile 1 Proxy 1 Status
*s SIP Profile 1 Proxy 1 Status: Active
** end
```

### xStatus SIP Profile 1 Proxy [1] Address

Shows the address of the SIP Proxy that the system communicates with.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus SIP Profile 1 Proxy 1 Address
*s SIP Profile 1 Proxy 1 Address: "192.0.2.50"
** end
```

### xStatus SIP Profile 1 Secure

Shows the encryption status of the signaling with the SIP Proxy server.

#### Value space of the result returned:

<True/False>

#### Example:

```
xStatus SIP Profile 1 Secure
*s SIP Profile 1 Secure: True
** end
```

### xStatus SIP Profile 1 Verified

Shows whether or not the SSL certificate of the server that the video system / codec tries to register to is included in the codec's trusted CA-list. The server is typically a Cisco VCS or CUCM.

True: The server's SIP certificate is checked against the trusted CA-list on the codec and found valid. Additionally, the fully qualified domain name of the server matches the valid certificate.

False: A TLS connection is not set up because the SIP certificate verification failed or the domain name did not match. Note that the status also returns False when TLS is not used (xConfiguration SIP Profile 1 DefaultTransport not set to TLS) or certificate verification is switched off (xConfiguration SIP Profile TlsVerify set to Off).

#### Value space of the result returned:

<True/False>

#### Example:

```
xStatus SIP Profile 1 Verified
*s SIP Profile 1 Verified: False
** end
```

### xStatus SIP Profile 1 Authentication

Shows which authentication mechanism is used when registering to the SIP Proxy Server.

Digest: Uses the Digest access authentication method, as specified by RFC 2069.

NTLM: Uses the NTLM authentication method, which is a Microsoft authentication protocol.

Off: No authentication mechanism is used.

#### Value space of the result returned:

<Digest/NTLM/Off>

#### Example:

```
xStatus SIP Profile 1 Authentication
*s SIP Profile 1 Authentication: Off
** end
```



### xStatus SIP Profile 1 Mailbox MessagesWaiting

Indicates how many new messages are in the mailbox.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus SIP Profile 1 Mailbox MessagesWaiting
*s SIP Profile 1 Mailbox MessagesWaiting: 0
** end
```

### xStatus SIP Profile 1 CallForward Mode

Indicates whether the call forward mode for SIP is set to on or off.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus SIP Profile 1 CallForward Mode
*s SIP Profile 1 CallForward Mode: Off
** end
```

### xStatus SIP Profile 1 CallForward URI

Indicates the address the incoming calls are directed to when call forward mode is set on.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SIP Profile 1 CallForward URI
*s SIP Profile 1 CallForward URI: ""
** end
```

### xStatus SIP Profile 1 CallForward DisplayName

Returns the URI that is displayed on the user interface for the forwarded call.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SIP Profile 1 CallForward DisplayName
*s SIP Profile 1 CallForward DisplayName: ""
** end
```

### xStatus SIP Profile 1 Registration [n] Status

Shows the status of the registration to the SIP Proxy Server.

Deregister: The system is in the process of de-registering to the SIP Proxy.

Failed: The system failed to register to the SIP Proxy.

Inactive: The system is not registered to any SIP Proxy.

Registered: The system is registered to the SIP Proxy.

Registering: The system is in the process of registering to the SIP Proxy.

**Value space of the result returned:**

<Deregister/Failed/Inactive/Registered/Registering>

**Example:**

```
xStatus SIP Profile 1 Registration 1 Status
*s SIP Profile 1 Registration 1 Status: Registered
** end
```

### xStatus SIP Profile 1 Registration [n] Reason

Shows a message to explain the reason why the SIP registration failed.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SIP Profile 1 Registration 1 Reason
*s SIP Profile 1 Registration 1 Reason: "404 Not Found"
** end
```

### xStatus SIP Profile 1 Registration [n] URI

Shows the URI used for registration to the SIP Proxy server.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SIP Profile 1 Registration 1 URI
*s SIP Profile 1 Registration 1 URI: "firstname.lastname@company.com"
** end
```

### xStatus SIP Profile 1 DirectoryURI Primary URI

Returns the primary directory URI set for the endpoint in UCM. Directory URI is associated with a directory number, and can be used to make calls and identify callers. Up to five directory URIs can be set, but only one of them can be set as primary.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SIP Profile DirectoryURI Primary URI
*s SIP Profile 1 DirectoryURI Primary URI: "123456@company.com"
** end
```

## Standby status

### xStatus Standby Active

Shows if the system is in standby or not.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Standby Active
*s Standby Active: Off
** end
```

## SystemUnit status

### xStatus SystemUnit

Shows the top level overview of the system unit status.

### xStatus SystemUnit ProductType

Shows the product type.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit ProductType
*s SystemUnit ProductType: "Cisco TelePresence Codec"
** end
```

### xStatus SystemUnit ProductId

Shows the product identity.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit ProductId
*s SystemUnit ProductId: "Cisco TelePresence Codec C90"
** end
```

### xStatus SystemUnit ProductPlatform

Shows the product platform.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit ProductPlatform
*s SystemUnit ProductPlatform: "C90"
** end
```

### xStatus SystemUnit Uptime

Shows the number of seconds since the last restart of the codec.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus SystemUnit Uptime
*s SystemUnit Uptime: 597095
** end
```

### xStatus SystemUnit Software Application

Shows which software application is running on the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software Application
*s SystemUnit Software Application: "Endpoint"
** end
```

### xStatus SystemUnit Software Version

Shows the software version installed on the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software Version
*s SystemUnit Software Version: "TC5.1.0"
** end
```

### xStatus SystemUnit Software Name

Shows the name of the software that is installed on the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software Name
*s SystemUnit Software Name: "s52000"
** end
```

#### xStatus SystemUnit Software ReleaseDate

Shows the release date of the software installed on the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software ReleaseDate
*s SystemUnit Software ReleaseDate: "2012-02-22"
** end
```

#### xStatus SystemUnit Software MaxVideoCalls

Shows the the maximum number of simultaneous video calls that is supported.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus SystemUnit Software MaxVideoCalls
*s SystemUnit Software MaxVideoCalls: 3
** end
```

#### xStatus SystemUnit Software MaxAudioCalls

Shows the the maximum number of simultaneous audio calls that is supported.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus SystemUnit Software MaxAudioCalls
*s SystemUnit Software MaxAudioCalls: 4
** end
```

#### xStatus SystemUnit Software OptionKeys MultiSite

Shows if the system has the option key installed that supports the MultiSite functionality.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software OptionKeys MultiSite
*s SystemUnit Software OptionKeys MultiSite: "true"
** end
```

#### xStatus SystemUnit Software OptionKeys PremiumResolution

Shows if the system has the option key installed that supports the PremiumResolution functionality.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software OptionKeys PremiumResolution
*s SystemUnit Software OptionKeys PremiumResolution: "true"
** end
```

#### xStatus SystemUnit Software OptionKeys Encryption

Shows if the system has the option key installed that supports the encryption functionality.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Software OptionKeys Encryption
*s SystemUnit Software OptionKeys Encryption: "true"
** end
```

#### xStatus SystemUnit Hardware Module SerialNumber

Shows the serial number of the hardware module in the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Hardware Module SerialNumber
*s SystemUnit Hardware Module SerialNumber: "FTT123456A1"
** end
```

### xStatus SystemUnit Hardware Module CompatibilityLevel

The Cisco TelePresence endpoints are using a NAND flash memory for general storage. The endpoints running TC software are manufactured with a new version of the flash memory. Endpoints having the new version of the flash memory must run software TC4.2.1 or later. Some previous TC software versions are updated to support the new flash memory. Please check the release note to find if the new version of the flash memory is supported. If your endpoint does not have the CompatibilityLevel command it does not have the new flash memory installed.

The result returned when running the command is either 0 or 1:

0 = The system does not have the new flash memory installed.

1 = The system has the new flash memory installed. If downgraded, it can only be downgraded to previous TC software versions having support for the new version of the flash memory.

#### Value space of the result returned:

<"1"/"0">

#### Example:

```
xStatus SystemUnit Hardware Module CompatibilityLevel
*s SystemUnit Hardware Module CompatibilityLevel: 1
** end
```

### xStatus SystemUnit Hardware MainBoard SerialNumber

Shows the serial number of the main board in the codec.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus SystemUnit Hardware MainBoard SerialNumber
*s SystemUnit Hardware MainBoard SerialNumber: "F1234567"
** end
```

### xStatus SystemUnit Hardware MainBoard Identifier

Shows the revision of the main board in the codec.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus SystemUnit Hardware MainBoard Identifier
*s SystemUnit Hardware MainBoard Identifier: "101400-5 [06]"
** end
```

### xStatus SystemUnit Hardware MonitoringSoftware

The feedback shows the monitoring software id.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus SystemUnit Hardware MonitoringSoftware
*s SystemUnit Hardware MonitoringSoftware: "39"
** end
```

### xStatus SystemUnit Hardware Temperature

The feedback shows the current maximum temperature (degree Celsius) measured in the codec/system.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus SystemUnit Hardware Temperature
*s SystemUnit Hardware Temperature: "64.0"
** end
```

### xStatus SystemUnit Hardware TemperatureThreshold

Returns information on the maximum temperature for the codec. If this temperature is exceeded the system automatically shuts down.

#### Value space of the result returned:

<String>

#### Example:

```
xStatus SystemUnit Hardware TemperatureThreshold
*s SystemUnit Hardware TemperatureThreshold: "85"
** end
```

### xStatus SystemUnit Hardware UDI

Shows the unique device identifier (UDI) for the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Hardware UDI
*s SystemUnit Hardware UDI: "CTS-SX80CODEC V01 FTT123456A1"
** end
```

### xStatus SystemUnit State System

Shows what state the system is in.

InCall: The system is in a call.

Initialized: The system is ready for use.

Initializing: The system is initializing.

Multisite: The system is in a Multisite conference.

Sleeping: The system is in sleep mode.

**Value space of the result returned:**

<InCall/Initialized/Initializing/Multisite/Sleeping>

**Example:**

```
xStatus SystemUnit State System
*s SystemUnit State System: Initialized
** end
```

### xStatus SystemUnit State MaxNumberOfCalls

Shows the the maximum number of simultaneous calls.

**Value space of the result returned:**

<0..5>

**Example:**

```
xStatus SystemUnit State MaxNumberOfCalls
*s SystemUnit State MaxNumberOfCalls: 3
** end
```

### xStatus SystemUnit State MaxNumberOfActiveCalls

Shows the the maximum number of simultaneous active calls. Calls that are set on hold/transfer are not counted as active.

**Value space of the result returned:**

<0..5>

**Example:**

```
xStatus SystemUnit State MaxNumberOfActiveCalls
*s SystemUnit State MaxNumberOfActiveCalls: 3
** end
```

### xStatus SystemUnit State NumberOfActiveCalls

Shows the number of active calls.

**Value space of the result returned:**

<0..5>

**Example:**

```
xStatus SystemUnit State NumberOfActiveCalls
*s SystemUnit State NumberOfActiveCalls: 0
** end
```

### xStatus SystemUnit State NumberOfSuspendedCalls

Shows the number of suspended calls.

**Value space of the result returned:**

<0..5>

**Example:**

```
xStatus SystemUnit State NumberOfSuspendedCalls
*s SystemUnit State NumberOfSuspendedCalls: 0
** end
```

### xStatus SystemUnit State NumberOfInProgressCalls

Shows the number of calls in progress.

**Value space of the result returned:**

<0..5>

**Example:**

```
xStatus SystemUnit State NumberOfInProgressCalls
*s SystemUnit State NumberOfInProgressCalls: 0
** end
```

### xStatus SystemUnit State Subsystem Application

Shows the status of the sub system application.  
 Initialized: The sub-system application is initialized.  
 Initializing: The sub-system application is initializing.

**Value space of the result returned:**

<Initialized/Initializing>

**Example:**

```
xStatus SystemUnit State Subsystem Application
*s SystemUnit State Subsystem Application: Initialized
** end
```

### xStatus SystemUnit ContactInfo

Returns the system's active contact information. This is the address which is used to reach this system.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit ContactInfo
*s SystemUnit ContactInfo: "firstname.lastname@company.com"
** end
```

### xStatus SystemUnit ContactName

Returns the system's active contact name. The result depends on which protocol, if any, the system is registered on. Unlike Contact Info, Contact Name is not configurable and is automatically set by the system.

**Value space of the result returned:**

<String>

**Example:**

```
Not registered to a protocol
xStatus SystemUnit ContactName: "192.0.2.0"
Example 2: Registered on SIP
xStatus SystemUnit ContactName: "1234@192.0.2.0"
```

### xStatus SystemUnit Notifications Notification [n] Type

Lists the system notification types. Notifications are issued e.g. when a system is rebooted because of a software upgrade, or when a factory reset is performed.

FactoryResetOK: This value is returned after a successful factory reset.  
 FactoryResetFailed: This value is returned after a failed factory reset attempt.  
 SoftwareUpgradeOK: This value is returned after a successful software upgrade.  
 SoftwareUpgradeFailed: This value is returned after a failed software upgrade attempt.  
 RebootRequired: This value is returned when a reboot is required.  
 Other: This value is returned for any other notifications.

All the notifications can be removed from the list by issuing the xCommand SystemUnit Notifications RemoveAll command.

**Value space of the result returned:**

<FactoryResetOK, FactoryResetFailed, SoftwareUpgradeOK, SoftwareUpgradeFailed, RebootRequired, Other>

**Example:**

```
xStatus SystemUnit Notifications Notification 1 Type
*s SystemUnit Notifications Notification 1 Type: SoftwareUpgradeOK
** end
```

### xStatus SystemUnit Notifications Notification [n] Text

Lists text related to important system notifications. Notifications are issued e.g. when a system was rebooted because of a software upgrade, or when a factory reset has been performed.

All the notifications can be removed from the list by issuing the xCommand SystemUnit Notifications RemoveAll command.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Notifications Notification 1 Text
*s SystemUnit Notifications Notification 1 Text: "OK"
** end
```

### xStatus SystemUnit Diagnostics LastRun

Shows when the SystemUnit diagnostics was last run on the codec.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Diagnostics LastRun
*s SystemUnit Diagnostics LastRun: "2012-08-17, 16:23:27"
** end
```

### xStatus SystemUnit Diagnostics Message [n] Type

Returns information on the results of the latest diagnostics on the system.

**Value space of the result returned:**

<ValidAdminPassword/CamerasDetected/H320GatewayStatus/ISDNLinkCompatibility/SIPProfileRegistration/SIPListenPortAndOutboundMode/TLSVerifyRequiredCerts/DefaultCallProtocolRegistered/NetSpeedAutoNegotiated/HasValidReleaseKey/EthernetDuplexMatches/IPv4Assignment/IPv6Assignment/SIPProfileType/CallProtocolIPStackPlatformCompatability/CameraStatus/CameraPairing/CameraSoftwareVersion/SelectedVideoInputSourceConnected/OSDVideoOutput/VideoFromInternalCamera/H323GatekeeperStatus/SipIccAndAnatConflict/UdpPortRangeViolation/ProvisioningStatus/CallProtocolVcsProvisioningCompatibility/CallProtocolDualStackConfig/NTPStatus>

**Example:**

```
xStatus SystemUnit Diagnostics Message type
*s SystemUnit Diagnostics Message 1 Type: InvalidAdminPassword
** end
```

### xStatus SystemUnit Diagnostics Message [n] Level

Returns information on the level of the diagnostics message.

Error: There is an error in the system. The system can still be used, but there can be some restrictions.

Warning: A problem is detected and a more specific report follows indicating the exact problem.

Critical: The warning level is critical. The system cannot be used.

**Value space of the result returned:**

<Error/Warning/Critical>

**Example:**

```
xStatus SystemUnit Diagnostics Message Level
*r Status (status=Error):
Reason: No match on address expression
XPath: Status/SystemUnit/Diagnostics/Message/Level
** end
```

### xStatus SystemUnit Diagnostics Message [n] Description

A description of the current diagnostics alerts.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Diagnostics Message Description
*s SystemUnit DiagnosticsResult Message 1 Description: "IP configuration incomplete"
** end
```

### xStatus SystemUnit Diagnostics Message [n] References

Additional information on the diagnostics alert, if available.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus SystemUnit Diagnostics Message References
*s SystemUnit DiagnosticsResult Message 1 References: ""
** end
```



## Time status

### xStatus Time

Shows the top level overview of the time status.

### xStatus Time ZoneOlson

Shows the current time zone in Olson format.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Time ZoneOlson
*s Time ZoneOlson: Europe/Berlin
** end
```

### xStatus Time SystemTime

Returns the date and time set on the system.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Time SystemTime
*s Time SystemTime: "2014-04-25T10:04:03Z"
** end
```

## UserInterface status

### xStatus UserInterface OSD Output

Indicates which monitor is used for on-screen display output.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus UserInterface OSD Output
*s UserInterface OSD Output: 1
** end
```

## Video status

### xStatus Video Input

Shows the top level overview of the video input status.

### xStatus Video Monitors

Returns the monitor layout mode.

Single: The same layout is shown on all monitors.

Dual: The layout is distributed on two monitors.

DualPresentationOnly: All participants in the call will be shown on the first monitor, while the presentation (if any) will be shown on the second monitor.

Quadruple: The layout is distributed on four monitors, so that each remote participant and the presentation will be shown on separate monitors.

#### Value space of the result returned:

<Single/Dual/DualPresentationOnly/Triple/Quadruple>

#### Example:

```
xStatus Video Monitors
*s Video Monitors: Single
** end
```

### xStatus Video Input Connector [n] Connected

Shows whether is something connected to the specified connector. Not all connections can be detected.

#### Value space of the result returned:

<False/True/Unknown>

#### Example:

```
xStatus Video Input Connector 1 Connected
*s Video Input Connector 1 Connected: True
** end
```

### xStatus Video Input Connector [n] SignalState

Shows the signal state for the specified input.

Unknown: The signal format is unknown.

OK: A signal is detected and the signal format is supported.

Unsupported: A signal is detected, but the signal format is not supported.

#### Value space of the result returned:

<OK/Unknown/Unsupported>

#### Example:

```
xStatus Video Input Connector 1 SignalState
*s Video Input Connector 1 SignalState: OK
** end
```

### xStatus Video Input Connector [n] SourceId

Shows the identifier of the input source that the connector is associated with.

#### Value space of the result returned:

<Integer>

#### Example:

```
xStatus Video Input Connector 1 SourceId
*s Video Input Connector 1 SourceId: 1
** end
```

### xStatus Video Input Connector [n] Type

Shows which connector type it is.

#### Value space of the result returned:

<Composite/DVI/HDMI/Unknown/YC>

#### Example:

```
xStatus Video Input Connector 1 Type
*s Video Input Connector 1 Type: HDMI
** end
```

### xStatus Video Input LastConnectedSource

Shows the last connected video input source.

**Value space of the result returned:**

<1..3>

**Example:**

```
xStatus Video Input LastConnectedSource
*s Video Input LastConnectedSource: 0
** end
```

### xStatus Video Input MainVideoSource

Returns the local video input currently used as the main source. The main video source is set with the xConfiguration Video Input VideoMainSource command.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Video Input MainVideoSource
*s Video Input MainVideoSource: 1
** end
```

### xStatus Video Input Source [n] ConnectorId

Shows the identifier of the connector that is associated with the input source.

**Value space of the result returned:**

<1..5>

**Example:**

```
xStatus Video Input Source 1 ConnectorId
*s Video Input Source 1 ConnectorId: 1
** end
```

### xStatus Video Input Source [n] Resolution Height

Shows the resolution height (in pixels) for the video input source.

**Value space of the result returned:**

<0..3000>

**Example:**

```
xStatus Video Input Source 1 Resolution Height
*s Video Input Source 1 Resolution Height: 1080
** end
```

### xStatus Video Input Source [n] Resolution Width

Shows the resolution width (in pixels) for the video input source.

**Value space of the result returned:**

<0..4000>

**Example:**

```
xStatus Video Input Source 1 Resolution Width
*s Video Input Source 1 Resolution Width: 1920
** end
```

### xStatus Video Input Source [n] Resolution RefreshRate

Shows the resolution refresh rate (Hz) for the video input source.

**Value space of the result returned:**

<0..300>

**Example:**

```
xStatus Video Input Source 1 Resolution RefreshRate
*s Video Input Source 1 Resolution RefreshRate: 50
** end
```

### xStatus Video Input Source [n] Resolution FormatType

Shows the resolution format type for the video input source.

**Value space of the result returned:**

<Unknown/AnalogCVTBlanking/AnalogCVTReducedBlanking/AnalogGTFDefault/  
AnalogGTFSecondary/AnalogDiscreteTiming/AnalogDMTBlanking/AnalogCEABlanking/Digital>

**Example:**

```
xStatus Video Input Source 1 Resolution FormatType
*s Video Input Source 1 Resolution FormatType: Digital
** end
```

### xStatus Video Input Source [n] Resolution FormatStatus

Shows the resolution format status for the video input source.

**Value space of the result returned:**

<Ok/OutOfRange/NotFound/Interlaced/Error/Unknown>

**Example:**

```
xStatus Video Input Source 1 Resolution FormatStatus
*s Video Input Source 1 Resolution FormatStatus: Ok
** end
```

### xStatus Video Input Source [n] MediaChannelId

For internal use only.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Video Input Source MediaChannelId
*s Video Input Source 1 MediaChannelId: 2
*s Video Input Source 2 MediaChannelId: 3
** end
```

### xStatus Video Output

Shows the top level overview of the video output status.

### xStatus Video Output Connector [n] Connected

Describes whether a device (for example a display) is connected to the output connector or not. When a display enters standby mode, the endpoint may not be able to detect it. The connector status will then return False/Unknown even if the display is physically connected.

True: A device is connected to the video output connector.

False: Nothing is connected to the video output connector.

**Value space of the result returned:**

<True/False>

**Example:**

```
xStatus Video Output Connector 1 Connected
*s Video Output Connector 1 Connected: True
** end
```

### xStatus Video Output Connector [n] MonitorRole

Describes which video stream is shown on the device that is connected to the video output connector.

First/Second/Third: The role of the monitor in a multimonitor setup. In a singlemonitor setup, there is no difference between First, Second and Third.

PresentationOnly: Shows presentation video stream if active.

Recorder: Shows all participants, including the local main video. If active, shows also the presentation.

**Value space of the result returned:**

<First/Second/Third/PresentationOnly/Recorder>

**Example:**

```
xStatus Video Output Connector 1 MonitorRole
*s Video Output Connector 1 MonitorRole: First
** end
```

### xStatus Video Output Connector [n] Resolution Height

Shows the resolution height (in pixels) for the video output connector.

**Value space of the result returned:**

<120..3000>

**Example:**

```
xStatus Video Output Connector 1 Resolution Height
*s Video Output Connector 1 Resolution Height: 1080
** en
```

### xStatus Video Output Connector [n] Resolution Width

Shows the resolution width (in pixels) for the video output connector.

**Value space of the result returned:**

<176..4000>

**Example:**

```
xStatus Video Output Connector 1 Resolution Width
*s Video Output Connector 1 Resolution Width: 1920
** end
```

### xStatus Video Output Connector [n] Resolution RefreshRate

Shows the resolution refresh rate (Hz) for the video output connector.

**Value space of the result returned:**

<1..300>

**Example:**

```
xStatus Video Output Connector 1 Resolution RefreshRate
*s Video Output Connector 1 Resolution RefreshRate: 60
** end
```

### xStatus Video Output Connector [n] Type

Shows the type of connector.

HDMI: It is an HDMI connector.

DVI: It is an DVI connector.

**Value space of the result returned:**

<HDMI/DVI>

**Example:**

```
xStatus Video Output Connector 1 Type
*s Video Output Connector 1 Type: HDMI
** end
```

### xStatus Video Layout

Shows the top level overview of the video layout status.

### xStatus Video Layout Mode

Indicates type of layout currently used by the codec, custom or default.

**Value space of the result returned:**

<Default/Custom>

**Example:**

```
xStatus Video Layout Mode
*s Video Layout Mode: Default
** end
```

### xStatus Video Layout PresentationView

Returns information about the presentation view mode.

**Value space of the result returned:**

<Default/Maximized/Minimized>

**Example:**

```
xStatus Video Layout PresentationView
*s Video Layout PresentationView: "Default"
** end
```

### xStatus Video Layout Site [n] Output [n] FamilyName

Shows the name of the video layout family.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Video Layout Site 1 Output 1 FamilyName
*s Video Layout Site 1 Output 1 FamilyName: "fullscreen"
** end
```

### xStatus Video Layout Site [n] Output [n] FullFamilyName

Shows the name, included information about self-view on/off, for the video layout family.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Video Layout Site 1 Output 1 FullFamilyName
*s Video Layout Site 1 Output 1 FullFamilyName:
"fullscreen-local-single-camctrl"
** end
```

### xStatus Video Layout Site [n] Output [n] GraphicName

Shows the name of the graphic layout. The name identifies the layout used right now at the specified output.

NOTE: Note that while the FamilyName is constant as long as the configurations on the system does not change, the GraphicName varies depending on system state (the number of participants for instance).

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Video Layout Site 1 Output 1 GraphicName
*s Video Layout Site 1 Output 1 GraphicName: "full-pip"
** end
```

### xStatus Video Layout Site [n] Output [n] Frame [n] PositionX

Shows the horizontal position of the upper left corner of the frame.

**Value space of the result returned:**

<0..10000>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 PositionX
*s Video Layout Site 1 Output 1 Frame 1 PositionX: 0
** end
```

### xStatus Video Layout Site [n] Output [n] Frame [n] PositionY

Shows the vertical position of the upper left corner of the frame.

**Value space of the result returned:**

<0..10000>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 PositionY
*s Video Layout Site 1 Output 1 Frame 1 PositionY: 0
** end
```

### xStatus Video Layout Site [n] Output [n] Frame [n] Width

Shows the width of the frame.

**Value space of the result returned:**

<0..10000>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 Width
*s Video Layout Site 1 Output 1 Frame 1 Width: 10000
** end
```

### xStatus Video Layout Site [n] Output [n] Frame [n] Height

Shows the height of the frame.

**Value space of the result returned:**

<0..10000>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 Height
*s Video Layout Site 1 Output 1 Frame 1 Height: 10000
** end
```

### xStatus Video Layout Site [n] Output [n] Frame [n] Layer

Shows the layer of the frame.

**Value space of the result returned:**

<1..6>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 Layer
*s Video Layout Site 1 Output 1 Frame 1 Layer: 1
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] MediaChannelId**

For internal use only.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Video Layout Site Output Frame MediaChannelId
*s Video Layout Site 1 Output 1 Frame 1 MediaChannelId: 157
*s Video Layout Site 1 Output 2 Frame 1 MediaChannelId: 157
*s Video Layout Site 1 Output 3 Frame 1 MediaChannelId: 157
*s Video Layout Site 1 Output 4 Frame 1 MediaChannelId: 157
*s Video Layout Site 1 Output 5 Frame 1 MediaChannelId: 157
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] VideoSourceType**

Describes the video source type in the frame.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 VideoSourceType
*s Video Layout Site 1 Output 1 Frame 1 VideoSourceType: "graphic"
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] VideoSourceId**

Shows the video source Id which is used when adding or updating frames. See the xCommand Video Layout Frame Add and xCommand Video Layout Frame Update.

**Value space of the result returned:**

<Integer>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 VideoSourceId
*s Video Layout Site 1 Output 1 Frame 1 VideoSourceId: 1
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] InputNumber**

Shows the layout input number.

**Value space of the result returned:**

<1..4>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 InputNumber
*s Video Layout Site 1 Output 1 Frame 1 InputNumber: 1
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] Filename**

Shows the filename of the layout frame.

**Value space of the result returned:**

<String>

**Example:**

```
xStatus Video Layout Site 1 Output 1 Frame 1 Filename
*s Video Layout Site 1 Output 1 Frame 1 Filename: "/user/posters/wallpaper.png"
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] VideoSourceContent**

Shows the video source content type of each layout frame.

noSource: There is no source.

black: The frame is black.

main: The frame displays the main image from a local or a remote user.

self-view: The frame displays the self-view image.

selfviewPip: The frame displays the self-view image in PiP format.

speaker: The frame displays the image of the speaker.

speakerPip: The frame displays the image of the speaker in PiP format.

presentation: The frame displays the image of the presentation.

presentationPip: The frame displays the image of the presentation in PiP format.

presentationPreview: The frame displays the preview image of the presentation.

localInput: The frame displays the image of the local input source.

wallpaper: The frame displays the wallpaper.

gui: The frame displays the user interface.

internal: For internal use.

**Value space of the result returned:**

<noSource/black/main/selfview/selfviewPip/speaker/speakerPip/presentation/presentationPip/presentationPreview/localInput/wallpaper/gui/internal>

**Example:**

```
xStatus Video Layout Site Output Frame VideoSourceContent
*s Video Layout Site 1 Output 1 Frame 1 VideoSourceContent: wallpaper
*s Video Layout Site 1 Output 2 Frame 1 VideoSourceContent: wallpaper
*s Video Layout Site 1 Output 3 Frame 1 VideoSourceContent: wallpaper
*s Video Layout Site 1 Output 3 Frame 2 VideoSourceContent: gui
*s Video Layout Site 1 Output 4 Frame 1 VideoSourceContent: wallpaper
*s Video Layout Site 1 Output 5 Frame 1 VideoSourceContent: wallpaper
** end
```

**xStatus Video Layout Site [n] Output [n] Frame [n] FrameContainerId**

For internal use only.

**Value space of the result returned:**

<Integer>

**xStatus Video Layout Site [n] Output [n] FrameContainer [n] PositionX**

For internal use only.

**Value space of the result returned:**

<Integer>

**xStatus Video Layout Site [n] Output [n] FrameContainer [n] PositionY**

For internal use only.

**Value space of the result returned:**

<Integer>

**xStatus Video Layout Site [n] Output [n] FrameContainer [n] Width**

For internal use only.

**Value space of the result returned:**

<Integer>

**xStatus Video Layout Site [n] Output [n] FrameContainer [n] Height**

For internal use only.

**Value space of the result returned:**

<Integer>

**xStatus Video Layout Site [n] Output [n] FrameContainer [n] Content**

For internal use only.

**Value space of the result returned:**

<Integer>

**xStatus Video Selfview Mode**

Shows whether selfview mode is set on or not.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Video Selfview Mode
*s Video Selfview Mode: Off
** end
```



### xStatus Video Selfview FullscreenMode

Shows whether selfview is set on full screen mode or not.

**Value space of the result returned:**

<On/Off>

**Example:**

```
xStatus Video Selfview FullscreenMode
*s Video Selfview FullscreenMode: Off
** end
```

### xStatus Video Selfview PIPPosition

Shows the position of the selfview image on the screen.

**Value space of the result returned:**

<UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

**Example:**

```
xStatus Video Selfview PIPPosition
*s Video Selfview PIPPosition: LowerRight
** end
```

### xStatus Video Selfview OnMonitorRole

Identifies which monitor(s) contains the selfview, if present.

**Value space of the result returned:**

<First/Second/Third/Fourth>

**Example:**

```
xStatus Video Selfview OnMonitorRole
*s Video Selfview OnMonitorRole: First
** end
```

### xStatus Video PIP ActiveSpeaker Position

Shows the position of the active speaker's image on the screen.

**Value space of the result returned:**

<UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

**Example:**

```
xStatus Video PIP ActiveSpeaker Position
*s Video PIP ActiveSpeaker Position: UpperCenter
** end
```

### xStatus Video PIP Presentation Position

Shows the position of the presentation image on the screen.

**Value space of the result returned:**

<UpperLeft/UpperCenter/UpperRight/CenterLeft/CenterRight/LowerLeft/LowerRight>

**Example:**

```
xStatus Video PIP Presentation Position
*s Video PIP Presentation Position: CenterLeft
** end
```

### xStatus Video OSD Output

This status is replaced with xStatus UserInterface OSD Output.

### xStatus Video OSD Mode

Indicates whether on-screen display is in indicator or full mode. This status is deprecated, and will be replaced in the next release.

Indicators: The on-screen display is in passive mode when a Touch controller is paired to the system.

Full: Not in use for this product.

**Value space of the result returned:**

<Indicators/Full>

**Example:**

```
xStatus Video OSD Mode
*s Video OSD Mode: Indicators
** end
```

## Experimental status

The Experimental status is for testing only and should not be used unless agreed with Cisco. These settings are not documented and WILL change in later releases.

Chapter 6

# *Appendices*

## About startup scripts

You can add one or more startup scripts to the codec. A startup script contains commands (xCommand) and configurations (xConfiguration) that will be executed as part of the start up procedure every time the codec boots. A few commands and configurations cannot be placed in a startup script, e.g. xCommand Boot.

Use the web interface of the codec to create and manage startup scripts.

Read more about the web interface and startup scripts in the Administrator guide for your product.

## The SystemTools commands

**Note:** The systemtools commands are used for administrative control of the codec and is only available from a command line interface. Systemtools should not be used to program the codec.

Required parameters in angle brackets: <text>

Optional parameters in square brackets: [text]

To get an overview of the supported commands type "systemtools ?".

### Example:

```
systemtools ?
authorizedkeys
idefixversion
license
network
pairing
passwd
pki
rootsettings
securitysettings
securitystatus
selectsw
sudo
whoami
```

To see the usage of the commands add a question mark after the command.

### Example:

```
systemtools authorizedkeys ?
usage: authorizedkeys <add <method> <key>
[comment] | delete <id> | list | clear>
OK
```

### systemtools authorizedkeys add <method> <key> [comment]

Add the SSH keys on the codec.

*method(r)*: The encryption method used, which can be ssh-rsa or ssh-dss.

*key(r)*: The public key as it is in the ssh public key file.

*comment*: Optional comment.

### systemtools authorizedkeys delete <id>

Delete the given SSH key on the codec, defined by the id.

*id(r)*: The id as as displayed in the authorized keys list.

### systemtools authorizedkeys list

List the SSH keys on the codec.

### systemtools authorizedkeys clear

Clear all SSH keys on the codec.

### systemtools idefixversion

Returns the software version of a Touch controller that is connected to the codec.

### systemtools license list

Lists all the licenses for the codec.

### systemtools license show <name>

Shows the content of a license file, defined by the name.

*name(r)*: The name of the license file.

### systemtools network ping <hostname>

Network debug command.

*hostname(r)*: The IP address or URL of the host.

### systemtools network traceroute <hostname>

Network debug command.

*hostname(r)*: The IP address or URL of the host.

### systemtools network netstat

Network debug command.

### systemtools network addr

Check the systems IP address.

### systemtools network ifconfig

Network debug command.

### systemtools pairing unpair

Remove association with Cisco TelePresence Touch controller.

### systemtools passwd

Change the password for the logged in user.

### systemtools pki list

Lists the codec certificate and CA list if they exist.

### systemtools pki delete <cert-name>

Delete the codec certificate and CA list if they exist.

*cert-name(r)*: The name of the certificate.

### systemtools securitysettings jitc

Set up security requirements so they meet JITC.

Set password and PIN polices enforced on the codec.

### systemtools securitysettings isjitc

Check if the current settings are JTIC compliant.

### systemtools securitysettings default

Revert to default security settings.

**systemtools securitysettings ask**

Query for the separate configurations. When issuing this command you can see each policy separately.

- Press enter to keep the current value.
- Enter a number and press enter to change the given policy.
- The default value "0" indicates no restrictions.

Max failed login attempts [0]?

- Number of failed logins until a user is set inactive.

Suspend-time after max failed login attempts (minutes) [0]?

- Number of minutes the user is set inactive after maximum failed login attempts have been exceeded.

Max simultaneous sessions total [0]?

- Maximum number of users that can be logged in simultaneous to web and maximum number of users that can be logged in simultaneous to ssh/Telnet.

Max simultaneous sessions per user [0]?

- Maximum number of simultaneous sessions per user.

Number of passwords to remember [0]?

- Number of previous passwords that the new password must differ from.

Number of PINs to remember [0]?

- Number of previous PINs that the new PIN must differ from.

Maximum time between password renewals (days) [0]?

- If the user has not changed the password within the renewal time the user will be set inactive.

Minimum time between password renewals (hours) [0]?

- The user can only change password once within this limit.

Maximum time between PIN renewals (days) [0]?

- If the user has not changed the PIN within the renewal time the user will be set inactive.

Minimum time between PIN renewals (hours) [0]?

- The user can only change PIN once within this limit.

Maximum time between logins (days) [0]?

- If the user has not logged in within this limit the user will be set inactive.

Max consecutive equal digits in PINs [0]?

- Maximum consecutive equal digits in PINs.

Minimum number of digits in PINs [0]?

- Minimum number of digits in PINs.

Maximum number of digits in PINs [0]?

- Maximum number of digits in PINs.

Max consecutive identical characters in passwords [0]?

- Maximum consecutive identical characters in passwords.

Minimum number of characters in passwords [0]?

- Minimum number of characters in passwords.

Maximum number of characters in passwords [0]?

- Maximum number of characters in passwords.

Minimum number of lower-case letters in passwords [0]?

- Minimum number of lower-case letters in passwords.

Minimum number of upper-case letters in passwords [0]?

- Minimum number of upper-case letters in passwords.

Minimum number of numerical characters in passwords [0]?

- Minimum number of numerical characters in passwords.

Minimum number of special characters in passwords [0]?

- Minimum number of special characters in passwords.

Minimum number of character groups in passwords [0]?

- Minimum number of character groups in passwords.

Minimum number of character changed from previous password [0]?

- Minimum number of character changed from previous password.

**systemtools securitystatus**

Shows the security status for the codec.

**systemtools selectsw**

Select which of the available software images to use. Changing the software image will restart the codec.

No argument given: Lists the version of the available software images, and shows which one is active.

*image name*: Swap to the software with this name.

**systemtools sudo on**

Changes the user role of the current session to the role of the specified user.

*username(r)*: The name of the sudo user.

*password(r)*: The password for the sudo user.

**systemtools sudo off**

Reverts back to the user role of the signed in user.

**systemtools whoami**

Lists the name and id of the signed in user, and the user roles held by this user.

## About disconnect cause types

The following parameters are logged when a call is disconnected. The disconnect cause types are used in disconnect events (xEvent).

CauseValue	Proprietary. We recommend the use of CauseType and CauseCode.
CauseType	Describes why the call was disconnected. The value space is { OtherLocal, LocalDisconnect, UnknownRemoteSite, LocalBusy, LocalReject, InsufficientSecurity, OtherRemote, RemoteDisconnect, RemoteBusy, RemoteRejected, RemoteNoAnswer, CallForwarded, NetworkRejected }
CauseString	Describes the Cause Code.
CauseCode	The disconnect Cause Codes are defined in SIP and Q.850.
CauseOrigin	SIP, Q.850, internal.

### Example:

```
xEvent DisconnectEvent

*e CallDisconnect CauseValue: 1
  CauseType: "LocalDisconnect"
  CauseString: ""
  OrigCallDirection: "outgoing"
  RemoteURI: "firstname.lastname@company.com"
  CallId: 89
  CauseCode: 0
  CauseOrigin: SIP
** end
```

## Using a 3<sup>rd</sup> party control system / touch panel

The SX80 expects that a touch panel is connected to the system. If no touch panel is connected, a notification saying that a touch panel is required is displayed on the on-screen-display. This procedure describes how to register a 3<sup>rd</sup> party touch panel to the codec.



The procedure described here is currently using *Experimental* commands. The *Peripherals* commands will be moved out of *Experimental* in the next software release, i.e. the word "Experimental" will be removed from the commands. This needs to be accounted for when programming a control system to be used with this codec and software version.

### Connect a 3<sup>rd</sup> party control system / touch panel

1. On initial connection, issue the following command:

```
xCommand Experimental Peripherals Connect
Type: TouchPanel ID: "MyUniqueId" HardwareInfo:
"MyHardwareVersion 123" SoftwareInfo:
"MySoftware 1.0"
```

This has to be done only once per device.

The ID attribute is required and will be used by the other *Peripherals* commands to identify this unit. We suggest using the peripherals' MAC address if available; if not any unique string will do.

Issuing the command again with the same identifier (ID) will update the meta information like hardware and software information if provided.

2. Notify the codec that the touch panel is still connected, by sending a heartbeat to the codec every 5 seconds:

```
xCommand Experimental Peripherals HeartBeat ID:
"MyUniqueId"
```

This command will report an error if the peripheral has not been registered using the `xCommand Experimental Peripherals Connect` command first.

### Verify that the touch panel has been registered

Show the list of currently active registered peripherals, and verify that the touch panel is on the list:

```
xStatus Experimental Peripherals
```

If a peripheral stops sending heartbeats, then the device will be removed from the list after a while. The device will reappear as soon as heartbeat transmissions resumes.

Connected peripherals will also show on the peripherals list on web.

### List all peripherals

List all peripherals that have been connected to the codec, including devices that are not currently reported as connected:

```
xCommand Experimental Peripherals List
```

### Remove peripherals from the list

Remove peripherals that you know no longer exist, or are no longer relevant, from the list:

```
xCommand Experimental Peripherals Purge ID:
"MyUniqueId"
```





On our web site you will find an overview of the worldwide Cisco contacts.

Go to: [▶ http://www.cisco.com/go/offices](http://www.cisco.com/go/offices)

Corporate Headquarters  
Cisco Systems, Inc.  
170 West Tasman Dr.  
San Jose, CA 95134 USA

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

TANDBERG is now a part of Cisco. TANDBERG® is a registered trademark belonging to Tandberg ASA.