



# About This Guide

This guide is for installers and administrators of Cisco Vision venues who are responsible for both the physical installation and initial configuration of the digital media players (DMPs) with TV displays.

**Note:**

**Series 2 = DMP-2K and SV-4K players**

**Series 3 = CV-HD and CV-UHD players**

**Series 4 = CV-HD2 and CV-UHD2 players**

In the documentation for Cisco Vision Dynamic Signage Director, we changed the terms “master” to “lead, leader, or primary,” the term “slave” to “secondary,” the term “whitelist” to “allowlist,” and the term “blacklist” to “blocklist.” There are currently no changes to the product’s syntax, so these terms are still present in the documentation where the current code requires their use. Where an industry standard exists, such as IEEE terminology, we cannot alter the term until the standards change.

## Revision History

[Table 1 on page 7](#) provides information about when this document was changed.

**Table 1 Revision History Table**

Date	Description
2021-02-09	Update to include clear information about changing the DMP password. See <a href="#">DMP Diagnostic URL, page 69</a> .
2020-10-30	Initial publication for Cisco Vision Dynamic Signage Director Release 6.3.

## Document Organization

This guide includes the following modules:

Chapter	Description
<a href="#">Getting Started with the Digital Media Players, page 11</a>	<p>This module provides a workflow summary with information about the DMP hardware, software features, and key considerations before deploying these media players.</p> <p>It is intended for anyone who is responsible for installing and configuring the digital media players, and for anyone interested in understanding its general operation.</p>
<a href="#">Planning Digital Media Player Deployment, page 45</a>	<p>This module describes aspects of the DMP deployment that need to be considered and executed prior to the actual installation and provisioning of the digital media players.</p> <p>It is intended for installers, network administrators, and administrators of Cisco Vision Dynamic Signage Director.</p>
<a href="#">Deploying the Digital Media Players, page 53</a>	<p>This module describes the workflow and tasks to deploy the digital media player.</p> <p>It is intended for Cisco Vision Dynamic Signage Director administrators and installers.</p>
<a href="#">Verifying the Deployment of the Digital Media Player, page 61</a>	<p>This module includes information about the startup sequence when deploying a digital media player.</p>
<a href="#">Monitoring and Maintaining the Digital Media Player, page 65</a>	<p>This module describes the workflow and tasks to monitor and maintain the working operation of the digital media player.</p> <p>It is intended for Cisco Vision Dynamic Signage Director administrators and installers.</p>
<a href="#">Troubleshooting the Digital Media Player, page 69</a>	<p>This module provides some troubleshooting steps by symptoms for DMP hardware, PTP operation, and video display problems. It includes information about the RMA process and the DMP diagnostic URL.</p>
<a href="#">Appendix A: DMP and TV Controls Commands for the Digital Media Players, page 75</a>	<p>This module provides a summary of the commands that are supported by the digital media players and TVs.</p>
<a href="#">Appendix B: Display Parameters for the Digital Media Players, page 79</a>	<p>This module provides a summary of the display parameters that are supported by the digital media player for communication with TV displays.</p>
<a href="#">Appendix C: Configuring an IOS DHCP Server to Support the Digital Media Players, page 83</a>	<p>This module provides an example of how to configure a Cisco IOS DHCP server with a single DHCP scope and configuring Option 60 and Option 43.</p>

## Related Documentation and Resources

### Cisco Vision Documentation Go URL

For more information about Cisco Vision hardware and software installation, configuration, and operation, see the Cisco Vision documentation available on Cisco.com at:

[www.cisco.com/go/stadiumvisiondocs](http://www.cisco.com/go/stadiumvisiondocs)

### Release-Specific Documents

- [Release Notes for Cisco Vision Dynamic Signage Director Release 6.2 or 6.3](#)
- For the listing page of all Cisco Vision documentation, go to:

<http://www.cisco.com/c/en/us/support/video/stadiumvision/tsd-products-support-series-home.html>

### Cisco Vision Documentation Notifications

You can receive periodic emails that summarize new and changed information in Cisco Vision documentation by subscribing to the `sv-doc-notify@external.cisco.com` email alias.

Contact us at `stadiumvisiondocs@external.cisco.com` to request this notification service.

### Cisco Vision Documentation Team Email Contact Information

You can submit questions, suggestions, or other feedback to us at `stadiumvisiondocs@external.cisco.com`.

### Obtaining Cisco Product Documentation

For information on obtaining other Cisco Product documentation, see the monthly What's New in Cisco Product Documentation, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the What's New in Cisco Product Documentation as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

