



# About This Guide

**First published:** 2018-07-10

This document describes the requirements and tasks to install and upgrade the software for Cisco Vision Dynamic Signage Director Release 6.1.

The content is intended for Cisco Vision Director system administrators and technical field engineers who are responsible for designing and deploying Cisco Vision solutions. Be familiar with basic IP networking, Linux, and VMware virtualization.

This section includes the following topics:

- [Document Revision History, page 7](#)
- [Document Organization, page 7](#)
- [Related Documentation and Resources, page 9](#)

## Document Revision History

[Table 1](#) lists the technical changes made to this document since it was first published.

**Table 1 Document Revision History**

Date	Change Summary
2018-07-10	First release of this document for Cisco Vision Dynamic Signage Director Release 6.1.0-363

## Document Organization

This guide includes the following modules:

Chapter	Description
<a href="#">Getting Started Installing or Upgrading Cisco Vision Dynamic Signage Director, page 11</a>	Provides information that you should read before you perform an initial installation or upgrade of the Cisco Vision Dynamic Signage Director Release 6.1 software.
<a href="#">Installing Cisco Vision Dynamic Signage Director for the First Time, page 17</a>	Describes how to install the Cisco Vision Dynamic Signage Director Release 6.1 software on your newly-purchased Platform 3 server hardware from a full ISO image.
<a href="#">Using the Software Manager to Upgrade Cisco Vision Dynamic Signage Director Software, Language Packs, and Fonts, page 21</a>	Describes how to upgrade a Cisco Vision Dynamic Signage Director server already running Cisco Vision Dynamic Signage Director software, as well as how to install language packs and fonts.
<a href="#">Verifying the Upgrade, page 29</a>	Describes how to verify a successful upgrade process.

Chapter	Description
<a href="#">Upgrading the DMP Firmware, page 37</a>	Describes how to obtain and upload firmware for the Series 2 and Series 3 DMPs and how to configure the auto-registration settings.
<a href="#">Appendix A: Post-Upgrade Checklist, page 43</a>	Provides a checklist that is useful after you upgrade your software on a Cisco Vision Dynamic Signage Director server.
<a href="#">Appendix B: Port Reference, page 45</a>	Identifies the ports used by Cisco Vision Dynamic Signage Director.
<a href="#">Appendix C: CIMC Configuration and Firmware Upgrade Guidelines on the Cisco UCS C220 Server, page 51</a>	<p>Provides guidelines for configuring the Cisco Integrated Management Controller (CIMC) interface and performing the initial configuration</p> <p>Provides guidelines to upgrading the CIMC/BIOS firmware on the Cisco UCS C220 servers for Cisco Vision Dynamic Signage Director.</p>

## Related Documentation and Resources

### Cisco Vision Documentation Go URL

For more information about Cisco Vision Director hardware and software installation, configuration, and operation, see the Cisco Vision documentation available on Cisco.com at:

[www.cisco.com/go/stadiumvisiondocs](http://www.cisco.com/go/stadiumvisiondocs)

### Release-Specific Documents

- [Release Notes for Cisco Vision Dynamic Signage Director Release 6.1](#)
- For the listing page of all Cisco Vision documentation, go to:

<http://www.cisco.com/c/en/us/support/video/stadiumvision/tsd-products-support-series-home.html>

### Cisco Vision Documentation Notifications

Subscribe to the [sv-doc-notify@external.cisco.com](mailto:sv-doc-notify@external.cisco.com) email alias to receive periodic emails that summarize new and changed information in Cisco Vision documentation.

Contact us at [stadiumvisiondocs@external.cisco.com](mailto:stadiumvisiondocs@external.cisco.com) to request this notification service.

### Cisco Vision Documentation Team Email Contact Information

Submit questions, suggestions, or other feedback to us at [stadiumvisiondocs@external.cisco.com](mailto:stadiumvisiondocs@external.cisco.com).

### Obtaining Cisco Product Documentation

For information on obtaining other Cisco Product documentation, see the monthly What's New in Cisco Product Documentation, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the What's New in Cisco Product Documentation as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

