· I | I · I | I · I CISCO ..

Verifying the Upgrade

This module describes how to verify that the upgrade process was successful.

To verify the upgrade, complete the following tasks:

- Clearing the Browser Cache, page 35 (mandatory)
- Clearing Expired Flash SWZ Files From Browser, page 36 (required)
- Importing the Security Certificate, page 37 (required)
- Logging Into Cisco Vision Dynamic Signage Director, page 38 (required)
- Verifying the Menus, page 38 (required)
- Verifying that Services are Running, page 39 (required)
- Configuring the Media Player for VLAN Compliance Checking, page 39 (required)
- Upgrading the DMP Firmware, page 40 (required)
- Rebooting the DMPs, page 40 (required)
- Verifying Media Players, Groups, and Zones in the Management Dashboard, page 40 (required)
- Verifying the Multicast Configuration, page 41 (required)
- Completing the Post-Upgrade Checklist and Testing, page 42 (required)

Clearing the Browser Cache

Caution: It is critical that *all* Cisco Vision Dynamic Signage Director users clear their browser cache to prevent permanent database corruption and to be sure that you are running the latest version of Cisco Vision Dynamic Signage Director. Notify all users of the Cisco Vision Dynamic Signage Director system to clear their browser cache before using the system after an upgrade.

To clear the browser cache in Mozilla FireFox:

1. From the menu bar, go to Tools > Clear Recent History.

The Clear Recent History dialog box appears.

Note: Or press Ctrl + Shift + Delete to open the Clear Recent History dialog box.

- 2. In the "Time range to clear:" box, select Everything.
- 3. Open the Details drop-down list and select the Cache checkbox if it does not have a checkmark.
- 4. Click Clear Now.

Clearing Expired Flash SWZ Files From Browser

Clearing Expired Flash SWZ Files From Browser

This section includes the following tasks:

- Clearing the Flash Player Cache, page 36
- Deleting Other Cached Files From Flash Player, page 36

Clearing the Flash Player Cache

To clear the Flash player cache:

- 1. Go to Control Panel > Flash Player.
- 2. In the Flash Player Manager Settings dialog box (Storage tab), click Delete All.
- 3. Select Delete All Site Data and Settings (Figure 1 on page 36).

Figure 1 Delete All Site Data in Flash Player Dialog Box–Windows Client Example



4. Click Delete Data.

Deleting Other Cached Files From Flash Player

To delete other cached files from Flash Player:

- **1.** Close the browser window.
- 2. Delete cached files in the following paths for your browser application and depending on your laptop client:

From a Windows client:

For Chrome

Importing the Security Certificate

C:\Users\username\AppData\Local\Google\Chrome\User Data\Default\Pepper Data\Shockwave Flash\CacheWritableAdobeRoot\AssetCache

For Mozilla Firefox

C:\Users\username\AppData\Local\Mozilla\Firefox\Profiles

Note: The AppData folder is a hidden folder in Microsoft Windows. If you cannot view it, go to **Control Panel** > **Folder Options** and verify the option is set to display hidden files and folders.

From an Apple Mac OS X client:

For Chrome

/Users/username/Library/Application Support/Google/Chrome/Default/Pepper Data/Shockwave Flash/CacheWritableAdobeRoot/AssetCache/

For Mozilla Firefox

/Users/username/Library/Application Support/Firefox/Profiles/

Importing the Security Certificate

When you access a Cisco Vision Dynamic Signage Director server for the first time using Mozilla Firefox, a security certificate warning appears. Some Cisco Vision Dynamic Signage Director functionality requires that the certificate is imported.

Adding a Security Exception for Mozilla Firefox

To add the security exception for Mozilla Firefox:

- When you see the warning page with the title "This Connection is Untrusted," click the "I Understand the Risks" option.
- 2. Click Add Exception....
- 3. In the Add Security Exception dialog box, click Confirm Security Exception.
- 4. Close all Mozilla Firefox windows.

You should now be able to access the Cisco Vision Dynamic Signage Director server using Mozilla Firefox without any security certificate warnings.

DSD Certificate Import

New to Release 6.2 is a web-based UI that allows you to manage certificates for Cisco Vision Dynamic Signage Director (DSD). It eliminates untrusted browser warnings from popping up. This features allows you to import your own DSD certificate so that the annoying security warning goes away. These certificates types .cer, .crt and .pem are supported.

To import DSD certificates:

1. Go to More > Manage Software > DSD Certificate (Figure 2 on page 38).

Logging Into Cisco Vision Dynamic Signage Director

Figure 2 Import DSD Certificate

ipgrade Language Pa	ks Fonts	Certificates	Default Images			
Upload Delitiz					"Server rest	art is required on a certificate import or de
DMP Certificates						
Data Integration Certifi	abès .					
+ DSD Certificate						
		Territoria de la compañía de la comp	miles of many	Tanada Base	Walter Prop.	mates with

If successful, a success message displays. For details on using this new feature, refer to Release 6.2: Cisco Vision Dynamic Signage Director System Administration Guide.

Note: After uploading the certificate, restart the DSD web server for the new certificate to take effect. Use a TUI.

Logging Into Cisco Vision Dynamic Signage Director

To verify that the upgrade was successful and that Cisco Vision Dynamic Signage Director is up and operating:

1. Open a browser window and type the URL for the Cisco Vision Dynamic Signage Director server, in the following sample format, where *x.x.x.x* is the IPv4 address of the server:

https://x.x.x/CiscoVision/login.html

or alternatively,

http://x.x.x.x

The Cisco Vision Dynamic Signage Director login screen appears.

2. Type your Cisco Vision Dynamic Signage Director administrator login credentials and click Log In.

Note: When you first log into Cisco Vision Dynamic Signage Director, the default administrator username is *admin* and password is *C*-*V*1*\$i0n*.

The Cisco Vision Dynamic Signage Director Asset Library screen appears.

3. Verify that the correct version displays in the upper left of the screen.

Note: If your window does not display the correct version, clear the browser cache as described in Clearing the Browser Cache, page 35.

Verifying the Menus

To verify menus:

- 1. From the Cisco Vision Dynamic Signage Director **Main Menu**, click the new icon for **System Configuration**. After a few moments of loading resources, the Cisco Vision Dynamic Signage Director screen opens in a new window.
- 2. Confirm the version and build number of your Cisco Vision Dynamic Signage Director software in the upper left of the Library (Main Menu) screen.

Note: If your window does not display the appropriate version and build that you loaded, clear the browser cache as describe in Clearing the Browser Cache, page 35.

3. Verify that you can open the other Cisco Vision Dynamic Signage Director screens and menus.

Verifying that Services are Running

Verifying that Services are Running

After you upgrade, go to **More > Management Dashboard** to verify that all of the primary Cisco Vision Dynamic Signage Director services are running.

To verify that services are running:

- 1. Go to More > Management Dashboard > Monitor and Status drawer > Services folder.
- 2. Expand the Service Alerts pane.
- Verify that all of the primary services—in particular the Content Management CMS Server—are in "Normal" (green) state without any service alerts.

Figure 3 Verifying Normal Service States



 If the CMS server or another service in the above list is not in Normal state but should be, use the TUI services menu to restart it. Go to Main Menu > Services Control > Content Management System (cms).

Configuring the Media Player for VLAN Compliance Checking

After you upgrade, go to the **Management Dashboard** and change the Assigned VLAN property according to your VLAN configuration for the media players if you want to perform VLAN compliance checking.

Note: We recommend setting the assigned VLAN property for the media players if all devices are located on the same VLAN. When a value is set, it is checked against what is being sent by the media player. Otherwise, configure **\$svd_ignore**, which is the default.

To configure the Assigned VLAN property

1. Go to More > Management Dashboard > Dynamic Signage Director Configuration > System Configuration > Global DMP Settings > Networking.

Upgrading the DMP Firmware

Munitor and Status	Dynamic Signage Director Configu	ration	
DHP and TV Controls	Configuration Property	Value	
Contract Victory	LLDP enabled	True	1
2 Count on mer	(LEP datay (seconds)	15	
Dynamic Signage Director Configuration	Forte SGHPv2	True	
🕈 🔁 System Configuration (12)	Enable SSM	fatan	
+ Dynamic Signage Director Settings (3)	Evable DWS	796.	
• Cardwal DMP Settings (9)	Start SNIP Agent Service	10	
Malmorting .	Centert sync multicast address	239 182.0.253	
Default - Audio/Video/Occed Captin	Centert aync multicael port	10001	
Checode Latarwy 1	Assegment VLAN	Alexed, opening .	-
Decode Latency 2	E Globel SSED		
Cecode Latency 3	I With Painphrase		
C Firmare Version	Proxy URL	http://provp.eef.cline.opm	
Time Source	÷ 0		E

Figure 4 Assigned VLAN Property Configuration for the DMPs

- 2. Find the Assigned VLAN property and do the following:
- If all of your DMPs are located on the same VLAN (recommended)—Type the number of the VLAN.
- If all of your DMPs are not located on the same VLAN, or you want to bypass any VLAN compliance checking-Type "\$svd_ignore."
- 3. Click the Save icon.

Upgrading the DMP Firmware

IMPORTANT: All DMPs require a firmware upgrade for Release 6.2.

Verify whether your DMPs require a firmware upgrade and follow the steps in the corresponding modules of this guide to upload and install the required version(s) for your Cisco Vision Dynamic Signage Director release.

Note: If this is the initial upgrade of your system to Cisco Vision Dynamic Signage Director Release 6.2 software, a new firmware upgrade and configuration for the firmware is required. Follow the steps in Upgrading the DMP Firmware, page 43.

Rebooting the DMPs

After an upgrade of the Cisco Vision Dynamic Signage Director software, restart the DMPs to get the latest version of the runtime software.

- If this is the initial upgrade of your system to Release 6.2 and you performed a DMP firmware upgrade, then the DMPs already rebooted. Do not reboot the DMPs.
- If this is an upgrade from Release 6.1 to Release 6.2, then reboot the DMP to update the DMP's runtime software.

To verify the system runtime on the DMP, see Verifying Media Players, Groups, and Zones in the Management Dashboard, page 40.

Verifying Media Players, Groups, and Zones in the Management Dashboard

Note: Before you verify media player status, set the Assigned VLAN property so that the VLAN compliance check can be performed. For more information, see Configuring the Media Player for VLAN Compliance Checking, page 39.

Verifying the Multicast Configuration

To check media players, groups, and zones after you upgrade your software:

- Go to More > Management Dashboard and verify that all of your groups, zones and media players are present and in the green state.
- From the DMP and TV Controls drawer, run the Get Status command on all devices to update Cisco Vision Dynamic Signage Director's record of MAC addresses:

DMP and TV Controls > Monitoring > Get Status.

3. Run Get Status to confirm that all devices successfully reboot and are in good health.

Note: This will also update the MAC address for the media players.

- 4. Verify that the correct Cisco Vision Dynamic Signage Director runtime version is loaded on the DMP:
 - a. Select the DMP(s) that you want to verify. Click the Play icon.
 - b. Go to Status > Status Details.
 - c. In the DMP Status panel, expand the Runtime status and verify the Version reported.

Muniter and Males	Select Devices				Q.						1	Pa
OHP and TV Contrains Municariag Munica		Los Aug	nes and nery for to Rept	Group- Aes Harel(Location Lab Iner () and	3	19 Address	MAC Address Bill and Bill and Bill and Bill and Bill Bill Bill Bill Bill and Bill Bill Bill Bill Bill Bill Bill Bil	2 Jun	19-46-
shiftus information for selected device(s).					0			Stat	uni 1 Salari	e (1) 🖉	×	-
	04 8 T	tatus otus De Multast Matter	etatia ini	tetting tre t	e 10 er State Nation	e Display	E Anatio		TV Hates	System (2 Carr	-

- 5. (Optional) Change the DMP State of healthy DMPs to "Production" using the following dashboard command path: DMP and TV Controls > Auto Registration > Change DMP State.
- 6. Run Get Status to check the device state after the change.
- 7. Investigate any devices that are not in "Normal" state.

Verifying the Multicast Configuration

Cisco Vision Dynamic Signage Director uses both unicast and multicast communications for DMP control-plane operation. The Cisco Connected Stadium design requires that Cisco Vision Dynamic Signage Director uses the 239.193.0.0 multicast group address range.

The multicast group address for Cisco Vision Dynamic Signage Director is configured in the "MulticastHostPort" registry.

Completing the Post-Upgrade Checklist and Testing

For more information about multicast configuration, see the "Configuring Multicast Ports for Cisco Vision Director" topic in the "Configuring the Cisco Vision Director Server System Settings" module of the Cisco Vision Server Administration Guide: Dynamic Signage Director.

To verify or configure the multicast addressing for Cisco Vision Dynamic Signage Director:

- 1. Go to More > Management Dashboard > Tools drawer > Advanced > Registry.
- 2. Scroll to the "MulticastHostPort" registry key in the Parameters list and confirm the entry for the registry.
- 3. To change the value, click on the value field and specify a multicast address in the range 239.193.0.0/24.

Note: Be sure to use the value that is configured in your Cisco Connected Stadium network and include the *port*. The recommended default is **50001**.

4. Click Apply.

Completing the Post-Upgrade Checklist and Testing

Use Appendix A: Post-Upgrade Checklist, page 49 to verify you completed the required steps.