# 

# Release Notes for StarOS™ Software Version 21.6.3

First Published: March 16, 2018 Last Updated: March 16, 2018

### Introduction

These Release Notes identify changes and issues related to this software release. This emergency release is based on release 21.6.2. These release notes are applicable to the ASR5500, VPC-SI and VPC-DI platforms.

Release Package Version Information

Software Packages	Version
StarOS packages	21.6.3 build 69010

Descriptions for the various packages provided with this release are located in Release Package Descriptions.

# Feature and Behavior Changes

The following features and/or behavior changes have been introduced in this emergency release.

Refer to the <u>Release Change Reference</u> for a complete list of feature and behavior changes associated with the software release on which this emergency release is based.

## Related Documentation

For a complete list of documentation available for this release, go to <u>http://www.cisco.com/c/en/us/support/wireless/asr-5000-series/products-installation-and-configuration-guides-list.html</u>.

# Installation and Upgrade Notes

This Release Note does not contain installation and upgrade instructions. Refer to the existing installation documentation for specific installation and upgrade considerations.

#### **Firmware Updates**

21.6.x releases include a firmware upgrade for the Board Control FPGA (BCF) on the ASR 5500 MIO card.

Cisco Systems, Inc. www.cisco.com

- Previous BCF version: 4.1.0
- New BCF version: 4.8.0

The new BCF firmware version provides:

- A 60 second lockout upon lowering the ejector sub-handle (interlock). Failures were observed in the field where an MIO that was being removed attempted to become Active as it was being removed. The remaining MIO would then go Standby causing a chassis failure. Now after the front panel ejector subhandle (interlock) is moved to the down position, the MIO is locked out for a period of 60 seconds and cannot become Active from the Standby state.
- A MIO reset and power down sequence when a BCF firmware upgrade is requested. A field failure was observed when an MIO with a lower revision of BCF firmware was installed in a chassis. The process of upgrading this BCF firmware on the new MIO caused inconsistencies on the chassis fabric signals which lead to other cards being reset. Upon receiving a request to reload the BCF firmware image from a newly programmed PROM, the BCF now first triggers a reset of all devices on the MIO card. After a short period of time the BCF powers the MIO card down for several seconds before the request to reload from PROM is performed.
- Improved the use of MIO presence pins to reduce the chance of incorrect Active state changes. This change affected the use of both the MIOs presence pins. Additionally, a signal filter was added to both MIOs presence pins to prevent false MIO state changes, such as during removal of inserts.

### Software Integrity Verification

To verify the integrity of the software image you have from Cisco, you can validate the SHA512 checksum information against the checksum identified by Cisco for the software.

Image checksum information is available through the following mechanisms:

 Cisco.com Software Download Details: To find the checksum, hover the mouse pointer over the software image you have downloaded.

File Information			Release Date 💌	Size	
ASR System Softwa 21_2_3_ReleaseNotes	s.pdf		27-JUN-2017	0.46 MB	Download Add to cart
ASR System Softv	Details			Хв	Download
asr5500-21.2.3.cksi	Description:	ASR System Software 21.2.3			Add to cart
ASR System Softv	Release:	21.2.3		MB	Download
asr5500-21.2.3.zip	Release Date:	27/Jun/2017			
	File Name:	21_2_3_ReleaseNotes.pdf			Add to cart
ASR System Softv	Size:	0.45 MB (476054 bytes)		: MB	Download
asr5500_T-21.2.3.zi	MD5 Checksum:	5cfb2b0c7c87c84d35acca8d54	4eeee08		Add to cart
	SHA512 Checksur	n: c4eb836090a1867146d93d1ce	74e490d		
ASR System Softv companion-21.2.3.to	Security Advisory			В	Download
companion 2 hz.org	,				Add to cart

At the bottom you find the SHA512 checksum, if you do not see the whole checksum you can expand it by pressing the "..." at the end.

Installation and Upgrade Notes

• .cksums file: A file containing software image checksum information is distributed with the image files. The naming convention for this file is:

<product>-<version>.cksums

Example: asr5500-21.4.0.cksums

To validate the information, calculate a SHA512 checksum using the information in <u>Table 1</u> and verify that it matches either the one provided on the software download page.

To calculate a SHA512 checksum on your local desktop please see the table below.

Operating System	SHA512 checksum calculation command examples	
MicrosoftWindows	soft Windows Open a command line window and type the following command	
	<pre>&gt; certutil.exe -hashfile <filename>.<extension>SHA512</extension></filename></pre>	
Apple MAC	Open a terminal window and type the following command	
	<pre>\$ shasum -a 512 <filename>.<extension></extension></filename></pre>	
Linux	Open a terminal window and type the following command	
	<pre>\$ sha512sum <filename>.<extension></extension></filename></pre>	
	Or	
	<pre>\$ shasum -a 512 <filename>.<extension></extension></filename></pre>	
NOTES:		
<filename>is the name of the file.</filename>		
<pre><extension>is the file extension (e.gzip or .tgz).</extension></pre>		

If the SHA512 checksum matches, you can be sure that no one has tampered with the software image or the image has not been corrupted during download.

If the SHA512 checksum does not match, we advise you to not attempt upgrading any systems with the corrupted software image. Download the software again and verify the SHA512 checksum again. If there is a constant mismatch, please open a case with the Cisco Technical Assistance Center.

### Certificate Validation

StarOS software images are signed via x509 certificates. Please view the .README file packaged with the software for information and instructions on how to validate the certificates.

**NOTE:** Image signing is not currently supported for VPC-SI and/or VPC-DI software packages.

Open Bugs for This Release

# Open Bugs for This Release

The table below highlights the known bugs that were found in, and/or that remain open in this software release.

**NOTE:** This software release may contain open bugs first identified in other releases. Additional information for all open bugs for this release are available in the <u>Cisco Bug Search Tool</u>.

Bug ID	Headline	Product Found*
CSCvg36262	Split the current MME-Decor related stats for TAU and Attach procedures	mme
CSCvh59780	Sessmgr restart in egtpc event handler path	mme
CSCvg95957	Single instance of Bulkstat facility restart seen on active CISCO ASR5500	pdn-gw
CSCvh67681	20% SM CPU increase when Traffic Optim is enabled with 100% heavy session in single event perf test	pdn-gw
CSCvi06491	The default behaviour of diameter encode-supported-features has changed in 21.7	pdn-gw
CSCvh64982	Planned SRP switchover followed by switchover due to BGP failure - aaamgr re- starts	sae-gw
CSCvf32599	osd-compute reboot leaves CF in booting state: EMCTRL_CARDTYPE_MISMATCH	staros
* Information in	n the "Product Found" column identifies the product in which the bug was initially identified	l.

# Resolved Bugs for This Release

The table below highlights the known bugs that are resolved in this specific software release.

**NOTE:** This software release may contain bug fixes first introduced in other releases. Additional information for all resolved bugs for this release are available in the <u>Cisco Bug Search Tool</u>.

Bug ID	Headline	Product
		Found*
	CIOT MME rejects TAU withou Additional Update Type	mme
CSCvh54926		
CSCvh81173	VPC-DI - Cipher class messaging not working following chassis reload.	staros
CSCvh66270	ASR5500: BFD task in warn state.	staros
CSCvh94362	QvPC-DI "show support details" command causes packet drops when run during heavy load conditions.	staros
* Information in	the "Product Found" column identifies the product in which the bug was initially identified.	•

**Operator Notes** 

# **Operator Notes**


#### StarOS Version Numbering System

The output of the **show version** command displays detailed information about the version of StarOS currently running on the ASR 5x00 or Cisco Virtualized Packet Core platform.


Prior to release 16.1, the *Image Version* field displayed a branch of software including the build number, for example "16.0 (55435)". Subsequent releases of software for the major release differed only in build number. Lab Quality/EFT releases versus deployment releases also differed only in build number.

From release 16.1 onwards, the output of the **show version** command, as well as the terminology used to describe the Build Version Number fields, has changed. Additionally, **show version** will display slightly different information depending on whether or not a build is suitable for deployment.

The Version Build Number for releases between 16.1 and 21.0 include a major, maintenance, and emergency release number, for example "16.1.2".

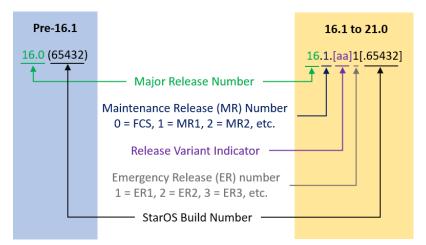

The Version Build Number for releases 21.1 and later include a major and emergency release number, for example, "21.1.1".

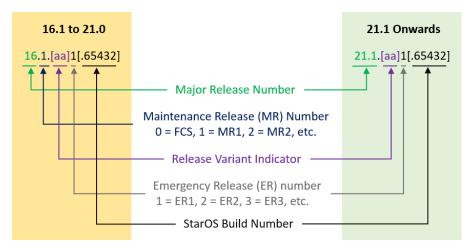

In either scenario, the appropriate version number field increments after a version has been released. The new version numbering format is a contiguous sequential number that represents incremental changes between releases. This format will facilitate identifying the changes between releases when using Bug Search Tool to research software releases.

# Release Package Descriptions

Table 2 lists provides descriptions for the packages that are available with this release.

Package	Description	
ASR 5500		
asr5500- <release>.bin</release>	A zip file containing the signed ASR 5500 software image, the signature file, a verification script, the x509 certificate, and a README file containing information on how to use the script to validate the certificate.	
asr5500_T- <release>.bin</release>	A zip file containing the signed, trusted ASR 5500 software image, the signature file, a verification script, the x509 certificate, and a README file containing information on how to use the script to validate the certificate.	
VPC-DI		
qvpc-di- <release>.bin</release>	The VPC-DI binary software image which is used to replace a previously deployed image on the flash disk in existing installations.	
qvpc-di_T- <release>.bin</release>	The trusted VPC-DI binary software image which is used to replace a previously deployed image on the flash disk in existing installations.	
qvpc-di- <release>.iso</release>	The VPC-DI ISO used for new deployments a new virtual machine is manually created and configured to boot from a CD image.	
qvpc-di_T- <release>.iso</release>	The trusted VPC-DI ISO used for new deployments a new virtual machine is manually created and configured to boot from a CD image.	
qvpc-di-template- vmware- <release>.tgz</release>	The VPC-DI binary software image that is used to on-board the software directly into Vmware.	
qvpc-di-template- vmware_T- <release>.tgz</release>	The trusted VPC-DI binary software image that is used to on-board the software directly into Vmware.	
qvpc-di-template- libvirt-kvm- <release>.tgz</release>	This is an archive that includes the same VPC-DI ISO identified above, but additional installation files for using it on KVM.	
qvpc-di-template- libvirt-kvm_T- <release>.tgz</release>	This is an archive that includes the same trusted VPC-DI ISO identified above, but additional installation files for using it on KVM.	
qvpc-di- <release>.qcow2.tgz</release>	The VPC-DI binary software image in a format that can be loaded directly with KVM using an XML definition file, or with OpenStack.	

#### Table 2 - Release Package Information

#### Obtaining Documentation and Submitting a Service Request

Package	Description		
qvpc-di_T-	The trusted VPC-DI binary software image in a format that can be loaded directly with		
<release>.qcow2.tgz</release>	KVM using an XML definition file, or with OpenStack.		
VPC-SI			
qvpc-si- <release>.bin</release>	The VPC-SI binary software image which is used to replace a previously deployed		
	image on the flash disk in existing installations.		
qvpc-si_T-	The trusted VPC-SI binary software image which is used to replace a previously		
<release>.bin</release>	deployed image on the flash disk in existing installations.		
qvpc-si- <release>.iso</release>	The VPC-SI ISO used for new deployments a new virtual machine is manually created		
	and configured to boot from a CD image.		
qvpc-si_T-	The trusted VPC-SI ISO used for new deployments a new virtual machine is manually		
<release>.iso</release>	created and configured to boot from a CD image.		
qvpc-si-template-	The VPC-SI binary software image that is used to on-board the software directly into		
vmware- <release>.ova</release>	Vmware.		
qvpc-si-template-	The trusted VPC-SI binary software image that is used to on-board the software		
vmware_T-	directly into Vmware.		
<release>.ova</release>			
qvpc-si-template-	This is an archive that includes the same VPC-SI ISO identified above, but additional		
libvirt-kvm-	installation files for using it on KVM.		
<release>.tgz</release>			
qvpc-si-template-	This is an archive that includes the same trusted VPC-SI ISO identified above, but		
libvirt-kvm_T-	additional installation files for using it on KVM.		
<release>.tgz</release>			
qvpc-si- <release>.</release>	The VPC-SI binary software image in a format that can be loaded directly with KVM		
qcow2.gz	using an XML definition file, or with OpenStack.		
qvpc-si_T- <release>.</release>	The trusted VPC-SI binary software image in a format that can be loaded directly with		
qcow2.gz	KVM using an XML definition file, or with OpenStack.		
StarOS Companion Pac	kage		
companion-	An archive containing numerous files pertaining to this version of the StarOS including		
<release>.tgz</release>	SNMP MIBs, RADIUS dictionaries, ORBEM clients. These files pertain to both trusted and non-trusted build variants.		

# Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*, at: <a href="http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html">http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html</a>.

Obtaining Documentation and Submitting a Service Request

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

Obtaining Documentation and Submitting a Service Request

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies are considered un-Controlled copies and the original on-line version should be referred to for latest version.

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at <a href="http://www.cisco.com/go/offices">www.cisco.com/go/offices</a>.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <u>www.cisco.com/go/trademarks</u>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2018 Cisco Systems, Inc. All rights reserved.